


ULINE H-1201

FOLDING HAND TRUCK
175 LB. CAPACITY

1-800-295-5510

uline.com


Para Español, vea página 2.
Pour le français, consulter la page 3.

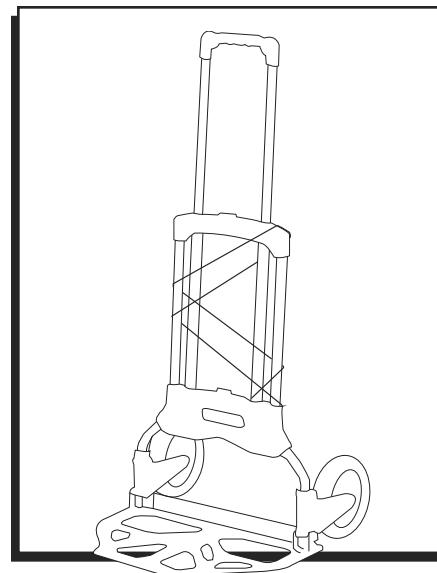

OPERATING INSTRUCTIONS


1. Position the truck as shown. (See Figure 1)

Figure 1

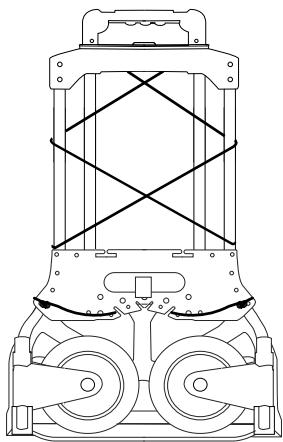


3. By pulling down the noseplate, both wheels will automatically extend out. (See Figure 3)

Figure 3

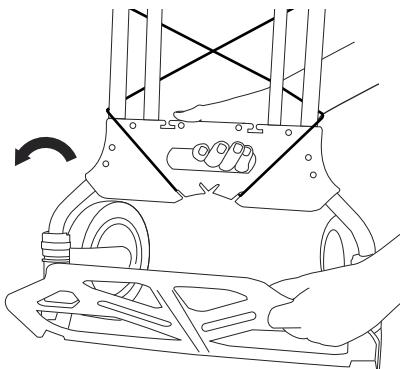


2. To extend handle, press top button and pull up handle. (See Figure 2)

Figure 2

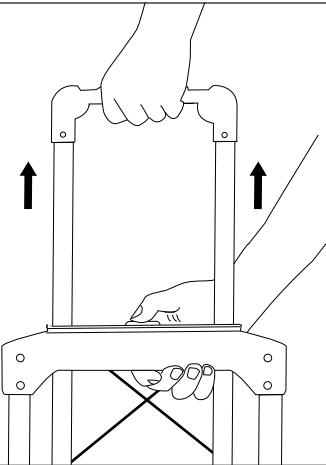

4. Use bungee cord to secure cargo. (See Figure 4)

Figure 4

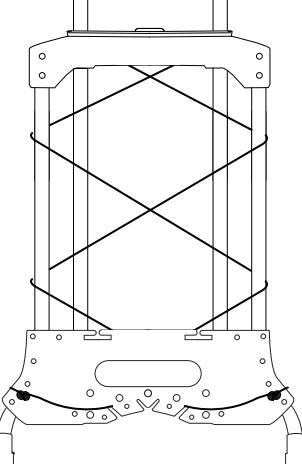


ULINE H-1201

**DIABLITO PLEGABLE
79.37 KG (175 LBS)
DE CAPACIDAD**

800-295-5510


uline.mx

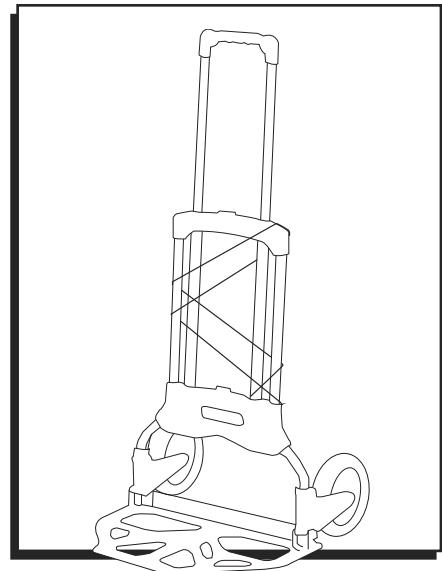

FUNCIONAMIENTO


1. Posicione el diablito como se indica. (Vea Diagrama 1)

Diagrama 1

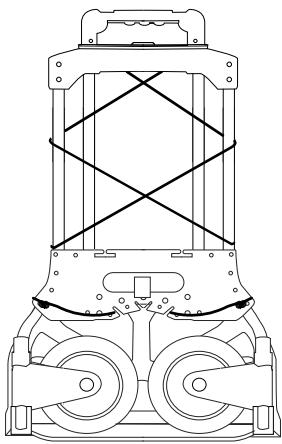


3. Al bajar la placa, ambas llantas se extenderán automáticamente. (Vea Diagrama 3)

Diagrama 3

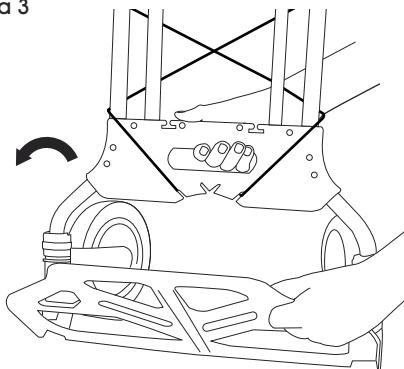


2. Para extender el asa, presione el botón de la parte de arriba y levante el asa. (Vea Diagrama 2)

Diagrama 2

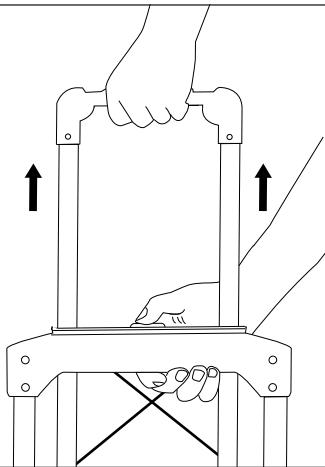

4. Use la cuerda elástica para asegurar la carga. (Vea Diagrama 4)

Diagrama 4

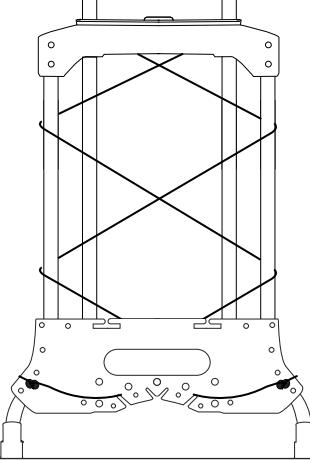


ULINE H-1201

**CHARIOT MANUEL REPLIABLE
CAPACITÉ DE 79 KG (175 LB)**

1 800 295-5510

uline.ca

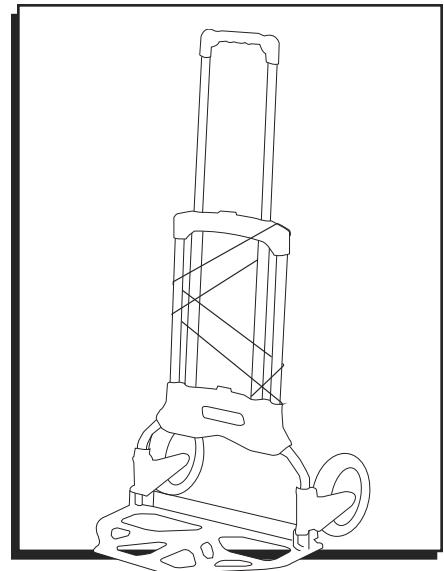

INSTRUCTIONS D'UTILISATION

1. Positionnez le chariot de la façon illustrée.
(Voir Figure 1)
3. L'abaissement de la bavette déploiera automatiquement les deux roues. (Voir Figure 3)

Figure 1


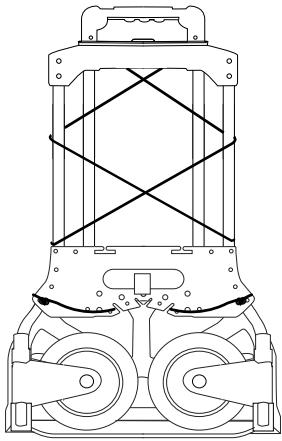


Figure 3

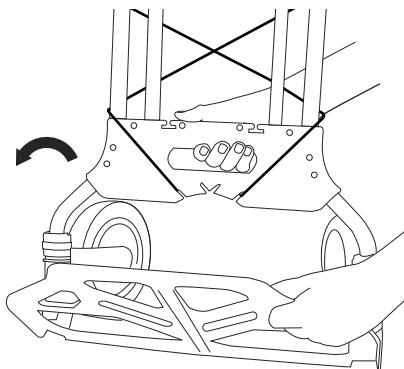

2. Pour déployer la poignée, appuyez sur le bouton supérieur et soulevez la poignée. (Voir Figure 2)
4. Fixez la charge avec un tendeur élastique.
(Voir Figure 4)

Figure 2

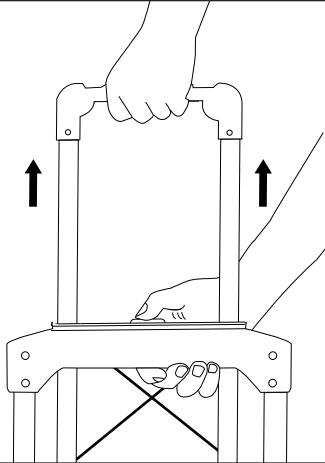


Figure 4

