 


ULINE H-1630
FLOOR CLEANING
MACHINE

1-800-295-5510
uline.com

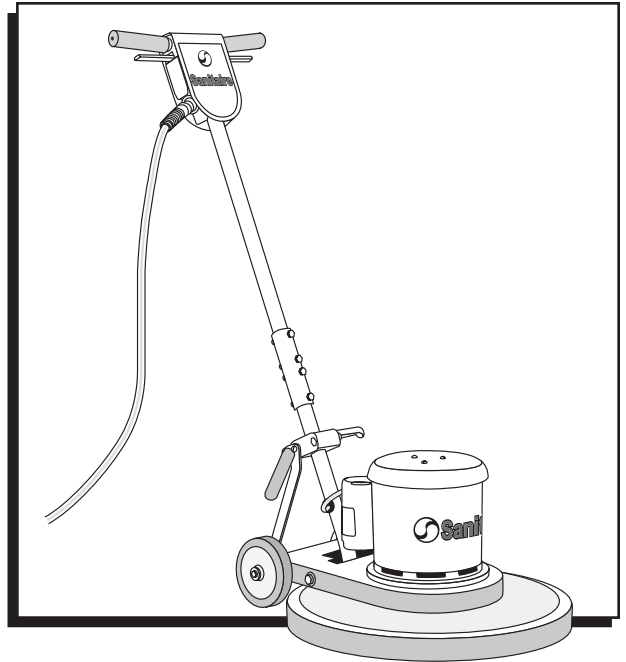

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS FLOOR CLEANING MACHINE.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Your machine is equipped with a safety switch lock and power switch triggers designed for your safety. Do not attempt to bypass or defeat the safety switch lock. Never use any device to lock the power switch triggers in the "ON" position.
- Do not leave the floor machine when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing or changing the brushes or pads.
- Do not allow the machine to be used as a toy. Close attention is necessary when used near children. Do not leave the machine connected to an electrical outlet unattended.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the machine is not working as it should, has been dropped, damaged, or left outdoors, return it to a service center before using.
- Use care to keep the electrical supply cord from contacting the rotating brush or drive block.
- Do not pull, close a door on, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
- Connect to properly grounded (3-wire) outlet only. Refer to Grounding Instructions.
- Do not use extensions cords or outlets with inadequate current-carrying capacity.
- Turn off all controls before unplugging.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or floor machine with wet hands.
- Wind the cord no tighter than is necessary to retain it during storage. Refer to Cord Storage, Page 7.
- Use extra care when working near stairs.
- Do not use in conjunction with flammable or combustible liquids such as gasoline; or use in areas where explosive vapor or dust may be present.
- Store your floor machine indoors in a cool, dry area.
- Keep your work area well lighted.
- Warning – To avoid electrical shock, use indoors only.

SAVE THESE INSTRUCTIONS

GENERAL INFORMATION

Use the floor cleaner to pick up dirt and dust particles. Avoid picking up hard or sharp objects that could damage the floor cleaning machine.



DO NOT OIL the motor or the brush drive. The motor and brush drive are permanently sealed and lubricated.

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

IMPORTANT SAFEGUARDS CONTINUED

DANGER

Improper connection of an equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance. If it will not fit the outlet, have proper outlet installed by a qualified technician.

This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in Figure 1. A temporary adapter which looks like the adapter illustrated in Figure 2 may be used to connect this plug to a two-pole receptacle, as shown, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet, Figure 1, can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

GROUNDED OUTLET BOX



Figure 1

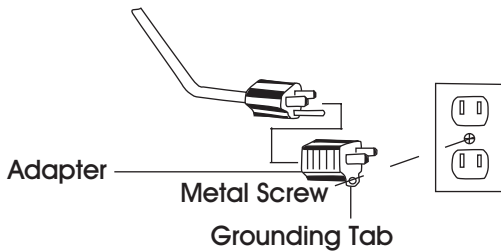 


Figure 2



Figure 3

For floor finishing machines rated 150–250 volts:

If the machine is provided with an attachment plug cap as shown in Figure 3, it is intended for use on a 240 volt (nominal) circuit. No adapter is available for this application.



NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

OPERATION/ACCESSORIES

CHOOSING THE RIGHT BRUSH AND DRIVE BLOCK


Your floor machine is packed complete and ready for use after you install a brush or drive block. (Brushes and pads are not provided with the unit but are available at an additional cost.)

Your floor machine is designed to be used for many different floor care applications. Make sure you use the correct brush or pad for the type of job you want to perform. (Accessories are available from the dealer from whom the floor machine was purchased.)


When ordering brushes or drive blocks, refer to this chart and specify correct brush or block diameter when ordering.

MACHINE SIZE	BRUSH DIAMETER	BLOCK DIAMETER
17"	17"	15"

 
HOW TO REMOVE MACHINE FROM SHIPPING CARTON

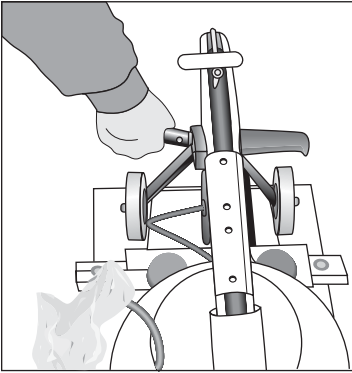

 
1. Lift up on handle to release lock.

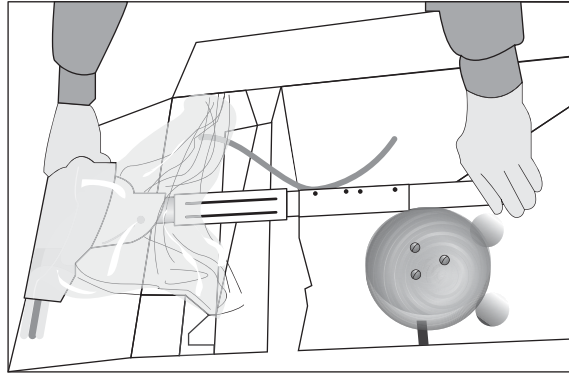

 
2. Move upper handle forward to expose wing nuts and angle bracket.

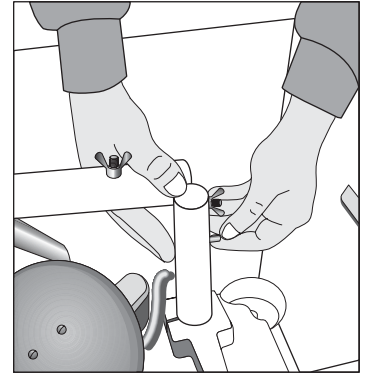

 
3. Remove the wing nuts and bolts from both upper and lower handle. Discard the angle bracket.

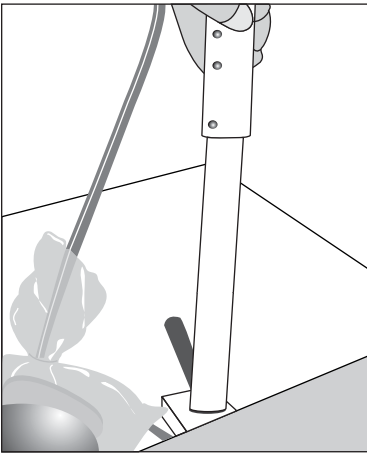

 
4. Lift upper handle and place end-to-end against lower handle, lining up the holes for the bolts. Slide handle sleeve downward until all holes are lined up.

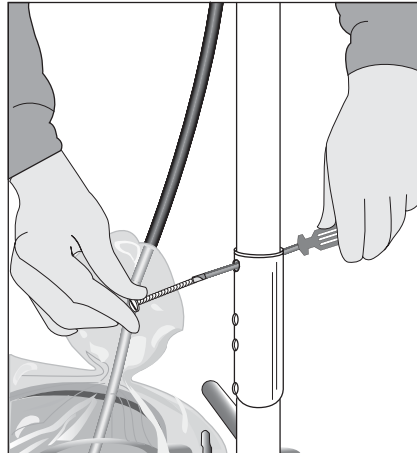

 
5. Use a screwdriver to line up holes and guide bolts through the handle.

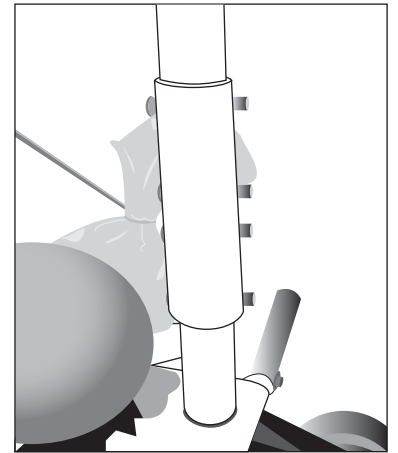

 
6. Handle sleeve and bolts will look like this when they are properly installed.

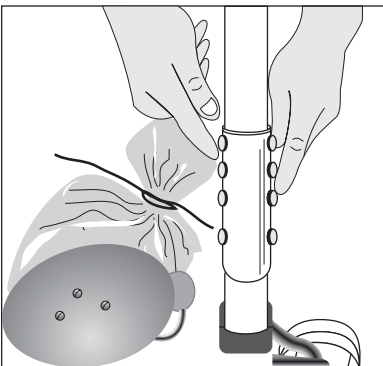

7. Attach lock nuts on bolts and fasten tightly.

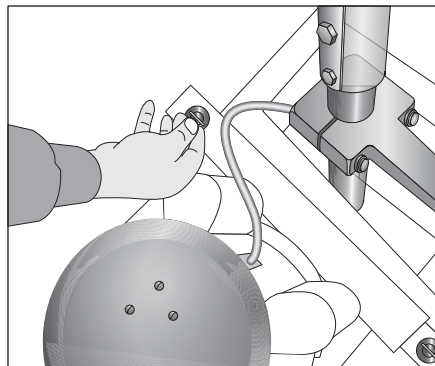 

 8. Remove wing nuts and washers to unfasten shipping carton. Discard shipping carton.

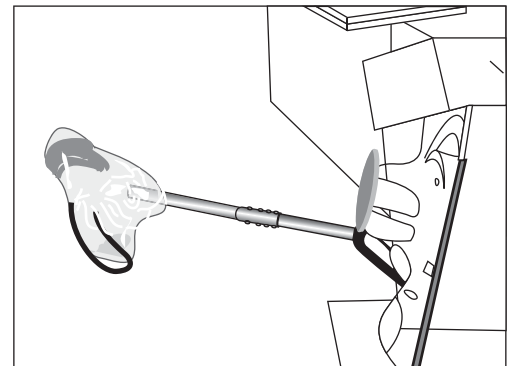

9. Secure the handle release lock. Tip the side of the carton where the wheels are located on its side and roll the machine out of the carton.

BRUSH AND PAD DRIVER INSTALLATION

CAUTION: Disconnect the power cord from the electrical outlet before installing a brush or pad driver.

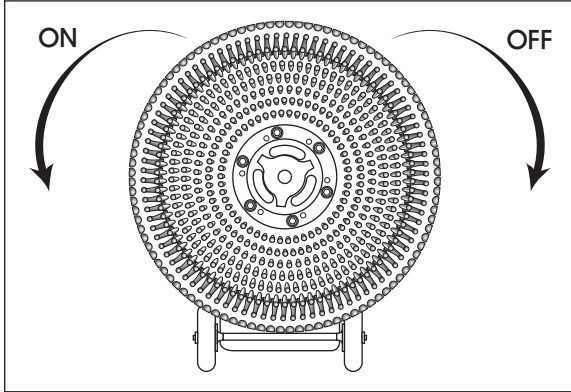 


Figure 4

To install a brush or pad driver, leave the handle in the upright position and tip the machine backwards so it rests on its wheels and upper handle section. (See Figure 4) The brush and pad driver both attach in the same manner: align the cutouts on the inner ring of the brush or pad driver with the tabs on the inside of the ring of the drive hub. (See Figure 5) Push the brush or pad driver firmly in position, then turn it counterclockwise until it locks into place.

To remove, turn the brush or pad driver clockwise until it stops, then lift it off. Note: Always remove the brush or pad driver when the machine is not in use.



CAUTION: Disconnect the power cord from the electrical outlet before installing a brush or pad driver.

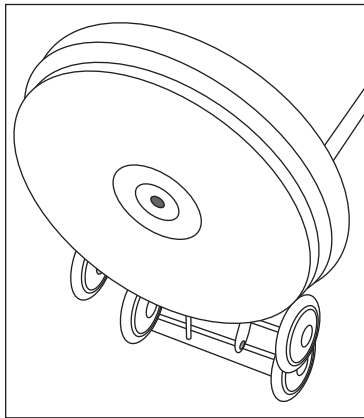 


Figure 5

HANDLE ADJUSTMENT

The handle can be adjusted to any desired work position by simply pushing up on the handle lock. (See Figure 6) Move the handle to the desired position, then firmly push down on the handle lock which will lock the handle in position.

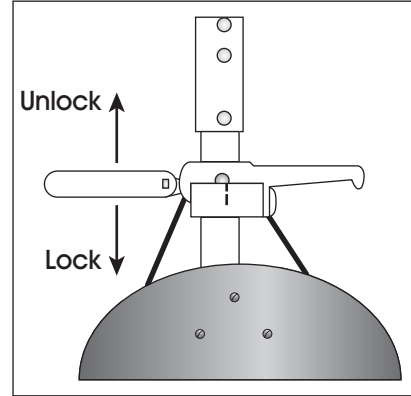 


Figure 6

HANDLE CAM LOCK ADJUSTMENT

With the handle cam lock in the "up" position (unlocked), tighten the adjusting nuts until there is a slight drag when the handle is raised or lowered. The tube should be locked securely when the handle lock is pressed downward. (See Figure 7)

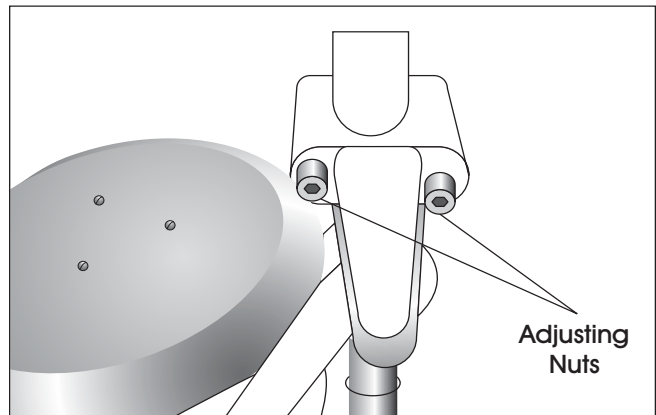 


Figure 7

IMPORTANT SAFEGUARDS CONTINUED

CONTROLS

ON/OFF POWER SWITCH TRIGGERS

The ON/OFF switch is conveniently located in the form of dual triggers underneath the handle grips.

TO TURN THE MACHINE ON

The operating handle must be lowered to the operating position before switching the machine ON. Place both hands firmly on the handle grips with your fingers around the power triggers. Do not apply pressure on the triggers before the safety switch lock is disengaged.

Disengage the safety switch lock by pushing it forward with one thumb. (See Figure 8) Then, while holding the safety switch lock in disengaged position, squeeze the power triggers toward the handle grips and return your thumb to the handle grip.

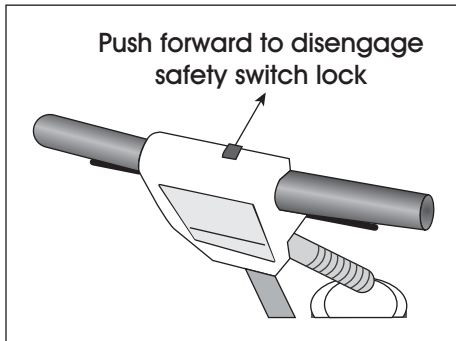 


Figure 8

To stop the machine, simply release the triggers. The safety switch lock will automatically return to the engaged position.

GUIDELINES FOR OPERATION

- Your floor machine is a very sensitive, powerful unit. When in operation, it should be guided gradually and smoothly without sudden or rough motions. You will want to practice with your machine on a smooth surface first until you have experience in operating it.
- For ease of operation, always keep the brush or pad surface level, balanced and flat on the floor at all times.
- Always adjust the operating handle to a comfortable height at which the brush or pad surface is balanced before starting the machine. (see "Handle Adjustment" Page 5)
- Your floor machine will operate differently on various surfaces. For example, there will be much more resistance when the machine is used with a brush on carpeted surfaces than when it is used with a pad on a smooth surface. The operator should be prepared to adjust for these differences.



BEGIN OPERATING THE FLOOR MACHINE WITH THE BRUSH OR PAD SURFACE LEVEL, BALANCED AND FLAT ON THE FLOOR.

- To move the machine to the right, slowly apply slight upward pressure on the handle.
- To move the machine to the left, slowly apply slight downward pressure on the handle.
- To move the machine forward or backward, keep brush or pad flat on the floor and push or pull machine in the desired direction.



DO NOT LET THE MACHINE REST ON THE PAD OR BRUSH FOR AN EXTENDED PERIOD OF TIME. This may alter the shape of the pad or brush which may cause the machine to wobble.

IMPORTANT SAFEGUARDS CONTINUED

CORD STORAGE

When not in use, loosely wind the power cord around the cord storage hook on the handle shaft and both of the handle grips. (See Figure 9)

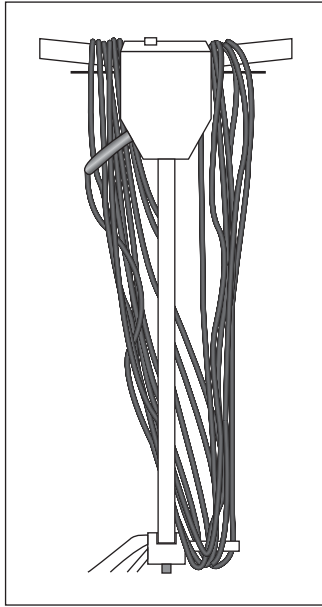 


Figure 9

CLEAN UP AND STORAGE

After being used, your floor machine can be wiped clean with a soft, damp cloth and should be stored in a clean, dry place.

ULINE

1-800-295-5510
uline.com