


**ULINE H-2274**  
**AUTOMATIC PAPER**  
**TOWEL DISPENSER**

1-800-295-5510  
 uline.com

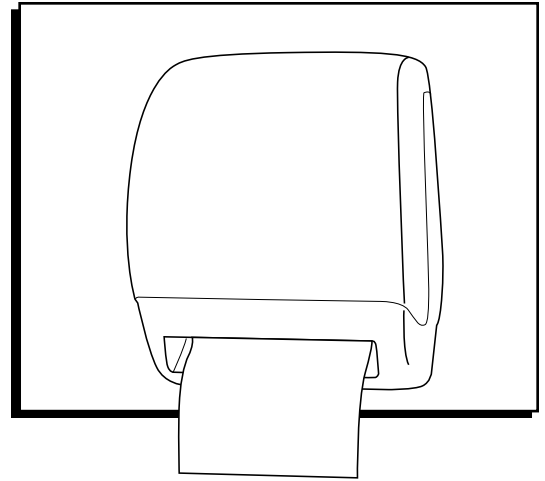

**OPERATION**

**MOUNTING**

Mount dispenser securely on wall with supplied hardware. Bottom edge should be approximately 52 inches above the floor.

**OPENING THE COVER**


Key is taped to back of dispenser.

1. Insert forked end of key into two slots at top of cover.
2. Push down on key and pull forward on cover.

 **Note:** Opening the cover removes battery power from control circuit.

**LOADING BATTERIES**

1. Open cover. Push left-hand tab on battery compartment inward and lift up. (See Figure 1)

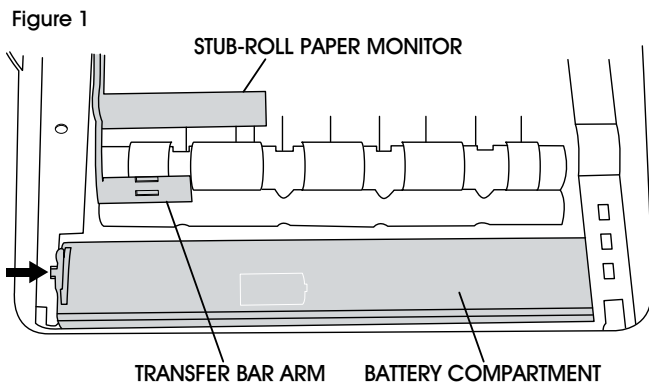


2. Insert four "D"-size alkaline batteries with "LR20" designation. (Battery orientation is embossed on compartment.)

 **Note:** We do not recommend using rechargeable "D"-size batteries.

**LOADING PAPER ROLL**


1. Open cover and load paper roll with paper "tail" unwinding from back of roll. Place paper "tail" under transfer bar arm. (See Figure 2, A)
2. Close cover and move hand under unit to activate dispense. Unit initially dispenses at factory-set control settings. (See Figure 2, B)

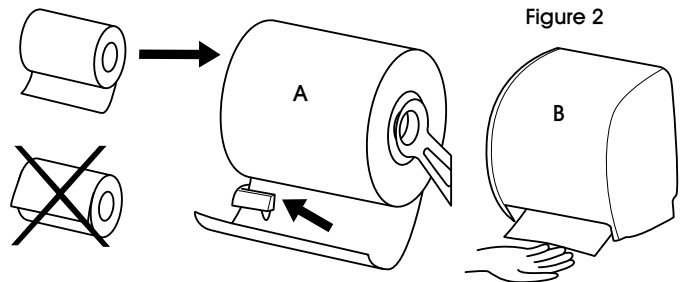

**LOADING STUB ROLL TRANSFER**

To use this feature, the 3-inch or smaller stub roll must be transferred from upper roll holders to stub roll holders in rear, lower section. Stub roll paper monitor must be positioned over stub roll paper "tail."

1. Insert new paper roll in upper roll holders. Place "tail" of new paper roll on top of stub roll paper monitor and under transfer bar arm. (See Figure 3, A-C)
2. Paper from new roll will automatically feed when stub roll of paper runs out.

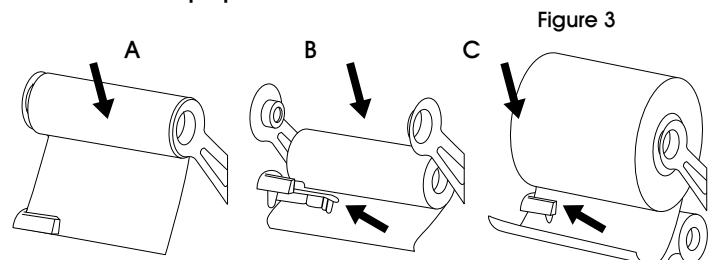

## OPERATION CONTINUED

### CUSTOMIZING CONTROL SETTINGS

Dispensing, delay and paper length can be customized using three control setting switches behind cover in right inside corner.

1. DISPENSE (Switch #1): Upper Position = maximum paper saving. Center Position = normal (factory setting). Lower Position = minimum paper saving.
2. DELAY (Switch #2): Upper Position = 3 sec. delay. Center Position = 2 sec. delay. Lower Position = 1 sec. delay (factory setting).

3. PAPER LENGTH (Switch #3): Upper Position = 15" length. Center Position = 12" length (factory setting). Lower Position = 9" length.

### INDICATOR LIGHT

When cover is closed and unit powers up, LED indicator at right, top corner of paper chute will flash once. After each dispense, Indicator will flash once to indicate unit is ready for next use. LED will flash continuously every 1.5 seconds when batteries need replacement.

## TROUBLESHOOTING

OPERATING ISSUE	CAUSES	RECOMMENDATIONS
Unit will not dispense.	Cover is not closed and secured.  LED light for batteries is not flashing.  Paper is not loaded properly.	Ensure cover is closed and securely latched.  Check LED light for battery replacement signal. Make sure batteries are installed and oriented properly.  Remove and re-install batteries.  Confirm that paper is loaded properly and roll turns freely. Check paper path for obstructions.