


ULINE H-2813 ICE MELT SPREADER

1-800-295-5510
uline.com

TOOL NEEDED



Pliers

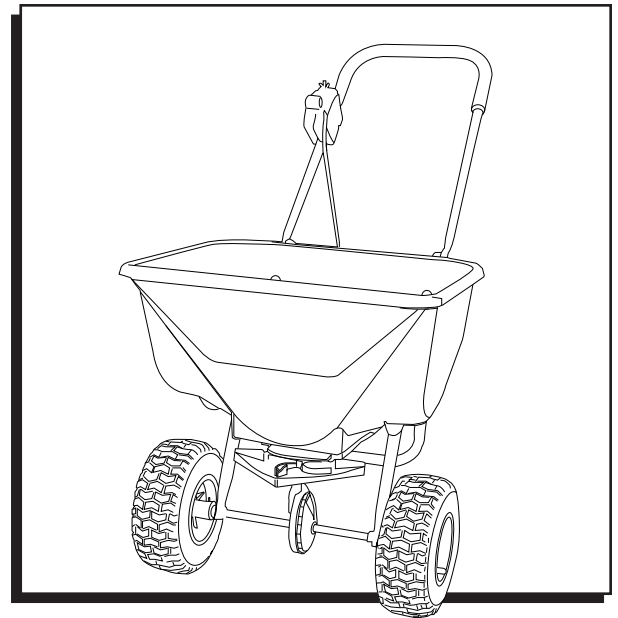

INSTRUCTIONS




NOTE: Read all directions prior to assembly. This spreader comes partially assembled. Control rod installation will require pliers.

- Spreader is designed to be pushed at three miles per hour, which is a brisk walking speed. Slower or faster speeds will change the spread patterns.
- Prior to first use, coat all metal parts (inside and outside) with a spray lubricant to help prevent corrosion.
- Clean spreader thoroughly after each use. Wash with clean water and dry thoroughly. Spray a light coating of oil on all metal parts (and inside all of the tubing) to help prevent corrosion.
- Gears are permanently lubricated at the factory. Do not open the gearbox or dirt may enter.

1. Remove spreader from carton and pull handle into position shown below. Tighten wing nuts to secure. (See Figure 1)

Figure 1

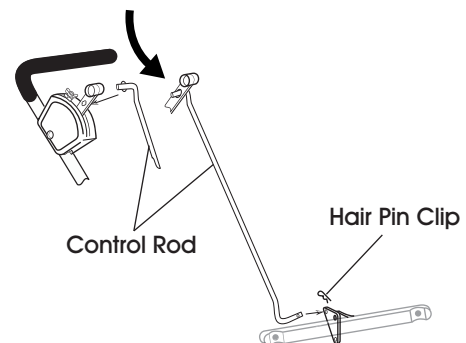

2. Install control rod into handle as shown above.
3. Rotate forward.
4. Insert control rod into pivot and secure with hair pin clip.
5. Assembly is complete. Set the stop on the control assembly for the desired setting and your spreader is ready to operate.