
UINI H-991 MONARCH 1131 ONE LINE LABEL GUN

1-800-295-5510 uline.com

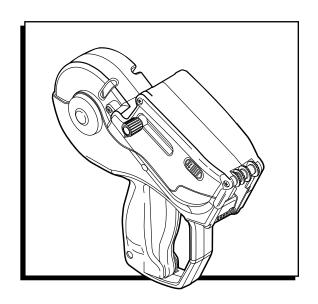


INSTRUCTIONS

CHANGING THE INK ROLLER


1. Pull the latches back and swing the cover open completely. You should hear a click.



NOTE: Do not force the cover past the click position.

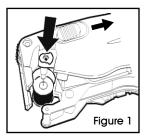


2. Hold the labeler sideways over a trash can while pushing the button to release the ink roller. (See Figure 1)

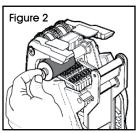

- Hold the new ink roller by 3. the stem. (See Figure 2)
- 4. Slide it onto the post, snapping it into place. (See Figure 2)
- 5. Close the cover completely.


SETTING PRINT CHARACTERS

Pull the knob until the indicators are on the desired band.

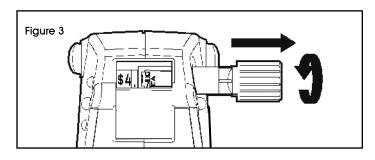

- 2. Turn the knob until the desired character appears black on a white background between the indicators. To print a blank, select the blank space for that band. (See Figure 3)
- 3. Repeat steps 1-2 for each band.
- 4. Push in the knob when you are done.

LOADING LABELS

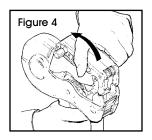

Pull the latches back and 1. swing the cover open completely. You should hear a click. (See Figure 4)




NOTE: Do not force the cover past the click position.

- 2. For loading a new roll of labels, tear off and discard the first 10 inches of label and liner.
- 3. To prevent jamming, peel the first 12 labels from liner and discard.

PAGE 1 OF 3 0612 IH-991

INSTRUCTIONS CONTINUED

LOADING LABELS CONTINUED

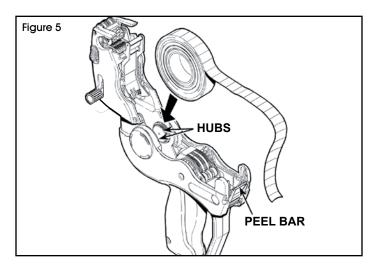


4. Place the label roll between the hubs and click into place. (See Figure 5)




NOTE: Do not thread label strip through any rollers.

- Drape the supply across the labeler and center it over the peel bar. The supply should hang out 5-6 inches past the peel bar.
- 6. Close the cover.
- Squeeze and hold the trigger while feeding the label strip under the roller and into the large slot above the arrow until it stops/hits the back. (See Figure 6)
- 8. Hold the strip in place and squeeze the trigger eight times or until the label strip feeds through the rear exit.
- 9. Remove any loose labels.

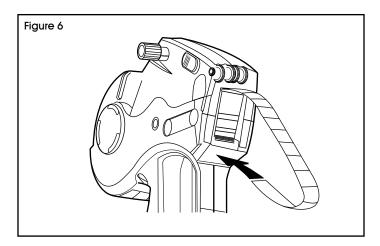


CLEARING LABEL JAMS, CLEANING AND LUBRICATION

1. Open the cover and remove the label roll.

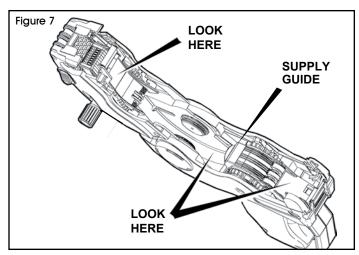

- 2. Remove any loose labels from the inside of the labeler. (See Figure 7)
- 3. Pull up on the supply guide to expose the backing paper path and remove loose labels. (See Figure 8)
- 4. Snap the supply guide back into place.

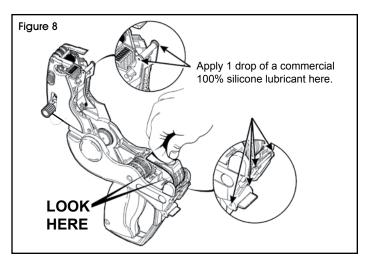

- 5. Use a commercial adhesive solvent to clean adhesive buildup.
- 6. Remove the ink roller to expose the print bands and brush them off with a toothbrush.
- 7. Reload, then close the cover.

PAGE 2 OF 3 0612 IH-991

CHARACTER KEY

Regular Font (5 MM)

KNOB POSITION							
1	2	3	4	5	6	7	8
1	1				1	1	LB
2	2	1	1	1	2	2	EACH
3	3	2	2	2	3	3	DOZ YARD FOOT EACH
4	4	3	3	3	4	4	YARD
5	5	4	4	4	5	5	
6	6	5	5	5	6	6	PAIR
7	7	6	6	6	7	7	PKG
8	8	7	7	7	8	8	BOX
9	9	8	8	8	9	9	CASE
0	0	9	9	9	0	0	SET
\$	\$	0	0	0	<u>¥</u>	¥ +	OFF
FOR	전	\$	/	/	EACH +TX	9FO	+TX +DEP
/	/	/	_	_	¢	¢	¥

NOT INDICATIVE OF **FONT SIZE AND STYLE**