



## GENERAL INFORMATION

 **NOTE:** Follow these instructions accurately.

- When the stripes touch the lading, the bag is properly installed. (See Figure 1)
- If the ends of the stripes show, the void is too large. (See Figure 2)

**NARROW THE VOID WHENEVER POSSIBLE BY:**

- Using honeycomb panels (see diagram below)
- Turning the pallets (pinwheel) where air bags are applied

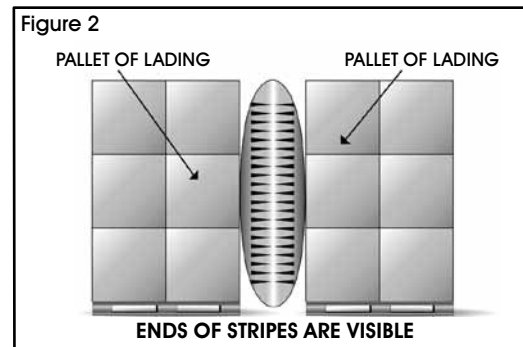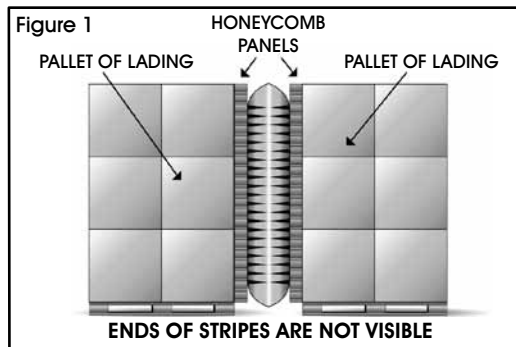

## INSTRUCTIONS

1. Load first units tightly against trailer bulkhead. (See Figure 3A)
2. Load each successive row **TIGHTLY** against the previous row. (See Figure 3B)
3. Use only the ULINE inflator kit and inflator tips.



**IMPORTANT:** Read operating and safety instructions before using inflator kit.  
**IMPORTANT:** Take your thumb off the inflator lever for proper pressure reading. (See Figure 4)

4. Position the air bag approximately 1" above the floor to keep it from rubbing in transit and smooth all wrinkles. (See Figure 5)



**CAUTION!** Exceeding the maximum stated air pressure may cause the air bag to burst.  
**NEVER** inflate the air bags over 3 psi.

