
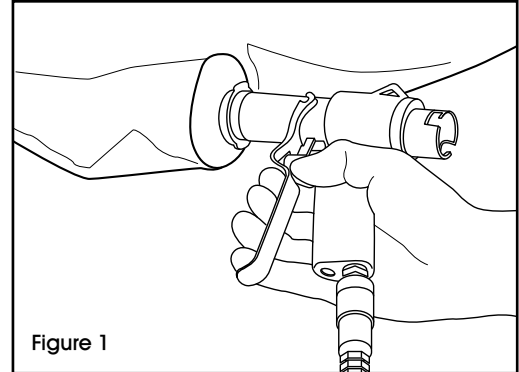


**INFLATABLE VINYL  
DUNNAGE BAGS****INSTRUCTIONS****INFLATING THE BAG**

1. Open valve cap on bag and insert inflator tip into valve. (See Figure 1)
2. Attach air hose to inflator and squeeze trigger to inflate. When proper pressure is reached, excess air will escape through rear of inflator.
3. Remove inflator from valve and replace valve cap.

 **NOTE:** Continue to squeeze trigger while removing inflator.

**DEFLATING THE BAG**

1. Open valve cap on bag. (See Figure 2)
2. Depress valve with finger and turn counterclockwise to lock open. (See Figure 3)
3. Disconnect air hose from inflator. Insert rear of inflator into airbag and squeeze trigger to exhaust air from bag. (See Figure 4)

