


**INDUSTRIAL  
ILLUMINATED MAGNIFIER****INSTALLATION**


1. Locate and remove clamp from packaging.
2. Use the screw mechanism to open the clamp to the thickness of desired mounting surface.

3. Slide clamp onto desired mounting surface and use screw mechanism to tighten. (See Figure 1)

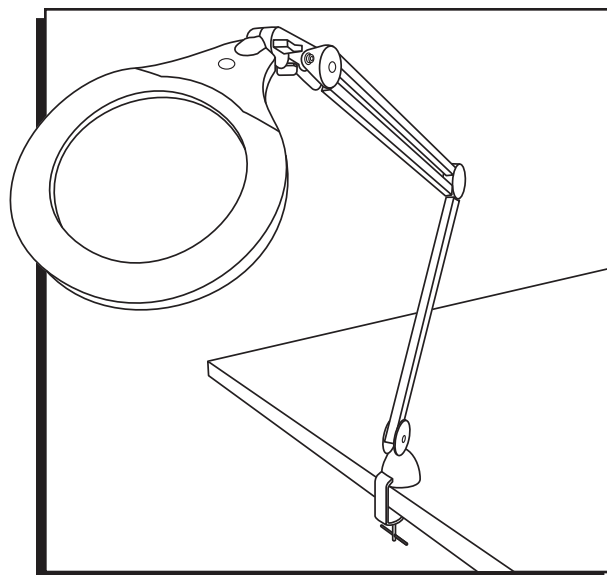


**NOTE:** Clamp must be tightened completely before attaching lamp.

4. Remove lamp from packaging.

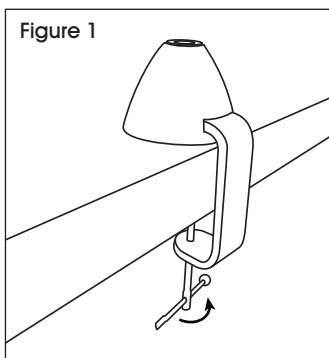


**CAUTION!** Use both hands to hold lamp arm closed when removing from packaging. Open arm slowly and carefully.

5. Lower stem of lamp into the hole in the clamp. (See Figure 2)
6. Insert plug into properly rated 120V outlet.

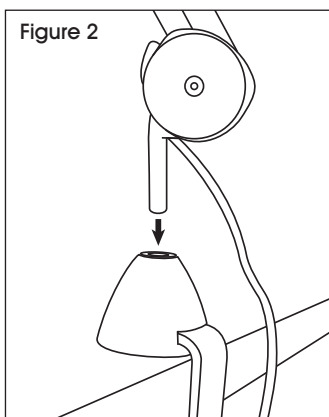

7. Adjust magnifier head to desired position and tighten adjustment knobs to secure the position on each axis. (See Figure 3)

Figure 3

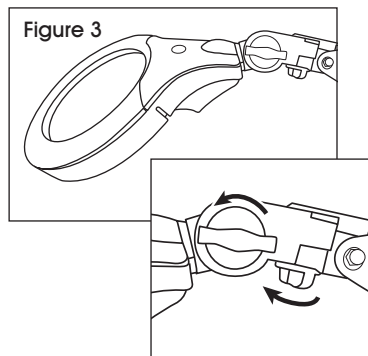

8. Remove magnifier cover and toggle the switch to activate the light.




**NOTE:** When not in use, replace magnifier cover to prevent fire hazard.

**REPLACEMENT BULB (H-2017 – SOLD SEPARATELY)**


1. Turn off and unplug H-2015 before replacing the bulb.
2. Remove lamp from table clamp and lay on a clean, flat surface with the underside of the magnifier head facing up.
3. Use a Phillips head screwdriver to remove the four screws on the underside of the magnifier head. (See Figure 4)

Figure 4

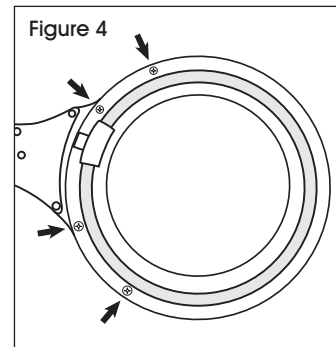


## INSTALLATION CONTINUED

4. Pull plastic tab away from magnifier head to remove the plastic light covering. (See Figure 5)

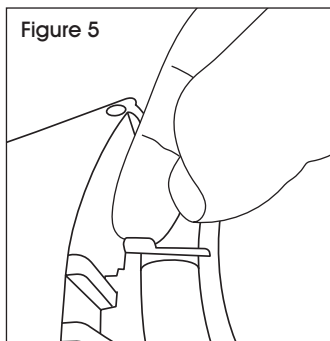

5. Gently pull old bulb off the 4 pin connector and replace with a new H-2017 replacement bulb. (See Figure 6)

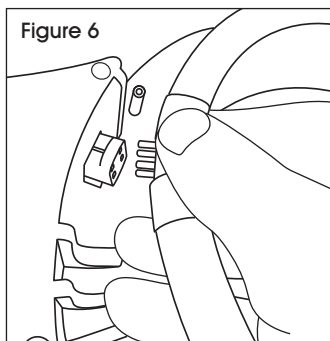


**NOTE:** Replace only with H-2017 (sold separately). Other bulbs may do damage to the lamp function of the magnifier.

6. Replace plastic light covering by reversing steps 3 and 4. Reset lamp into clamp on work surface.

### OPTIONAL LENS (H-2016 – SOLD SEPARATELY)

1. Fix the magnifier head in a position parallel to the ground.
2. Gently pull the tabs on the front of the magnifier away from the lens and upward to release the lens retaining ring. (See Figure 7)

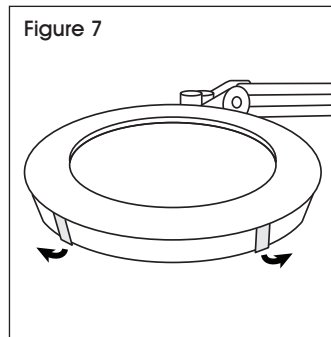

3. Lift the lens out of the magnifier head and carefully store to avoid damage. (See Figure 8)
4. Carefully lower optional replacement lens into magnifier head.
5. Replace lens retaining ring.

