


ULINE H-6672 LASER BARCODE SCANNER

1-800-295-5510
uline.com


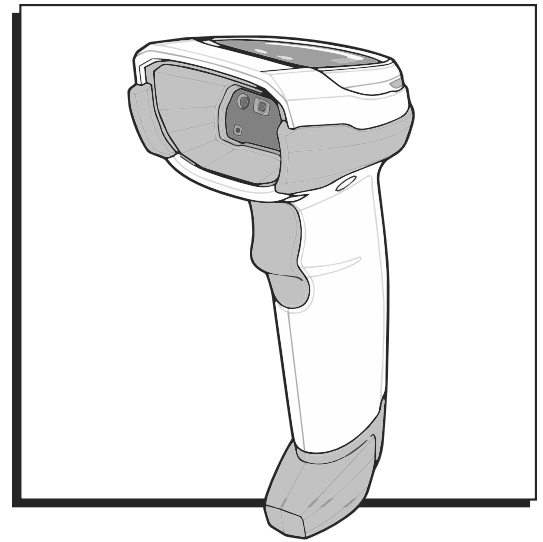


INSTRUCTIONS

1. Attach cord to scanner unit. (See Figure 1)
2. Connect other end to host system. (See Figure 2)
3. Scan the appropriate barcode from original Quick Start Guide included in the box.




NOTE: Quick Start Guide has many barcode options. Choose the option that is best for your intended application.

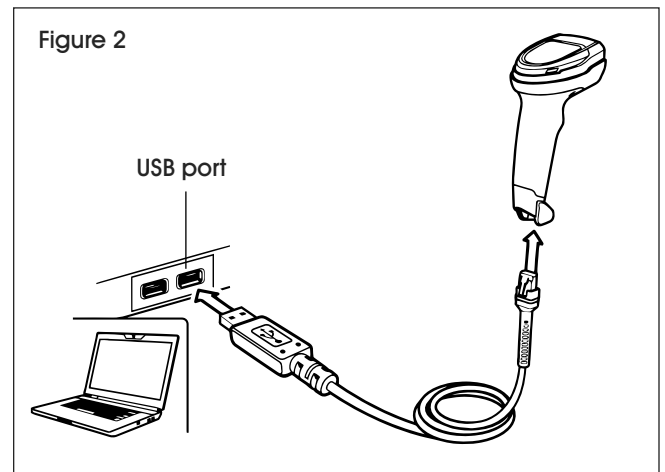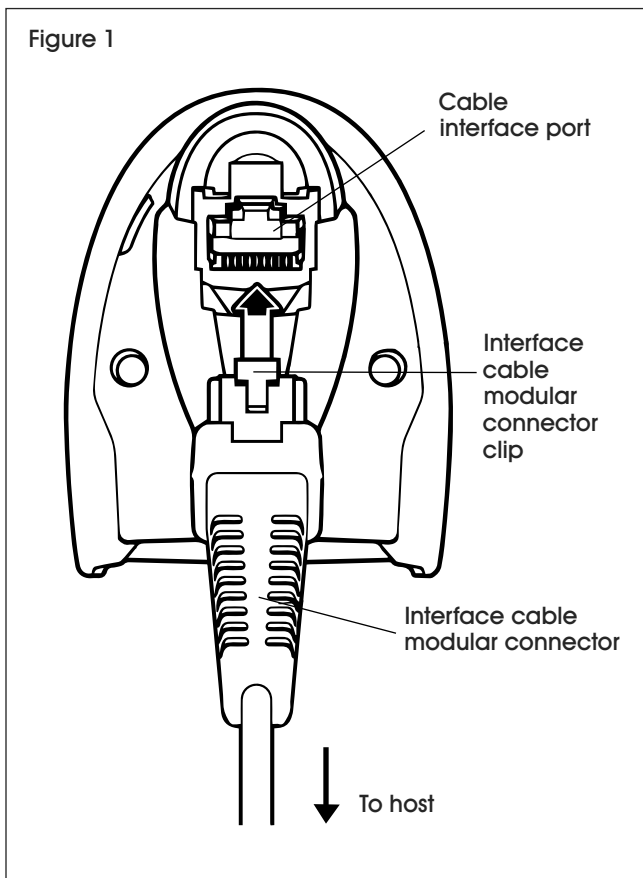

ULINE H-6672

ESCÁNER LÁSER DE CÓDIGO DE BARRAS

800-295-5510
uline.mx


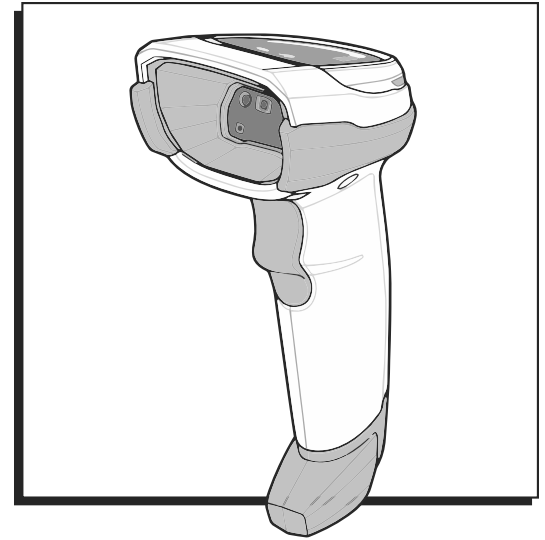


INSTRUCCIONES

1. Conecte el cable a la unidad del escáner. (Vea Diagrama 1)
2. Conecte el otro extremo al puerto del sistema. (Vea Diagrama 2)
3. Escanee el código de barras correcto de la Guía de Inicio Rápido original que se incluye en la caja.



NOTA: La Guía de Inicio Rápido tiene muchas opciones de código de barras. Elija la opción que sea la más adecuada para sus intenciones de uso.

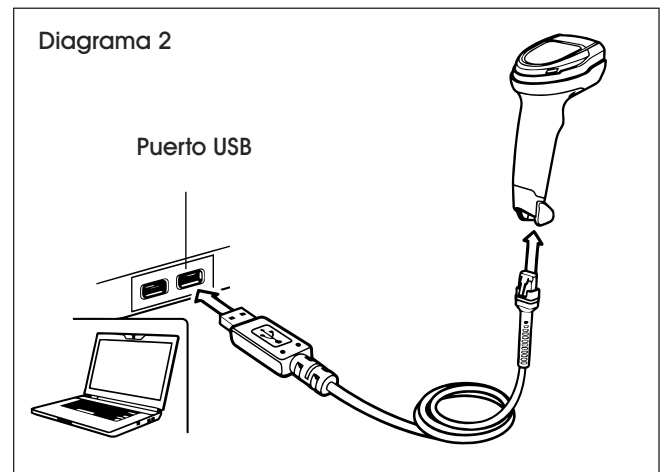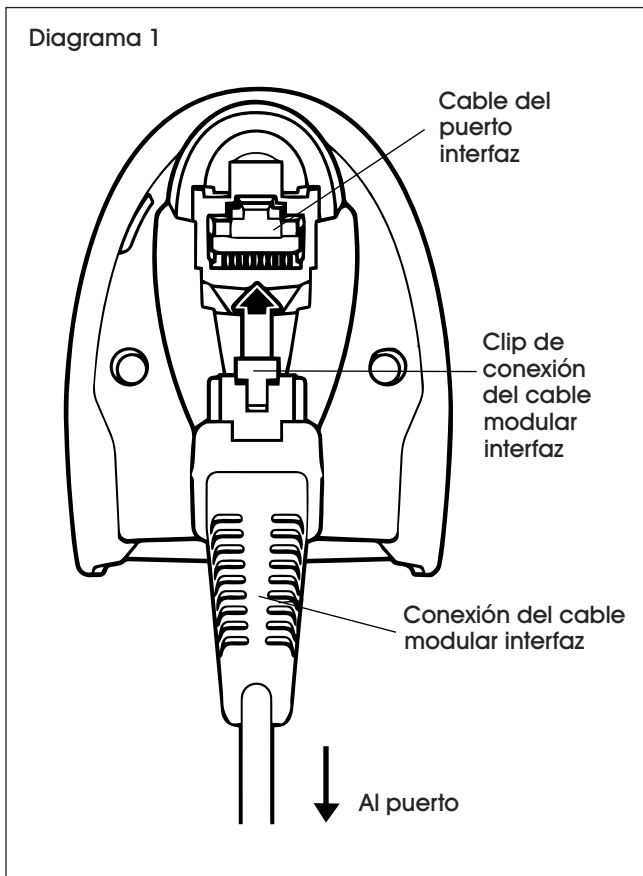


ULINE H-6672

SCANNEUR LASER DE CODE À BARRES

1-800-295-5510

uline.ca

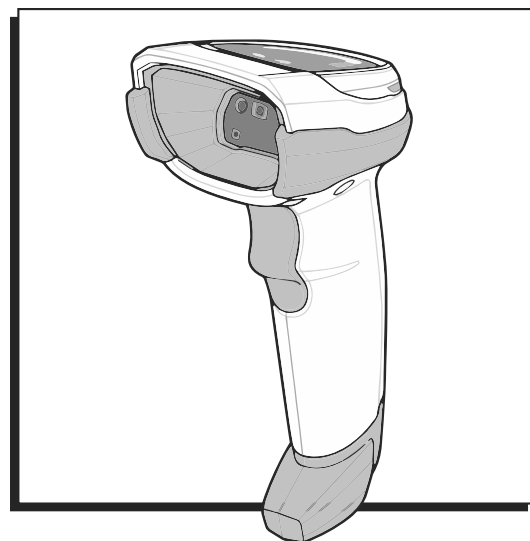

INSTRUCTIONS

1. Branchez le fil au scanner. (Voir Figure 1)
2. Connectez l'autre extrémité au système hôte. (Voir Figure 2)
3. Scannez le code à barres approprié se trouvant sur le Guide original de démarrage rapide fourni dans la boîte.



REMARQUE : Le Guide de démarrage rapide possède plusieurs options de codes à barres. Sélectionnez celle qui convient le mieux à l'usage souhaité.

