

ULINE H-5439, H-5440 STRADDLE STACKER

1-800-295-5510
uline.com

TOOLS NEEDED



Step Ladder
(for H-5439)




Rolling Ladder
(for H-5440)



Slings



Forklift
Required

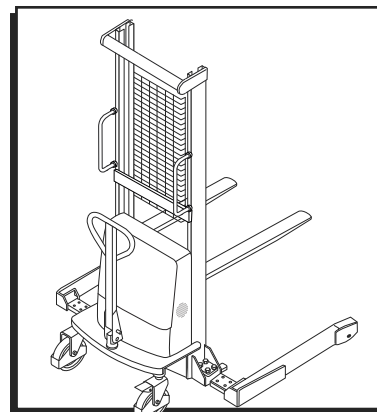

SPECIFICATIONS

MODEL #	LIFT HEIGHT	OVERALL SHIPPING DIMENSIONS (H x W)
H-5439	63"	83 x 55"
H-5440	137"	97 x 55"

REMOVAL INSTRUCTIONS




NOTE: The straddle stacker ships to customer on a pallet protected by cardboard and stretch wrap.

1. Inspect slings prior to use to ensure they are in good condition.




NOTE: Slings are sold separately (Uline model #s S-17882, S-17883, S-17884 and S-17885).


2. Loop slings around lifting bar on top of stacker using a step ladder or rolling ladder. (See Figure 1)

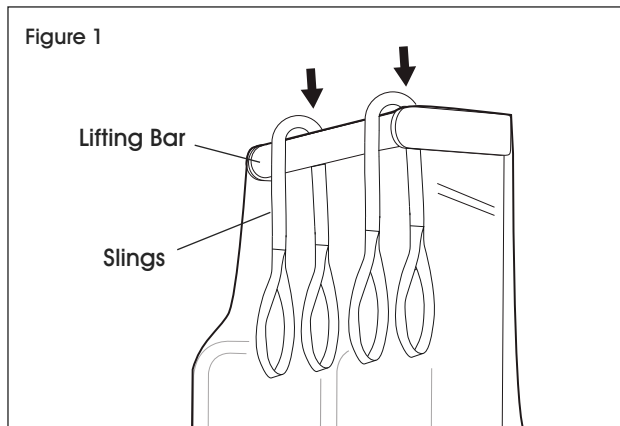

3. Raise forks above height of lifting bar. (See Figure 2)

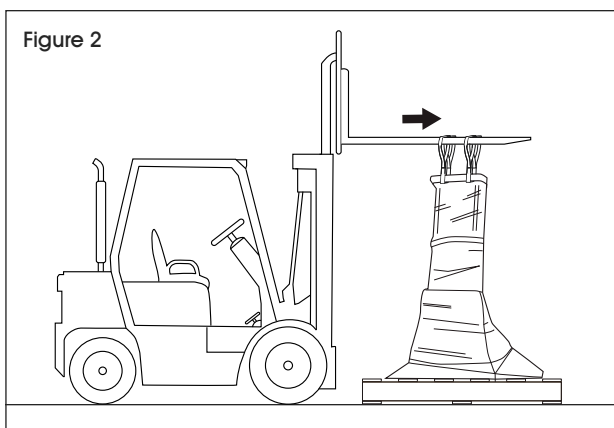


4. Slide ends of slings around each fork. (See Figure 3)

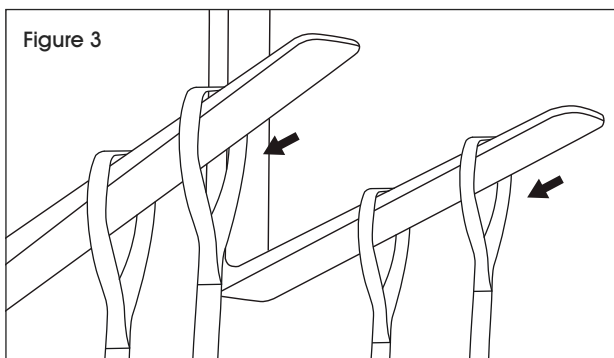

REMOVAL INSTRUCTIONS CONTINUED

5. Move forklift forward so slings are at least 1/3 onto forks. (See Figure 4)

Figure 4

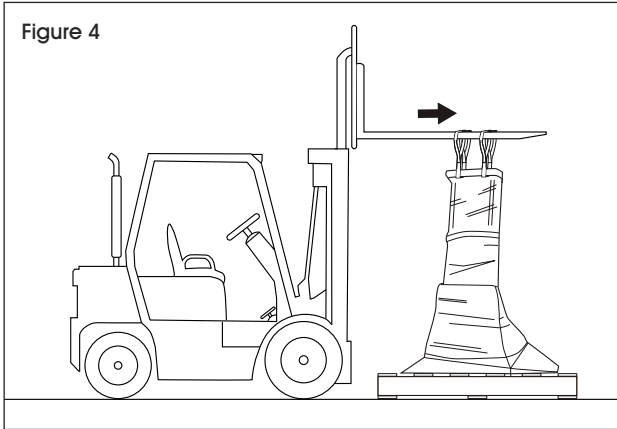


6. Tilt forks back and raise forks until all slack is removed from slings. Lift stacker 6" off pallet. (See Figure 5)



NOTE: Ensure wheel brake is set and all helpers and objects are out of the forklift's way.

Figure 5

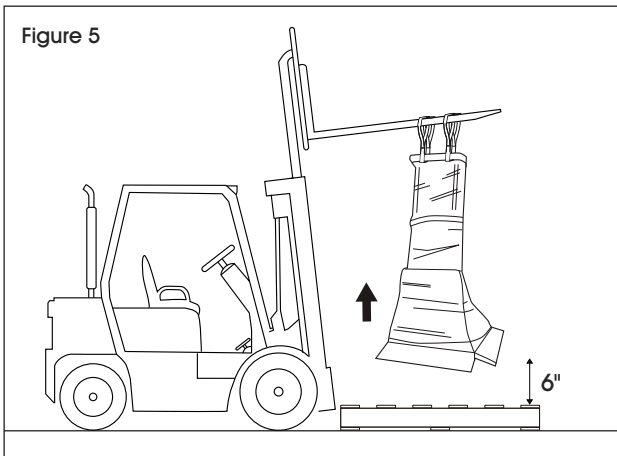


7. Move forklift backward away from pallet to an open area.



CAUTION! Do not stand next to forklift outriggers.

Figure 6

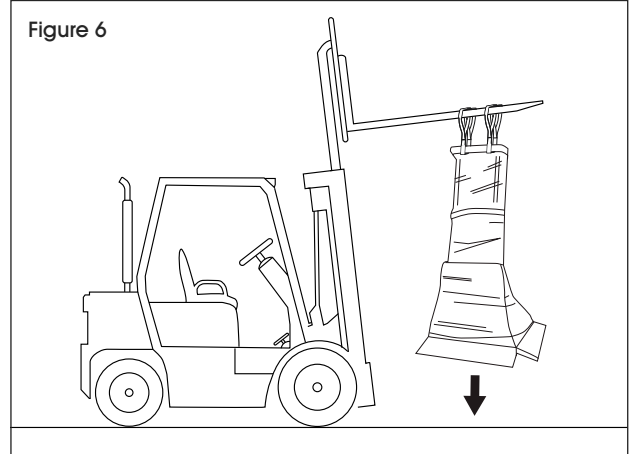

8. Lower forks and set stacker carefully on level ground. (See Figure 6)
9. Carefully remove slings from top of stacker and remove packing materials before using.

ULINE

1-800-295-5510
uline.com