

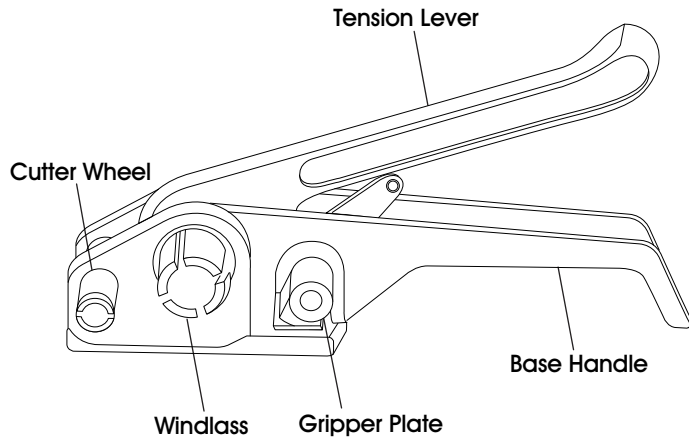


ULINE H-573 DELUXE STRAPPING TENSIONER

1-800-295-5510
uline.com

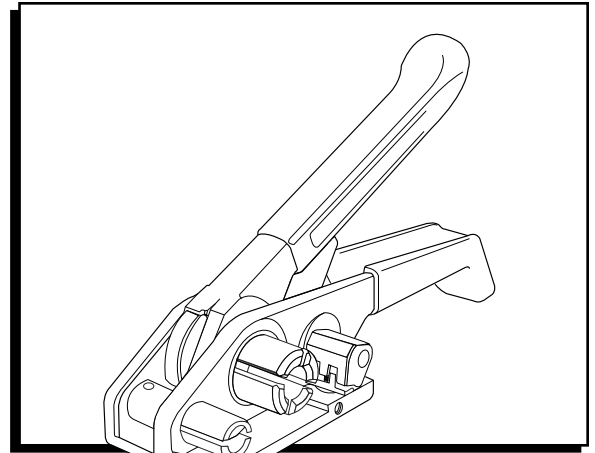


OPERATION

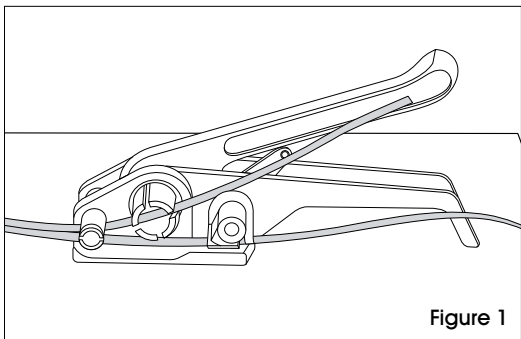

THREADING TENSIONER (See Figure 1)

1. Wrap both ends of strapping around product.
2. Squeeze handle and base together.
3. Insert the shorter end of strapping under the gripper plate and cutter wheel leaving approximately 5" of strapping off the front end.
4. Release handle and base.
5. Feed the other end through the cutter wheel and up through the windlass.
6. Pull strapping as tight as possible.

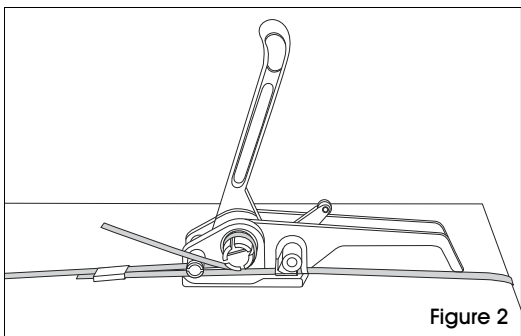

TENSIONING (See Figure 2)

1. Move tension lever forward and back to begin tensioning.
2. Continue back and forth motion until strapping has reached desired tension.

SEALING

1. Seal should be placed open side down on top of both ends of strapping.
2. Close nose of sealer around seal.
3. Crimp tightly around strapping.

REMOVING EXCESS

1. Squeeze handle and base together to cut strapping.
2. Slide tool off to the right.

MAINTENANCE

Tools need to be cleaned and maintained periodically with a steel brush or dry compressed air. Lubricate all moving parts with light machine oil.