



## INSTRUCTIONS

### PROPERLY LOADING DISPENSER


1. Remove plastic bag. (See Figure 1)

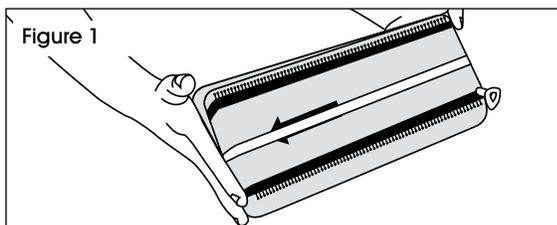


2. Prop dispenser up to load. (See Figure 2)

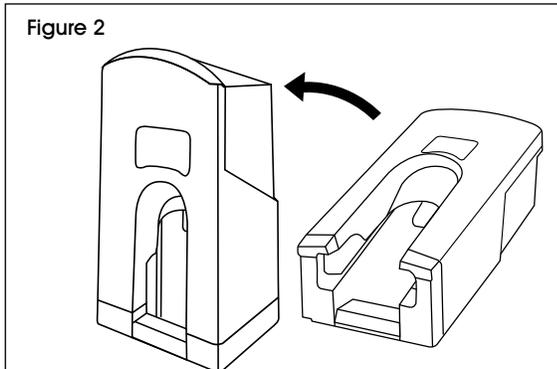



3. Align the blue clips with the slots of the track with the arrow pointing downward. Make sure all clips enter the slots with the round tip on the outside of the track. (See Figures 3-4)

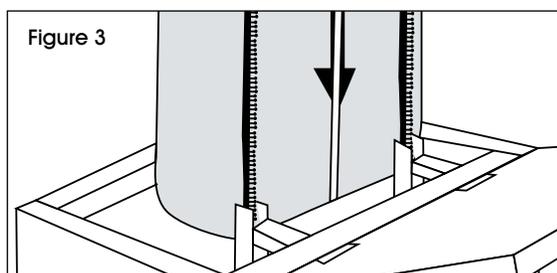

4. Push down and forward (keeping the cartridge at a 90° angle), ensuring all blue clips enter the track. Use both hands if necessary. (See Figure 4)

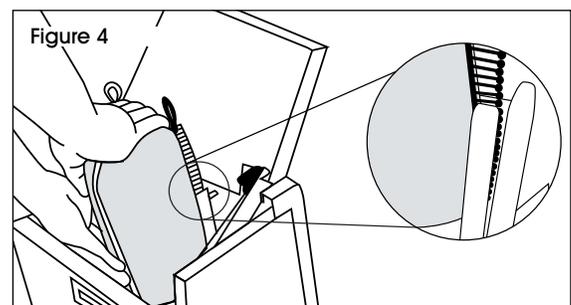

5. Once the cartridge is 3-4 inches below top of tracks, remove the yellow ribbon and cardboard. (See Figures 5-6)

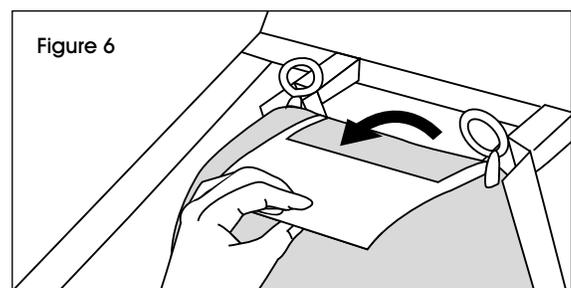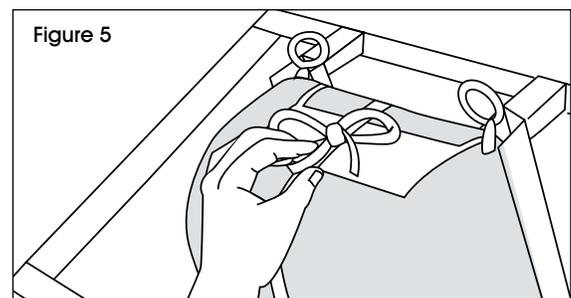


## INSTRUCTIONS CONTINUED


- Place one hand on top of cartridge. While holding down the shoe covers, remove the orange tabs, one at a time. (See Figure 7)



- Push cartridge down until it is pressed against the steel stopper. (See Figure 8)

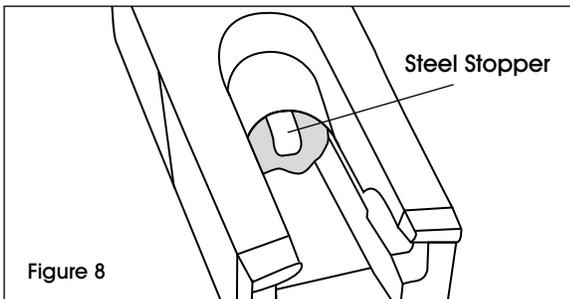


- Pull the lip of the shoe cover out, extending both sides and pull it forward until it connects to the locking mechanism. It is now properly loaded and ready for use. (See Figure 9)

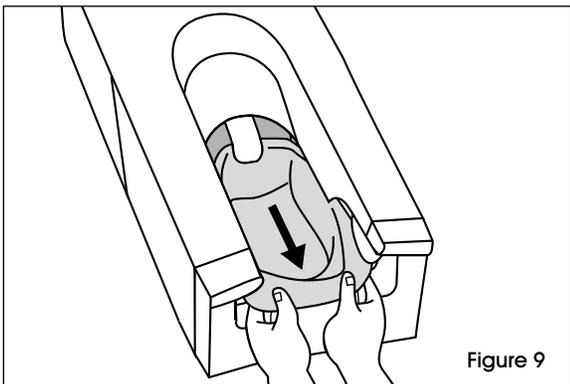



### PUTTING SHOE COVERS ON

- Step in heel first, keeping elastic level with top of shoe. (See Figure 10)

 **NOTE:** Do not press down to the floor with your heel, or at all. Keep shoe 3-4" above, and parallel to the ground.

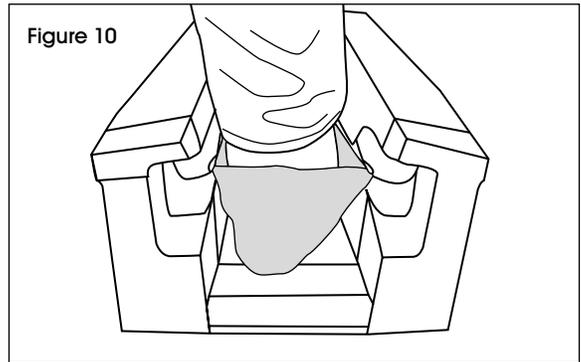

- Slowly pull back until cover stretches beyond tip of shoe. Then tilt toe down below the elastic of the shoe cover. (See Figure 11)
- Pull back until shoe cover is released. (See Figure 12)

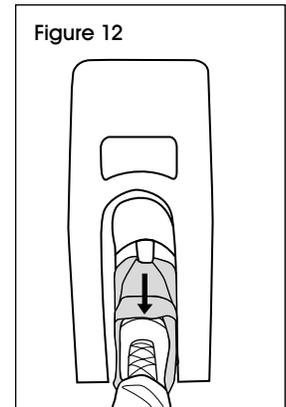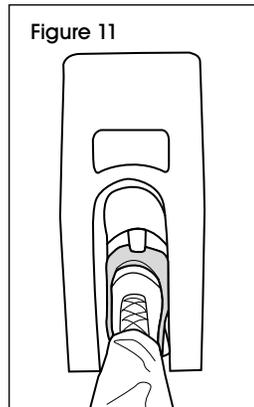

- Repeat on other foot.