


1-800-295-5510 uline.com




NOTE: H-1074 optional casters can be ordered separately.

PARTS 00000 00000 3/8" Washer x 10 $\bigcirc\bigcirc\bigcirc\bigcirc\bigcirc\bigcirc\bigcirc\bigcirc$ \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc Platform x 1 Carton Divider x 5 3/8" Lock Nut x 10 H-1074 Optional Casters x 4


ASSEMBLY INSTRUCTIONS

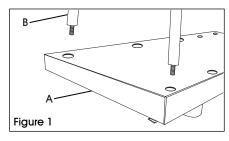


1. Insert carton dividers (B) into holes along edge of platform (A). (See Figure 1)

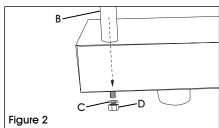

2. Attach washer (C) and lock nut (D) to threaded end of carton dividers (B). (See Figure 2)

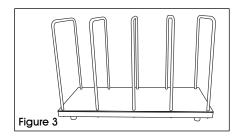

3. Repeat steps 2 and 3 to add remaining carton dividers (B). (See Figure 3)

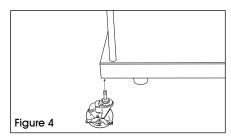

4. Optional Caster are inserted by pushing into hole of Caster Socket underneath Platform along the four corners. See Image 4.