


# ULINE H-1770, H-1771 SHELF BIN ORGANIZER


1-800-295-5510  
uline.com

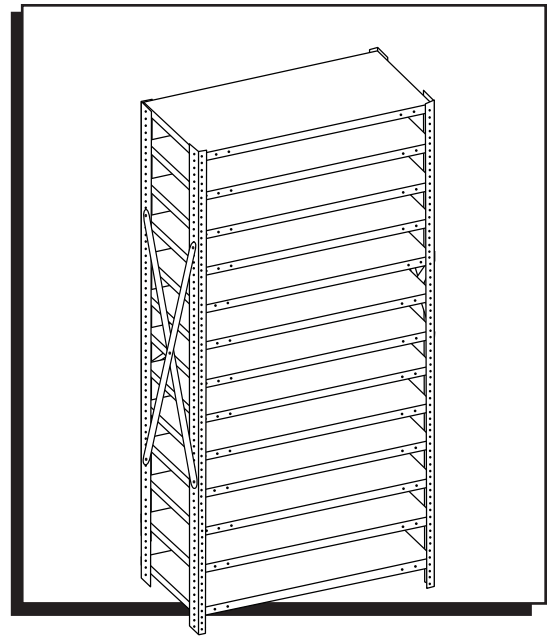

## TOOLS NEEDED




11mm Wrench




Phillips Head  
Screwdriver

## PARTS

Shelf x 13

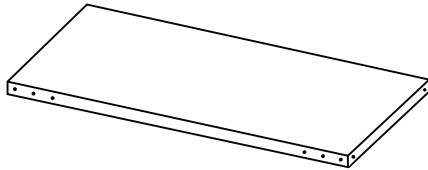


Side Brace x 4 (2 Sets)

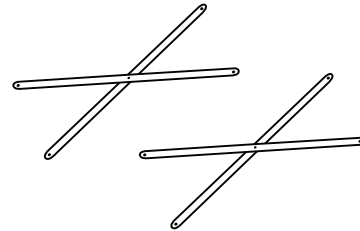

Lock Nut and Bolt x 67




Back Brace x 2 (1 Set)

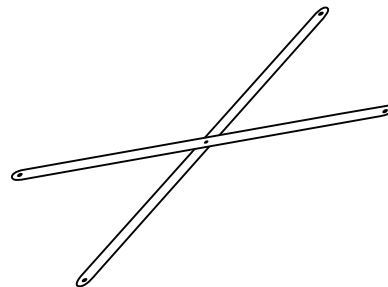

Post x 4





# INSTRUCTIONS

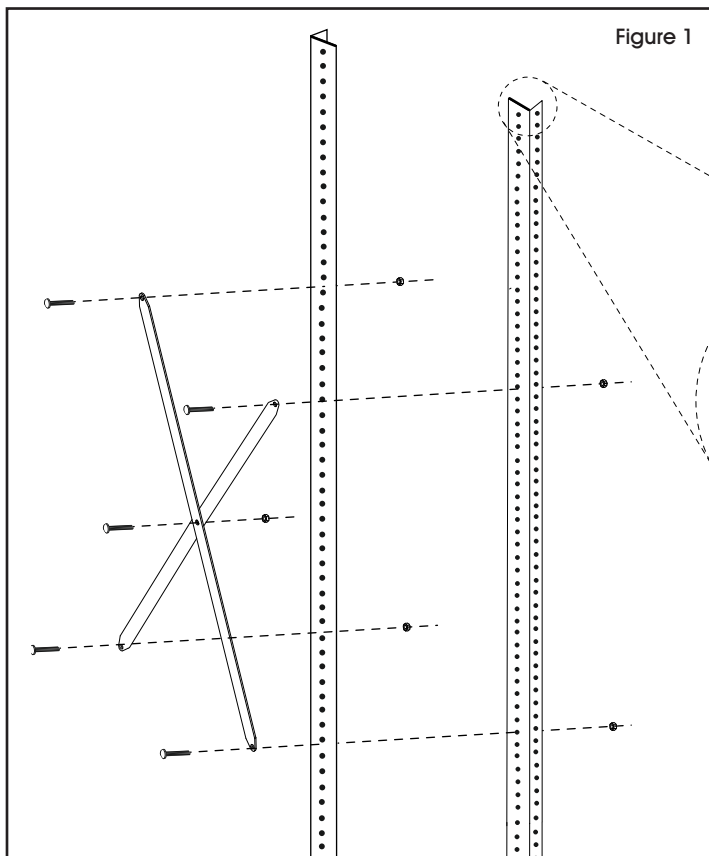


1. Install side braces: For 12" deep unit (H-1770), on the longer side of the posts, counting from the bottom up, locate the 19th hole and counting from the top down, locate the 24th hole. Insert bolts through side braces and posts. Tighten bolts with nuts. (See Figure 1)




**NOTE:** For 18" deep unit (H-1771), on the longer side of the posts, counting from the bottom up, locate the 23rd hole and counting from the top down, locate the 23rd hole. Insert bolts through side braces and posts. Tighten bolts with nuts.

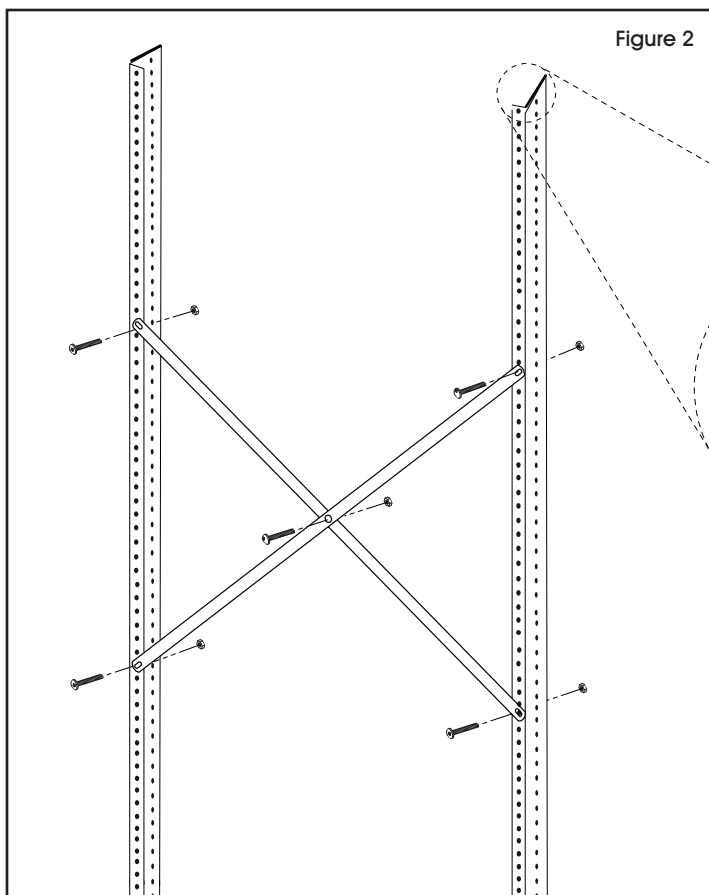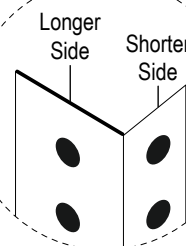


2. Install back braces: For 12" (H-1770) and 18" (H-1771) deep units, on the shorter side of the posts, counting from the bottom up, locate the 17th hole and counting from the top down, locate the 22nd hole. Insert bolts through back braces and posts. Tighten bolts with nuts. (See Figure 2)

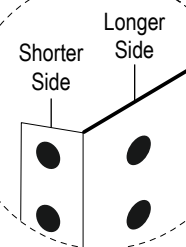


## INSTRUCTIONS CONTINUED

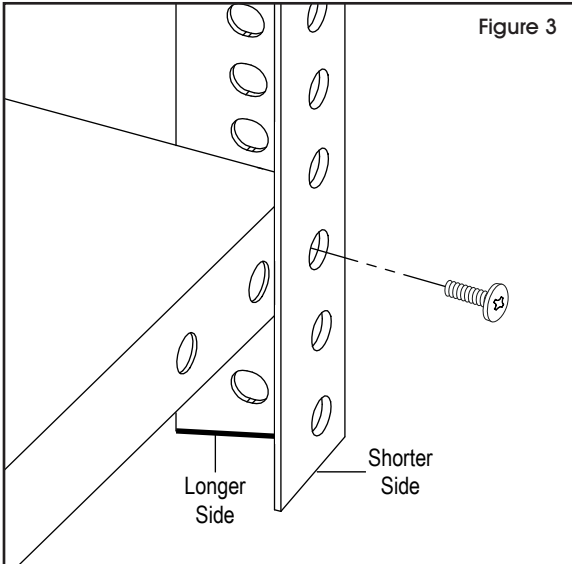

3. Install bottom shelf: For 12" (H-1770) and 18" (H-1771) deep units, align shelf with third hole up from bottom. Insert bolt through the shorter side of the post and through the shelf. Tighten bolts with nuts. (See Figure 3)

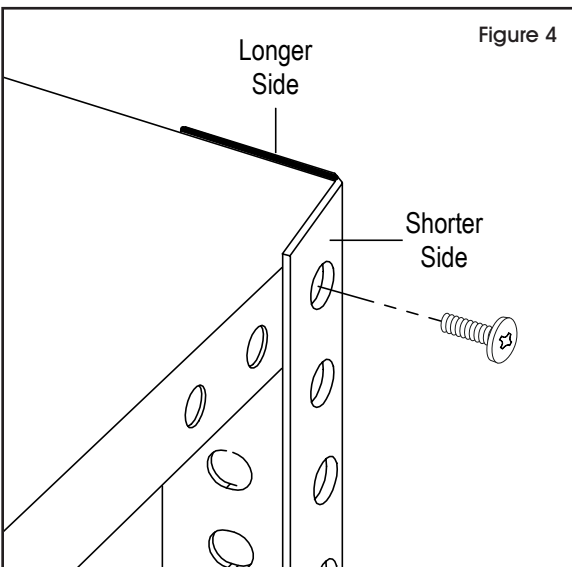

4. Install top shelf: For 12" (H-1770) and 18" (H-1771) deep units, align shelf with top hole. Insert bolts through the shorter side of the post and through the shelf. Tighten bolts with nuts. (See Figure 4)

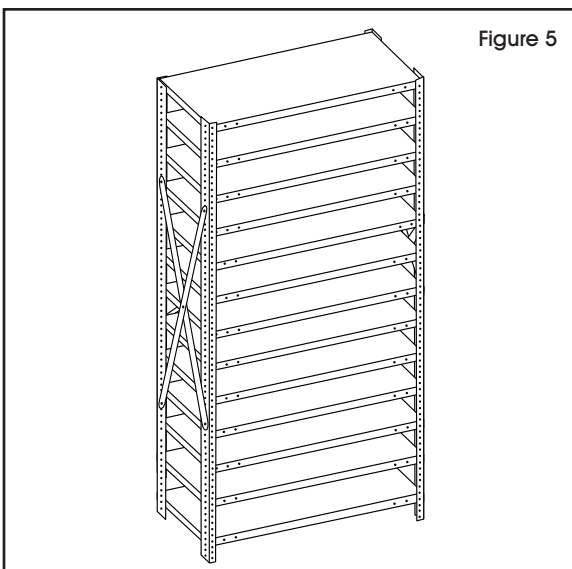

5. Stand unit up and tighten all bolts, use wrench. For 12" (H-1770) and 18" (H-1771) deep units, insert remaining shelves every sixth hole to evenly distribute. (See Figure 5)



**NOTE:** Shelf bolts should be facing the front and back of the unit.