



H-2122, H-2123,  
H-2124


1-800-295-5510  
uline.com

## FIRE EXTINGUISHER CABINET

### TOOLS NEEDED



Drill



Philips Head Screwdriver

## MOUNTING INSTRUCTIONS

### WALLS WITH 2 x 4" STUDS

Mount cabinet securely to stud using four #10 x 1 1/4" long wood screws, installed through mounting holes in cabinet.

### SHEETROCK

Mount a 3/4" board to the wall using 3/16" toggle bolts (height and width of the board is dependent on cabinet size.) The board should extend a minimum of two inches beyond all sides of the cabinet. Mount cabinet to board using four #10 x 1" long wood screws through the holes in the cabinet.

### CINDERBLOCK OR CEMENT


Mount cabinet using four 1/4" toggle bolt or #10 masonry lead screw expansion anchors through the holes in the cabinet.

### CONCRETE OR TILE WALL

Mount cabinet using four #10 masonry lead screw expansion anchors through the holes in the cabinet.

### STEEL POSTS OR BEAMS

Special tools and fasteners are required. Please use professional service company to mount cabinet.

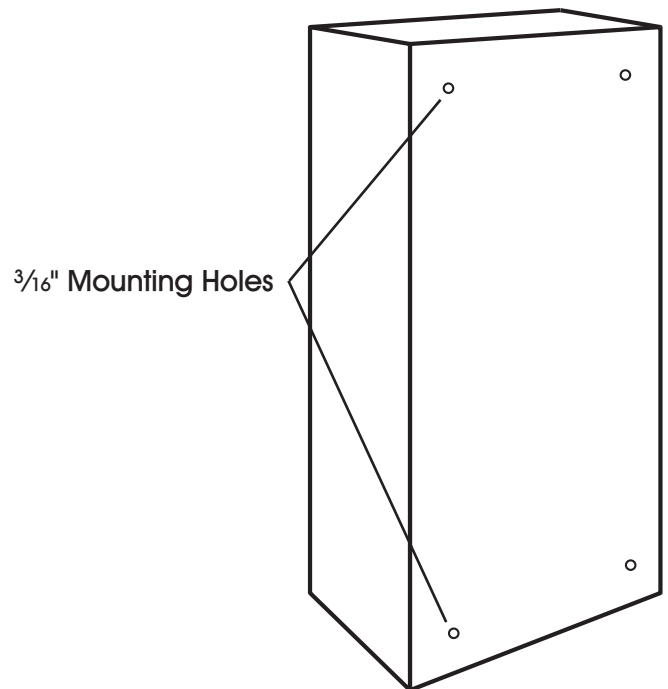

(Back of Cabinet)