


Use with poly strapping only.
Fits strapping widths $\frac{3}{8}$, $\frac{1}{2}$ and $\frac{5}{8}$ "

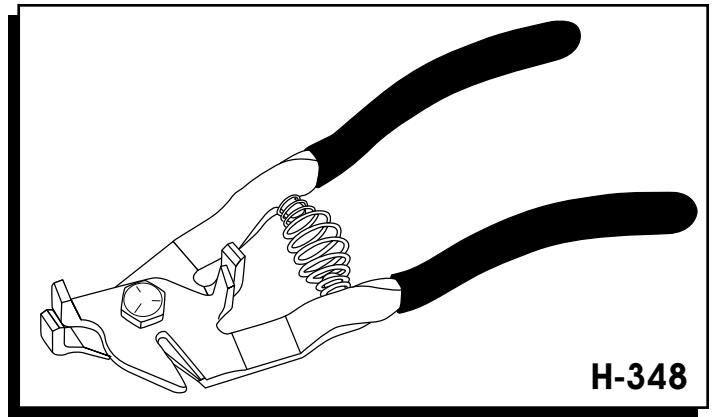

INSTRUCTIONS

APPLY TENSION TO POLY STRAPPING

1. Thread the poly strapping through both tightener grips and squeeze the handles to grip strapping. (See Figure 1)

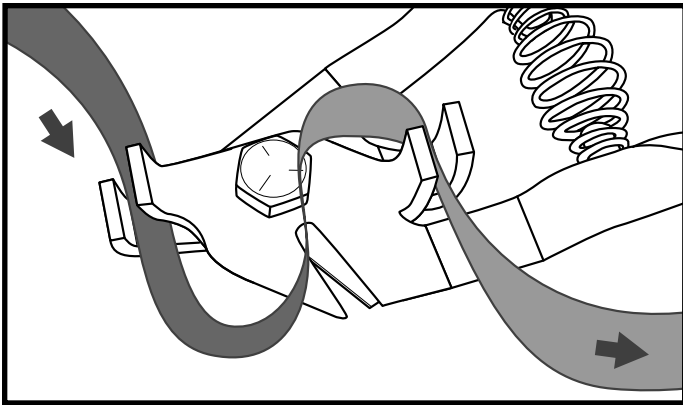


Figure 1

2. Pull the Tensioner/Cutter until poly strapping is tensioned as needed. If necessary, hold down opposite side of strapping with gloved hand to prevent slipping. (See Figure 2)

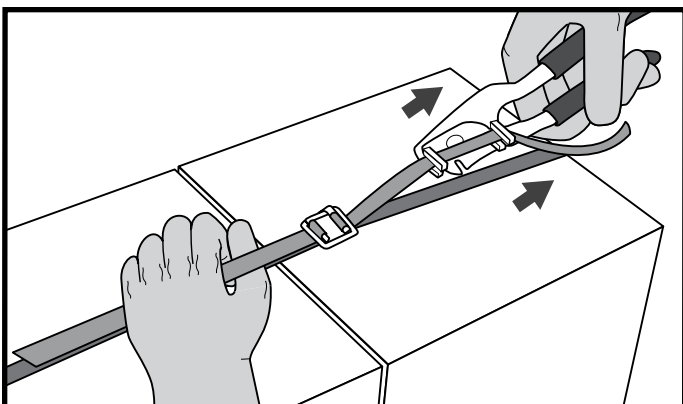


Figure 2

TRIM EXCESS STRAPPING

1. Place strapping in trimming slot. (See Figure 3)
2. Squeeze handles to cut strapping.

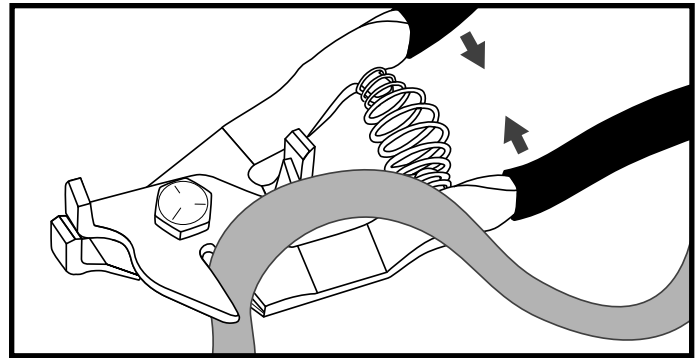


Figure 3

SAFETY RULES



Read instructions carefully. Failure to follow these instructions can result in severe personal injury.

1. Always wear safety glasses with side shields to prevent severe eye injury or blindness. Safety glasses should conform to ANSI Standard Z87.1 or EN 166.
2. Always wear protective gloves when handling strap or sharp parts.
3. Maintain proper footing and balance when operating the tool.
4. DO NOT use this tool if you are not trained in its use.
5. Keep work areas uncluttered and well lit.