




ULINE S-10452 MARINE SHRINK VENT

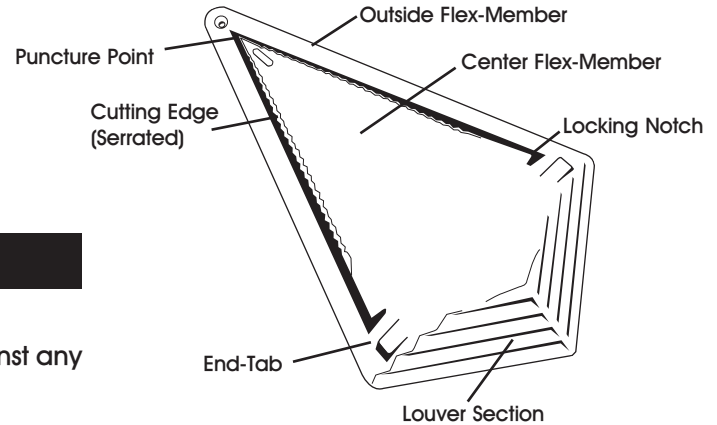

INSTALLATION INSTRUCTIONS

Mount on an unobstructed area on the cover. Do not mount against any hard surfaces. This will not allow proper air flow.

- 1** Vent should be mounted on a vertical, 90° angle to keep rain/snow from entering. For best results, mount the vent as high as possible.
- 2** Hold vent vertically pointing upward. Press the point of the vent in and push the vent upward. The point should pierce the marine shrink cover. (Note: heavy gauge plastic or fabric covers may require pre-cutting a 2 3/4" horizontal slit prior to installation.)
- 3** While squeezing the end tabs, continue to push the vent upward until it reaches the locking notches. Smooth any wrinkles in the shrink and release the end tabs.

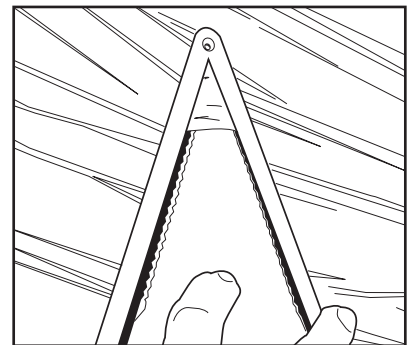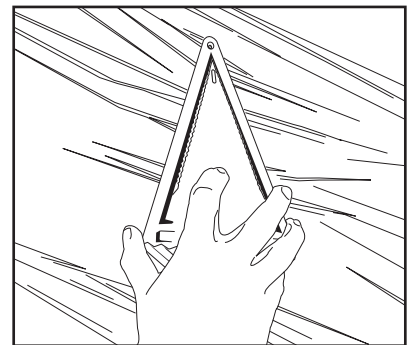

- CAUTION NOTES -

Surface temperature of covering material must be above freezing (32°F) during installation of vent.

Some covering materials may require a strip of adhesive tape to be placed across the Outside Flex-Member of vent to prevent side movement of vent after installation.

ULINE CHICAGO • ATLANTA • DALLAS • LOS ANGELES • MINNEAPOLIS • NYC/PHILA

1-800-295-5510

uline.com