

1-800-295-5510 uline.com

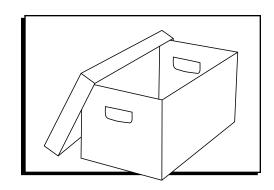

ASSEMBLY INSTRUCTIONS

BOX ASSEMBLY

- Fold side "A" inside box, so that it fits snugly against inside wall of carton. (See Figure 1)
- Fold sides "B" and "D" flat against side "C". (See Figure 2)
- Fold sides "B", "C" and "D" up to form bottom of carton. (See Figure 3)
- Place carton on flat surface. Lift side "D" up against carton wall. (See Figure 4) 4.
- 5. Lift side "B" against opposite carton wall. (See Figure 5)
- Push side "A" down against bottom of carton. (See Figure 6)

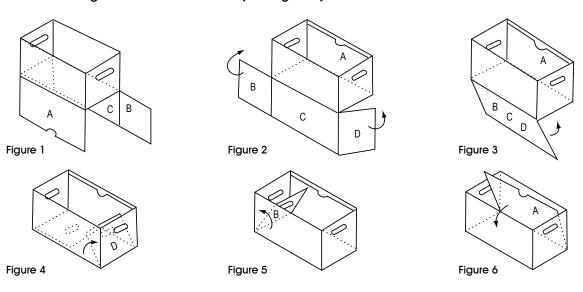

LID ASSEMBLY

- 1. Lift side panels up and fold in small panels to center. (See Figure 7)
- 2. Fold end panel up and over flaps to lock tabs into slots. (See Figure 8)
- 3. Repeat step 2 on other end. (See Figure 8)

