
ULINE S-16302, S-16303, S-16304 S-16305, S-16306, S-16307 **STACKABLE BIN**

1-800-295-5510 uline.com

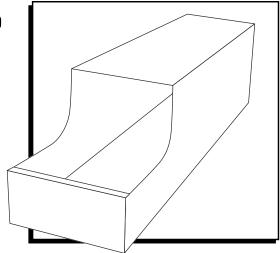

ASSEMBLY

- 1. Fold along scorelines 1. (See Figure 1)
- 2. Fold along scorelines 2. Tuck A in (B should be on the outside). (See Figure 2)
- 3. Flip bin over.
- 4. Fold in side flaps C. (See Figure 3)

- 5. Fold D over the C side flaps, locking into place in the slot. (See Figure 4)
- 6. Fold in side flaps E. (See Figure 5)
- 7. Fold F to form the back of the bin. Fold along top scoreline of F and tuck in. (See Figure 6)

