


ASSEMBLY INSTRUCTIONS


1

LIFT TENSION FLAPS 'A' AND SLIDE
PRODUCT UNDER FILM.

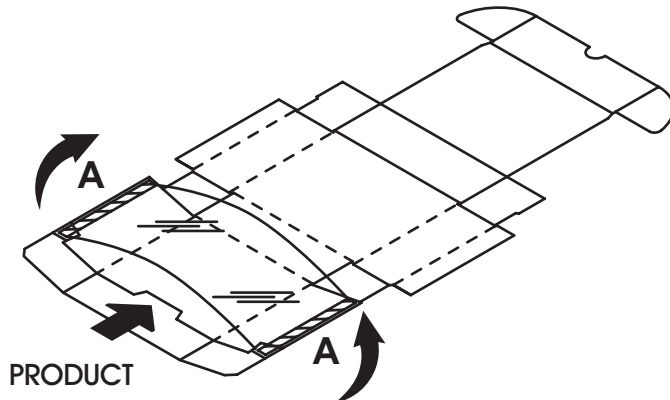


2

FOLD BOTH FLAPS 'A' WITH EQUAL
FORCE DOWN AND UNDER PANEL 'C'.

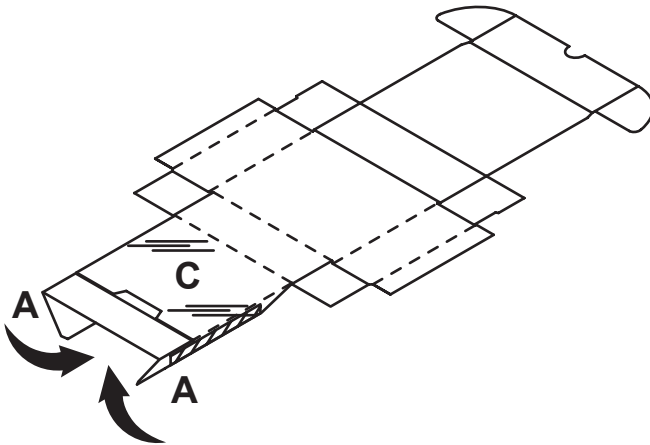


3

LOCK THE TAB IN PLACE BY
FOLDING PANEL 'B'. ROLL
PANEL 'C' OVER PANEL 'D'.

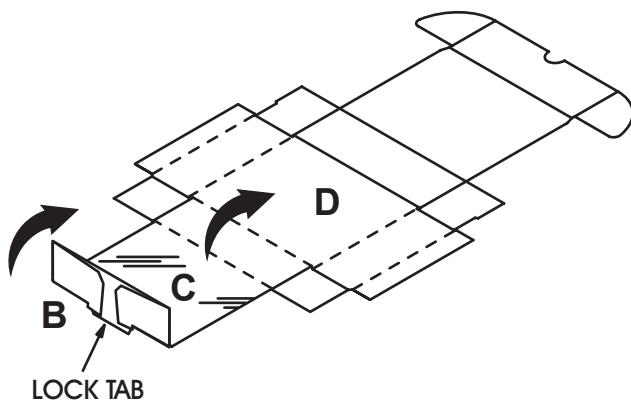


4

FOLD SMALLER FLAPS TOWARDS THE
MIDDLE OF THE BOX.

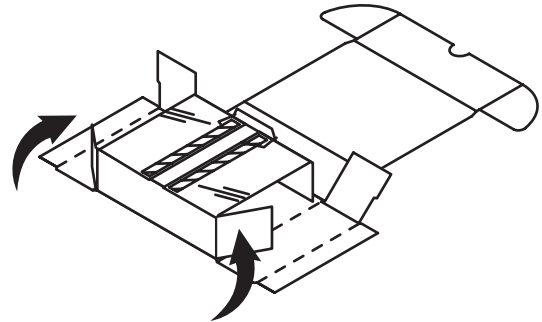

5

FOLD SIDE PANELS 'E' AND RAILS 'F'
OVER THE TOP. FOLD REMAINING
FLAPS TOWARDS THE MIDDLE.

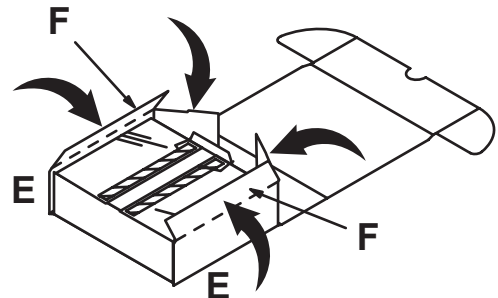

6

ROLL PANEL 'G' OVER THE TOP AND
TUCK FLAPS INTO SIDE SLOTS.

