


# ULINE S-17644, S-17645 WAX PRODUCE BOX

1-800-295-5510  
uline.com

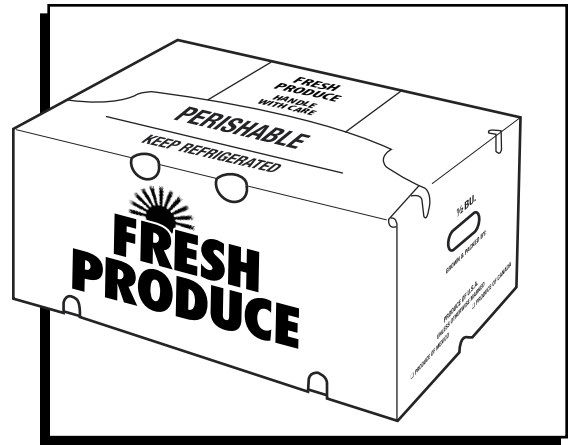

## ASSEMBLY

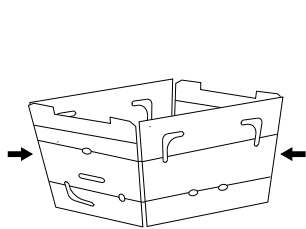


Figure 1

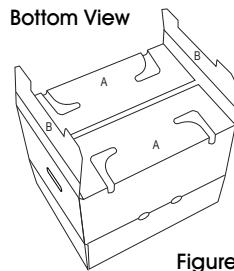


Figure 2

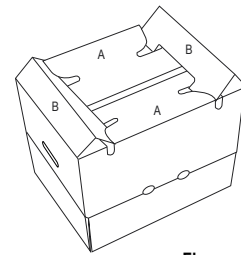


Figure 3

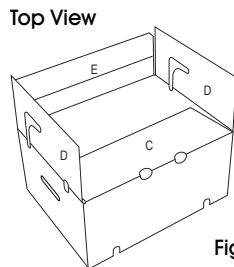


Figure 4

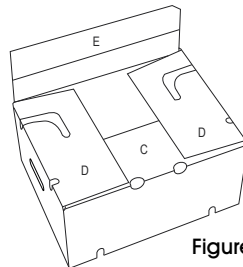


Figure 5

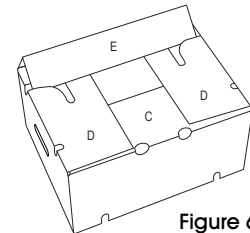


Figure 6

1. Push corners in toward the middle to square up the box. Flip upside down to assemble the bottom. (See Figure 1)
2. Fold flaps A at creases toward the middle. (See Figure 2)
3. Crease flaps B at scores and slide into slots on flaps A, pushing down to secure in place. (See Figure 3)
4. Flip the box over. To close box, fold flap C at crease toward the middle of the box. (See Figure 4)
5. Fold flaps D at creases over flap C. (See Figure 5)
6. Crease flap E at scores and insert corners into slots on flaps D, pushing down to secure in place. (See Figure 6)