

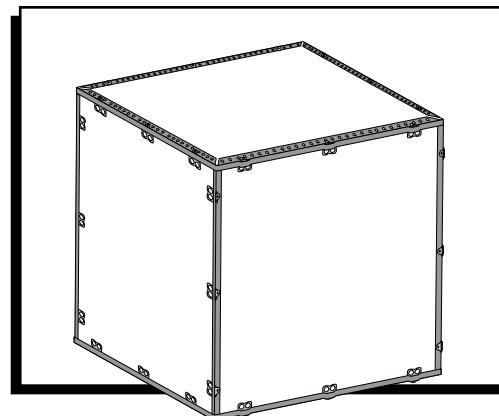


## TOOLS NEEDED

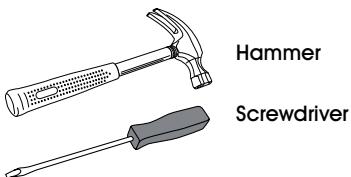


## ASSEMBLY


1. Elevate base so that tabs can be inserted without damage.

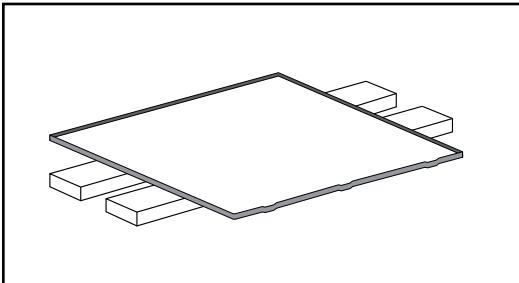


4. Bend back all tabs using a screwdriver or a hammer.

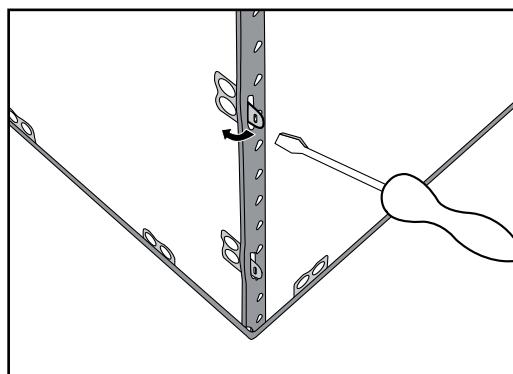


2. Unfold both panels and secure them together.

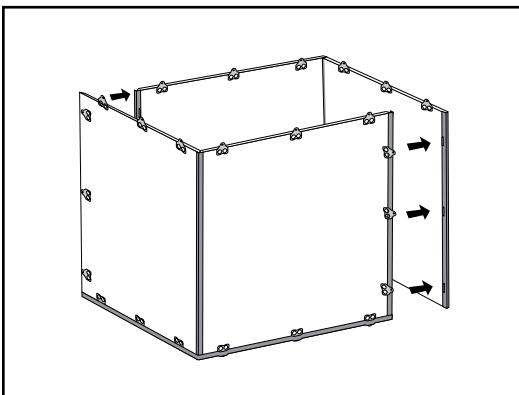

5. Ensure all panels are level, then place lid on top. Bend back remaining tabs.

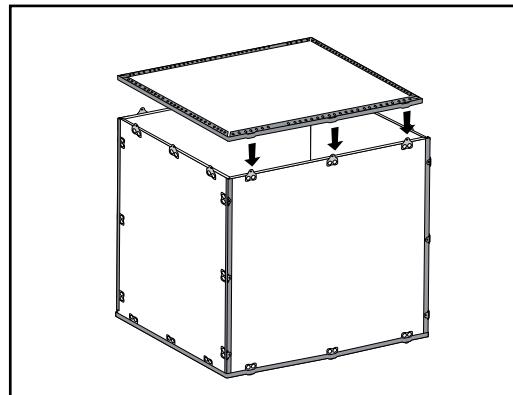

3. Ensure panels are level, then place panels on base.

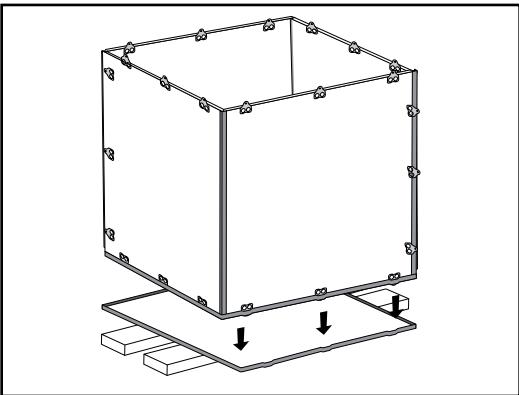

**ULINE** S-18246, S-20434


S-22572

## CAJA DE MADERA

800-295-5510


uline.mx

### HERRAMIENTAS NECESARIAS

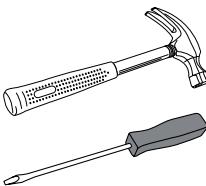


Martillo

Desarmador

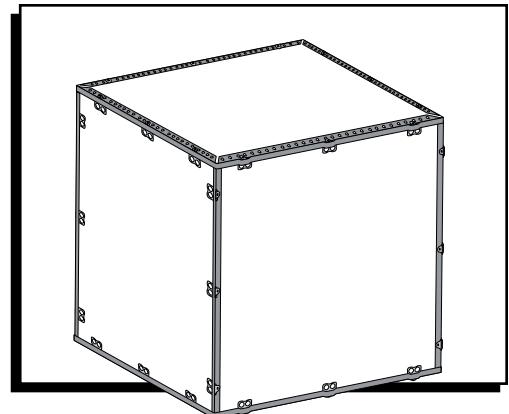


## ENSAMBLE


1. Eleve la base de manera que las pestañas puedan insertarse sin dañarlas.

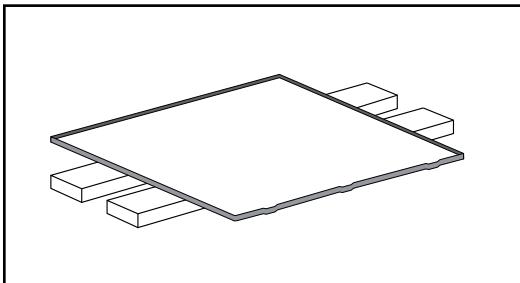


2. Desdoble ambos paneles y únalos para asegurarlos.

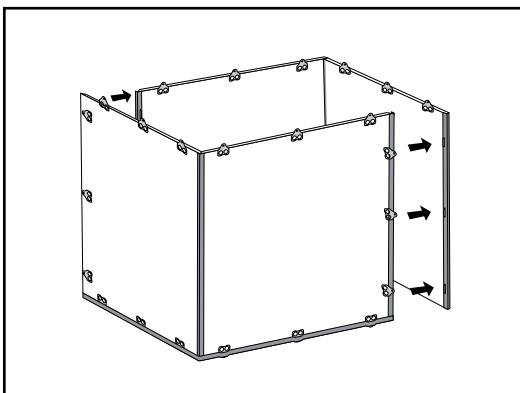


3. Cerciórese que los paneles están nivelados, luego colóquelos sobre la base.

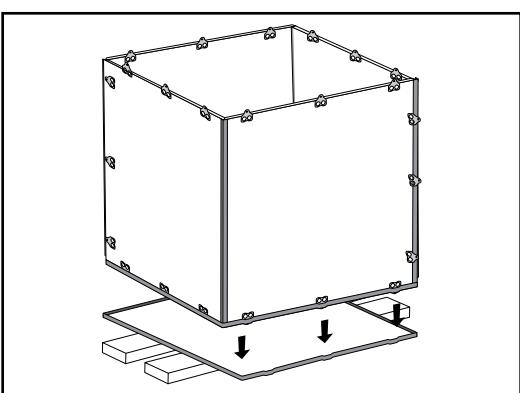


4. Doble las pestañas hacia atrás utilizando un desarmador o martillo.

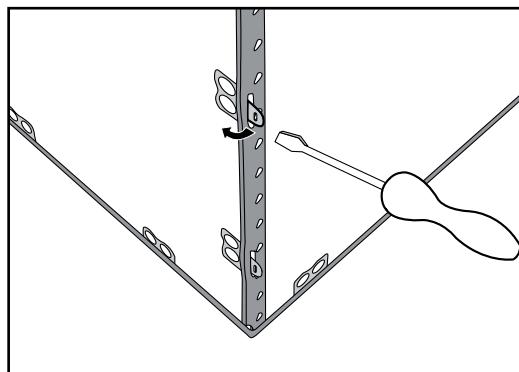

5. Cerciórese que todos los paneles están nivelados, luego coloque la tapa en la parte superior. Doble hacia atrás las pestañas restantes.

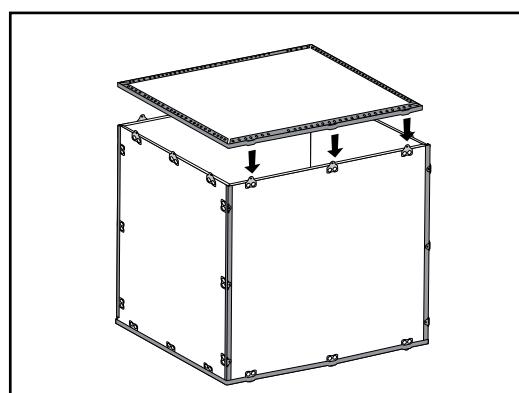


## OUTILS REQUIS

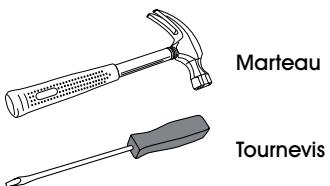


Marteau

Tournevis

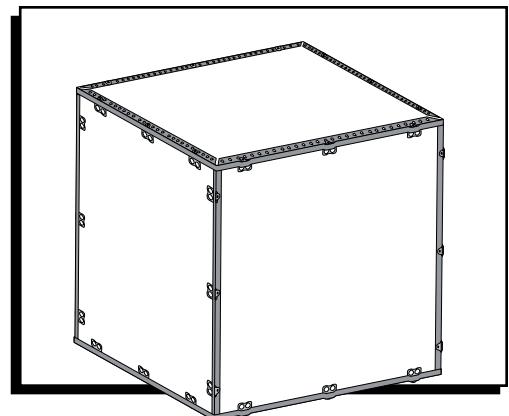


## MONTAGE


Surélevez la base afin d'insérer les languettes sans les endommager.

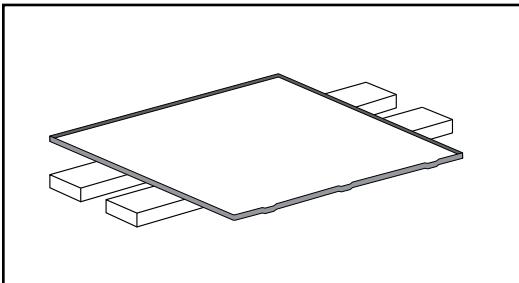


Dépliez les deux panneaux et fixez-les ensemble.

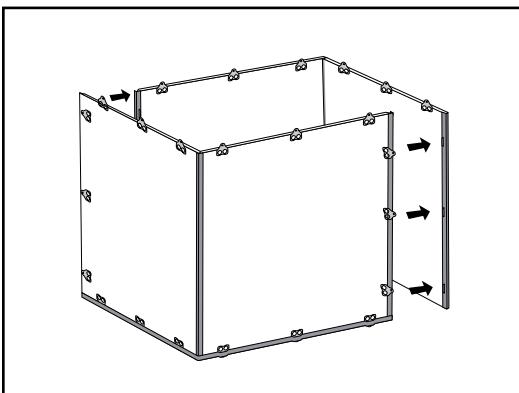

Assurez-vous que les panneaux sont de niveau, puis déposez-les sur la base.

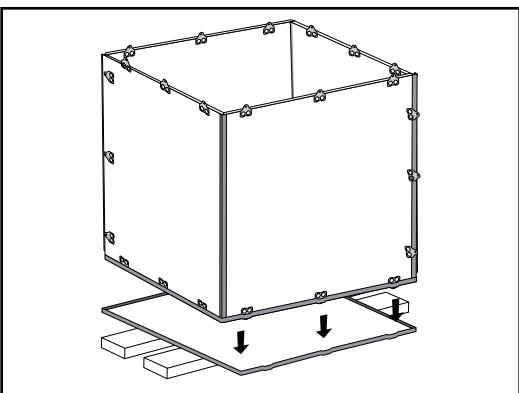

Reliez toutes les languettes à l'aide d'un tournevis ou d'un marteau.

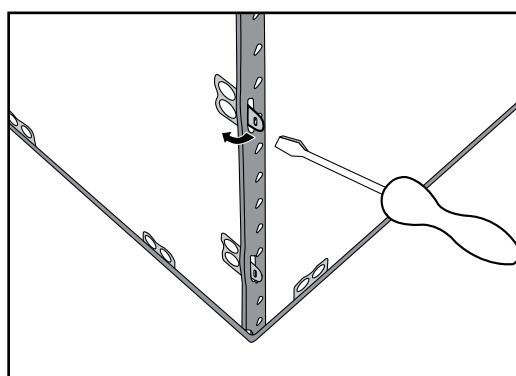

Assurez-vous que les panneaux sont de niveau, puis déposez le couvercle au-dessus. Reliez les languettes restantes.

