

# ULINE H-10632, H-10633


## PURELL® ES6 AUTO DISPENSER

1-800-295-5510  
uline.com


### TOOLS NEEDED




Drill

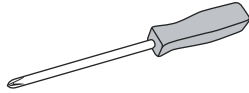

Phillips Screwdriver

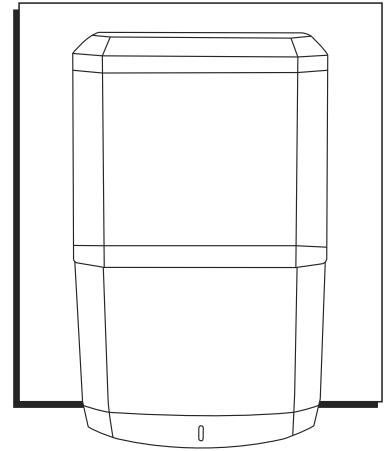

### PARTS



Wall Anchor x 4



#10 x 1" Screw x 4

### SAFETY



**NOTE:** Please read all instructions carefully before installing and using the dispenser.



**WARNING!** Do not install or use in extreme hot or cold locations.



**WARNING!** Use dispenser only as directed.



**WARNING!** Dispensed product intended for external use only. Refer to refill for actions in case of ingestion.



**WARNING!** Do not use in areas where dispenser may be exposed to wet environments such as showers or outdoors.


### INSTALLATION

1. Open dispenser by pressing release buttons on side of dispenser and slide front cover down. (See Figure 1)



**NOTE:** Install dispenser with at least 7" of free space above counter top to allow for routine service.

Figure 1

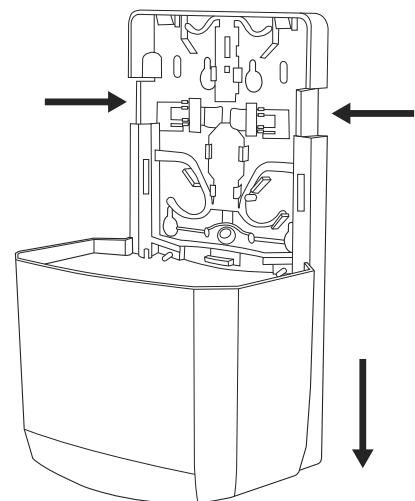


## INSTALLATION CONTINUED

### INSTALLING WITH WALL FASTENERS


Use the dispenser as a template. Pierce the tape on the back plate to mark and drill four holes using 1/4" drill bit. Use the supplied wall anchors and #10 x 1" screws to secure the dispenser in place. (See Figure 2)

 **NOTE:** Do not overtighten screws. If using two screws, the top two holes should be used.

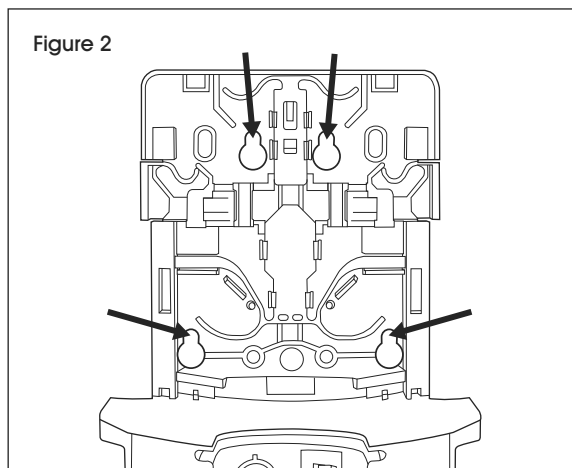


### INSTALLING WITH TAPE


Clean installation surface with alcohol pad. Allow surface to dry for 60 seconds. Peel paper off installation tape and press firmly on back plate for 10 seconds. For maximum adhesion, wait 24 hours before loading refill or using dispenser. (See Figure 3)

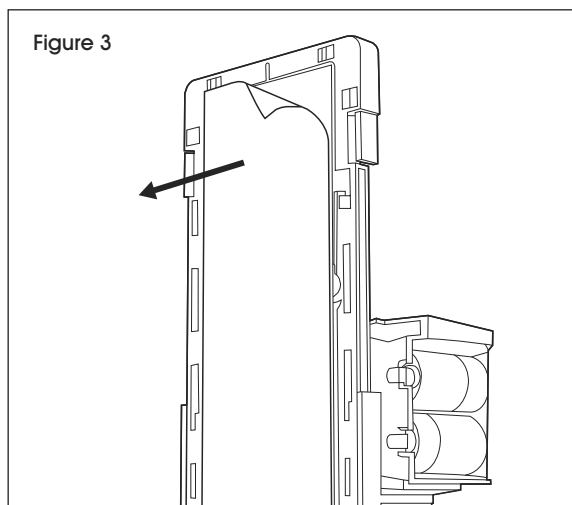


1. Attach the back plate by pressing on the top two corners and the bottom middle section. Audible clicks will confirm proper installation. (See Figure 4)

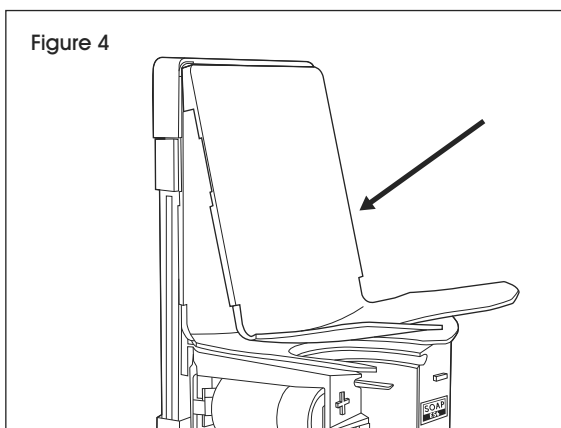

2. Install the floor and wall protector into the bottom of the dispenser by aligning plastic tabs with slots on the dispenser and sliding up until the tabs snap into place. If installing with wall fasteners, use the dispenser as a template. (See Figure 5)

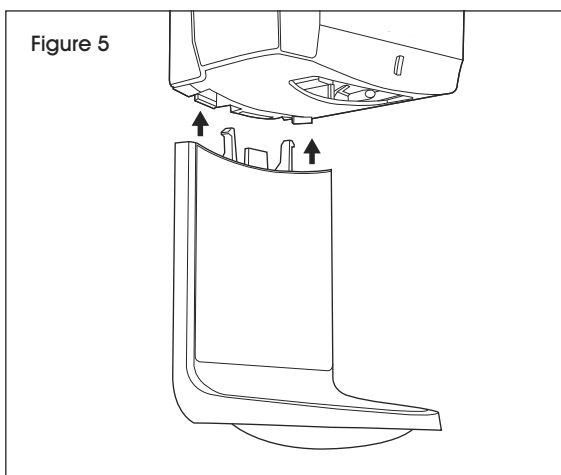


3. Remove battery tab to activate the dispenser. (See Figure 6)

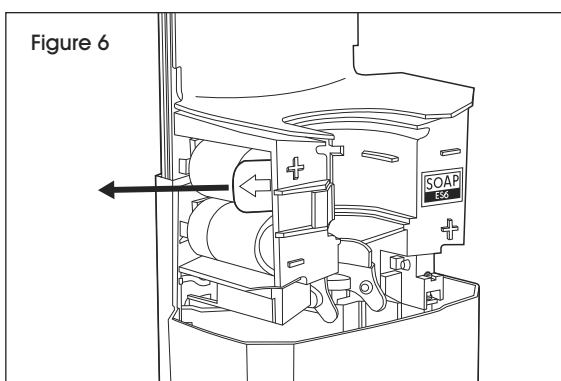


## INSTALLATION CONTINUED

4. Check label inside dispenser before installing.  
(See Figure 7)

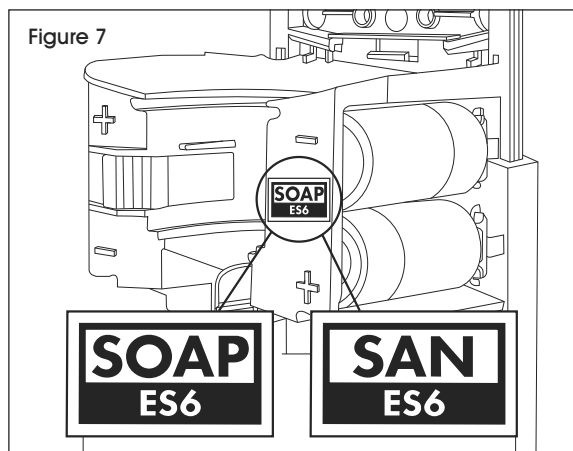


 **NOTE:** ES6 SOAP = soap dispenser  
ES6 SAN = hand sanitizer dispenser


5. Match label on refill with label on dispenser.  
(See Figure 8)

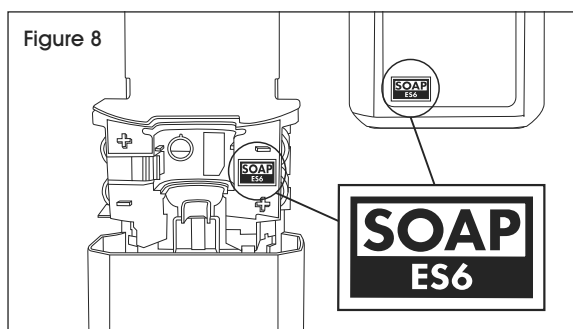


6. Remove refill cap and push the new refill into dispenser until it clicks in place. (See Figure 9)

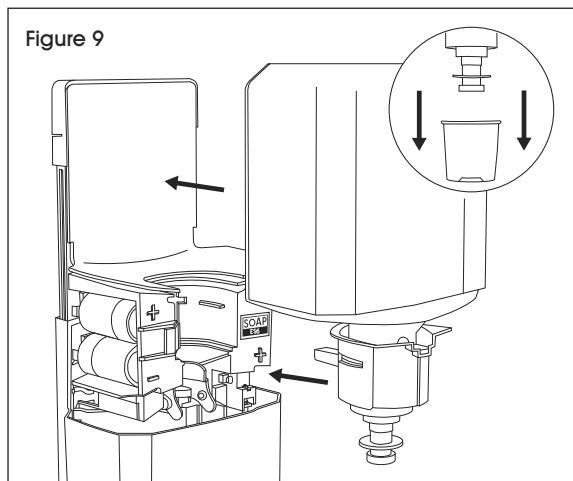

7. Close dispenser cover. The green status light will blink after closing, indicating the dispenser is ready to use. (See Figure 10)

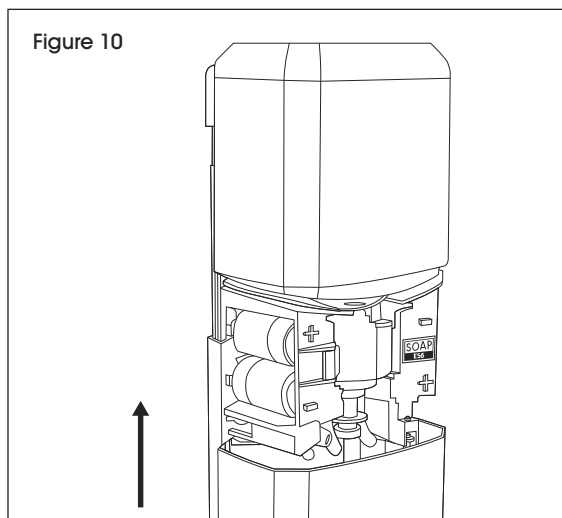

8. Place palms approximately 2" below dispenser. Product will dispense within one second of sensor activation. (See Figure 11)

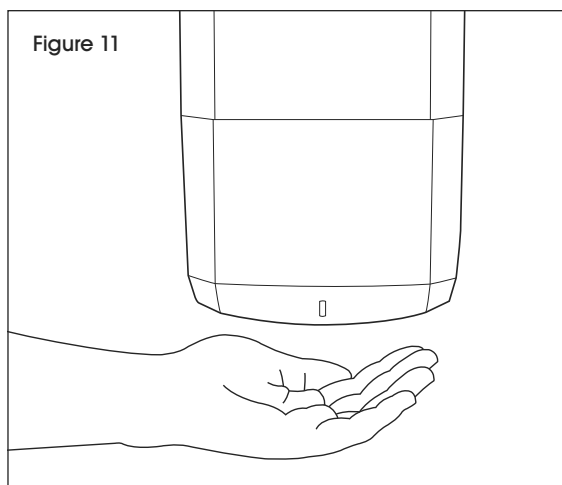

**ULINE**

1-800-295-5510  
uline.com