



ULINE H-10644 PURELL® ES4 PUSH DISPENSER

1-800-295-5510
uline.com


TOOLS NEEDED




Drill



Phillips Screwdriver

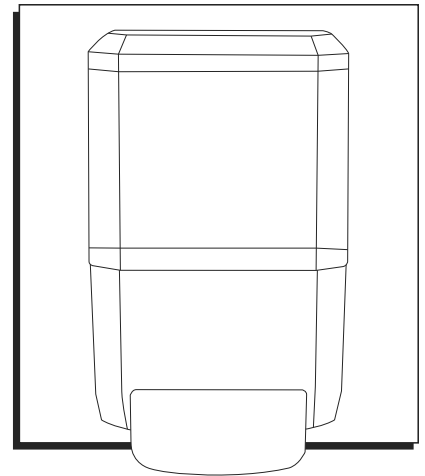

PARTS



Wall Anchor x 4



#10 x 1" Screw x 4

SAFETY



NOTE: Please read all instructions carefully before installing and using the dispenser.



WARNING! Do not install or use in extreme hot or cold locations.



WARNING! Use dispenser only as directed.



WARNING! Dispensed product intended for external use only. Refer to refill for actions in case of ingestion.



WARNING! Do not use in areas where dispenser may be exposed to wet environments such as showers or outdoors.


INSTALLATION

1. Open dispenser by pressing release buttons on side of dispenser and slide front cover down. (See Figure 1)



NOTE: Install dispenser with at least 7" of free space above counter top to allow for routine service.

Figure 1

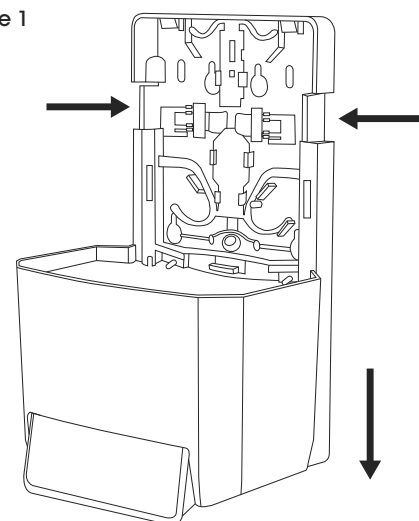


INSTALLATION CONTINUED


INSTALLING WITH WALL FASTENERS

Use the dispenser as a template. Pierce the tape on the back plate to mark and drill four holes using 1/4" drill bit. Use the supplied wall anchors and #10 x 1" screws to secure the dispenser in place. It is recommended to use four screws. (See Figure 2)

 **NOTE:** Do not overtighten screws. If using two screws, the top two holes should be used.

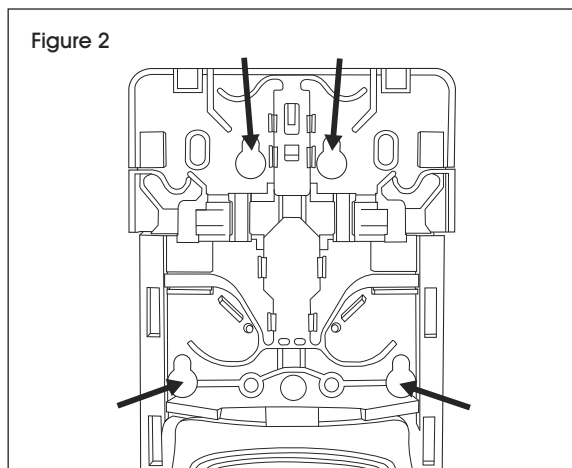



2. Attach the back plate by pressing on the top two corners and the bottom middle section. Audible clicks will confirm proper installation. (See Figure 4)

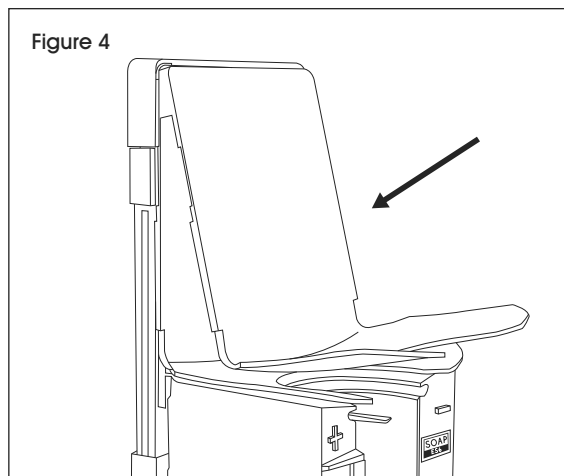

3. Install the floor and wall protector into the bottom of the dispenser by aligning plastic tabs with slots on the dispenser and sliding up until the tabs snap into place. If installing with wall fasteners, use the dispenser as a template. (See Figure 5)

INSTALLING WITH TAPE

1. Clean installation surface with alcohol pad. Allow surface to dry for 60 seconds. Peel paper off installation tape and press firmly on back plate for 10 seconds. For maximum adhesion, wait 24 hours before loading refill or using dispenser. (See Figure 3)

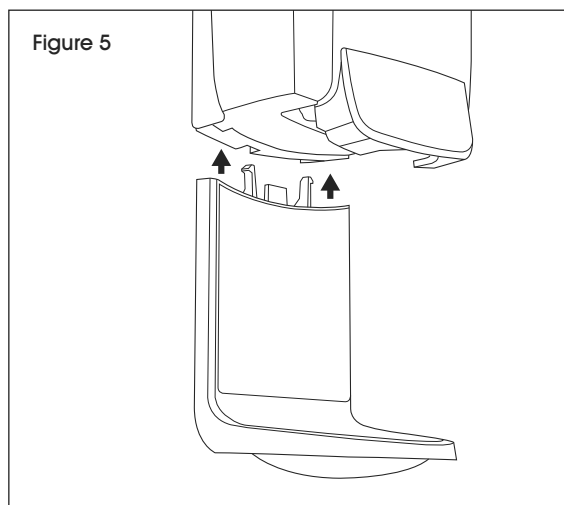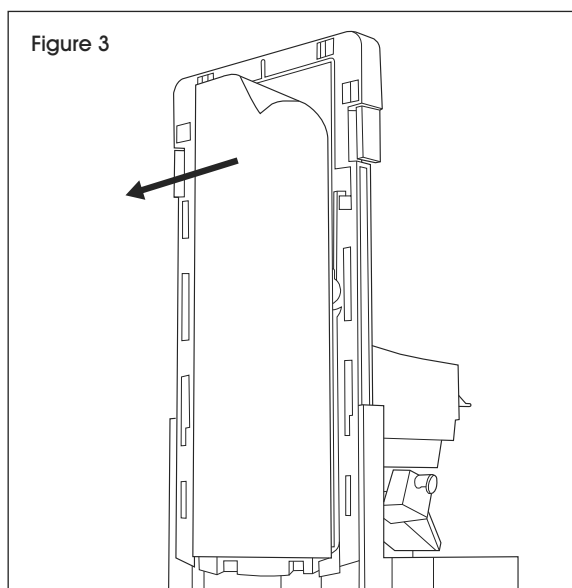


INSTALLATION CONTINUED


4. Check label inside dispenser before installing.
(See Figure 6)




NOTE: ES4 SOAP = soap dispenser
ES4 SAN = hand sanitizer dispenser

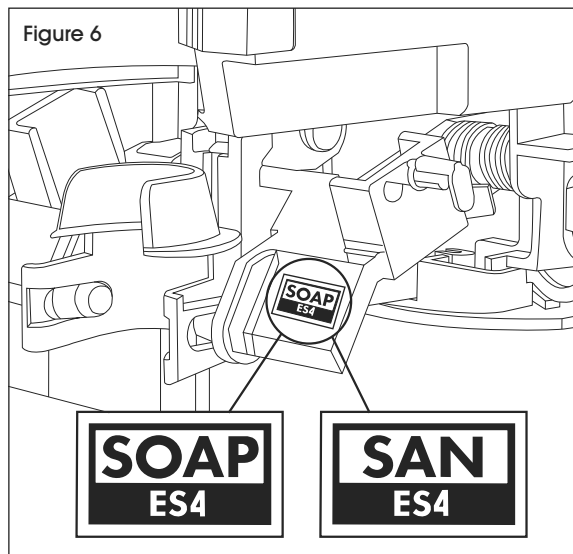


5. Match label on refill with label on dispenser.
(See Figure 7)

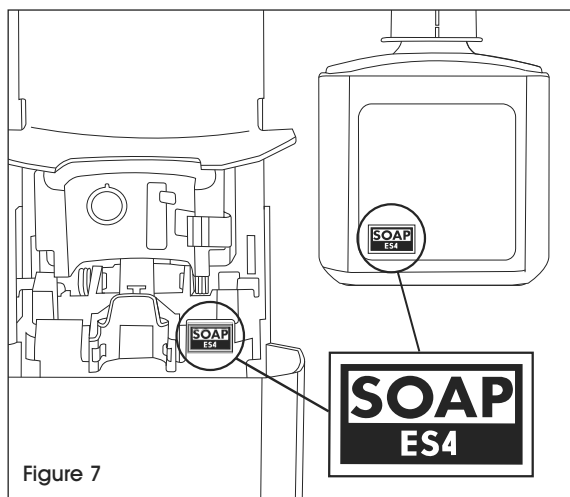

6. Remove refill cap and push the new refill into dispenser until it clicks into place. Close dispenser cover. (See Figure 8)

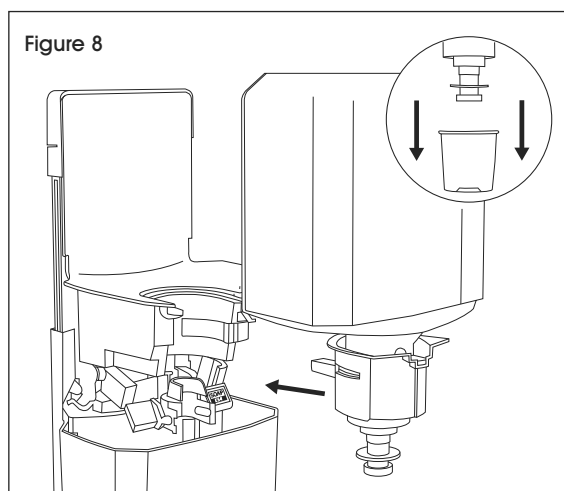

7. Place hand in middle of bar and push multiple times to prime refill. Product will dispense as bar is depressed. (See Figure 9)

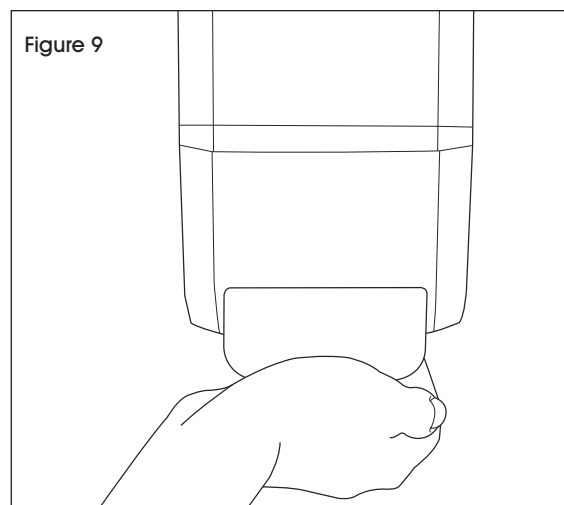

ULINE

1-800-295-5510
uline.com