

**ULINE** H-1105ADD, H-1223ADD  
H-3617ADD, H-1871ADD  
**ADDITIONAL SHELF FOR  
CABINETS**

1-800-295-5510  
uline.com




## INSTALLATION

1. Insert shelf at desired level. (Figure 1)



**NOTE:** In order to place shelf, tilt the shelf slightly to the left or right before inserting into the unit.

2. Ensure shelf is inserted into all lances on all cabinet walls.

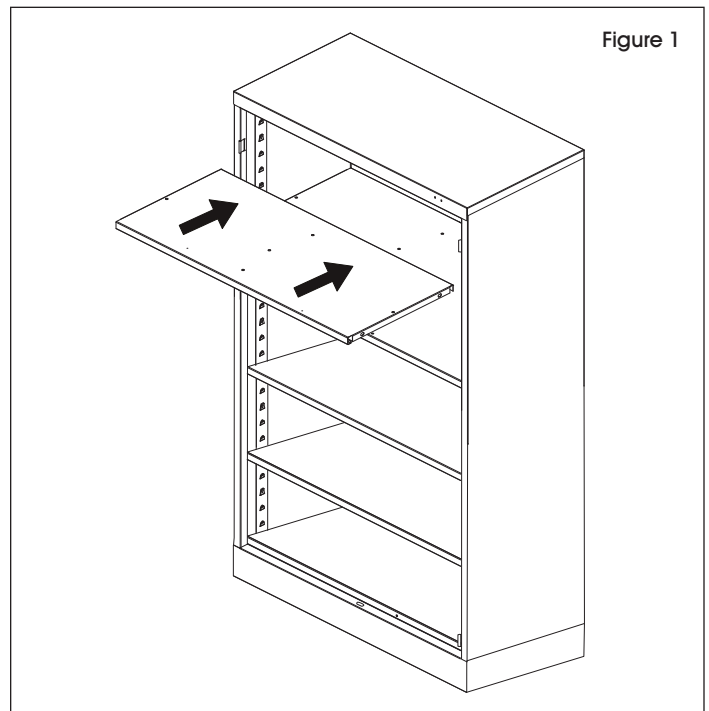


**ULINE**H-1105ADD, H-1223ADD  
H-3617ADD, H-1871ADD**REPISA ADICIONAL PARA  
GABINETES**800-295-5510  
uline.mx**INSTALACIÓN**

1. Inserte la repisa al nivel deseado. (Diagrama 1)



**NOTA:** Para que la repisa quede en su lugar debe ladearla ligeramente hacia la izquierda o la derecha antes de insertarla en la unidad.

2. Asegúrese de que la repisa quede insertada en todas las lanchetas de las paredes del gabinete.

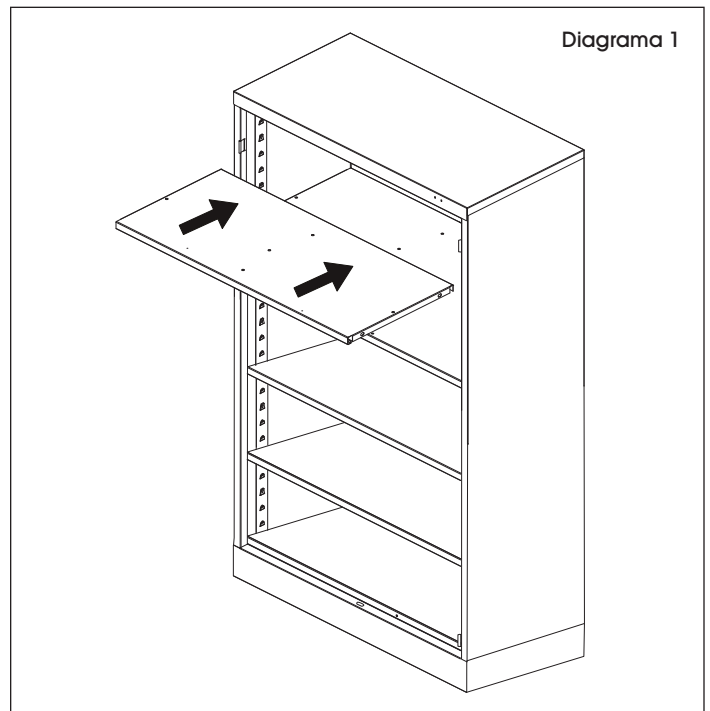

**ULINE** H-1105ADD, H-1223ADD  
H-3617ADD, H-1871ADD

## TABLETTE SUPPLÉMENTAIRE POUR ARMOIRES

1-800-295-5510  
uline.ca



### INSTALLATION

1. Insérez la tablette à la hauteur désirée. (Figure 1)



**REMARQUE :** Pour installer la tablette, inclinez-la légèrement vers la gauche ou la droite avant de l'insérer dans l'unité.

2. Assurez-vous que la tablette est insérée dans tous les crochets des panneaux de l'armoire.

