

# ULINE H-2532 SINGLE-FOLD TOWEL DISPENSER

1-800-295-5510  
uline.com


## TOOLS NEEDED




Drill




1/4" Drill Bit




Phillips Screwdriver




Level




Tape Measure

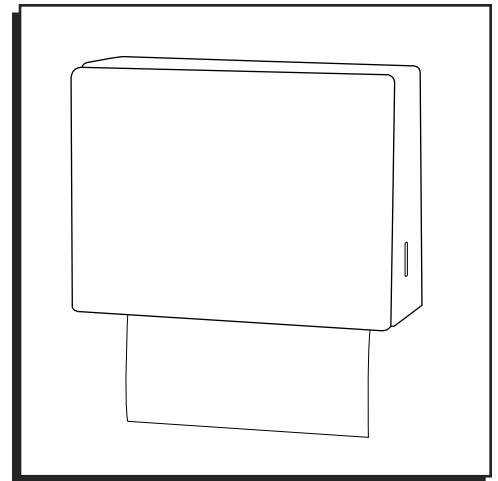

## PARTS

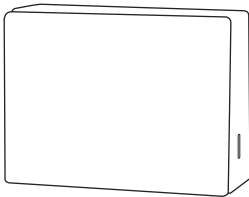


Dispenser x 1



Key x 1



Wall Anchor x 4




Screw x 4

## MOUNTING INSTRUCTIONS




**NOTE:** Ensure that proper mounting hardware is used for appropriate wall composition. Enclosed hardware may not be compatible with wall surface.

1. Insert key into the lock opening on top of dispenser and turn clockwise to open cover. (See Figure 1)

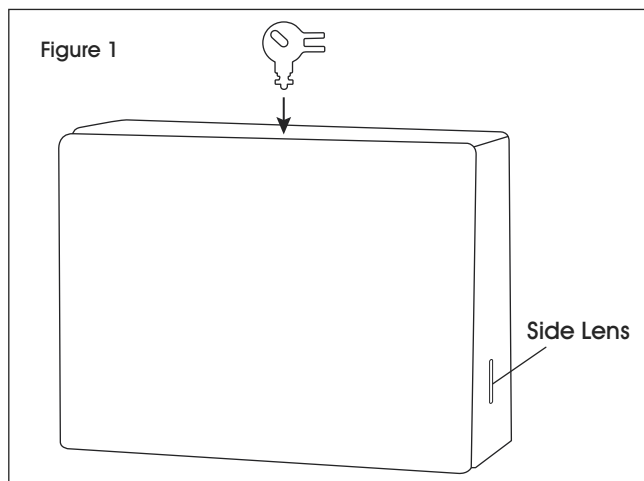


2. Open dispenser cover and hold dispenser to ideal mounting place on wall. (See Figure 2)

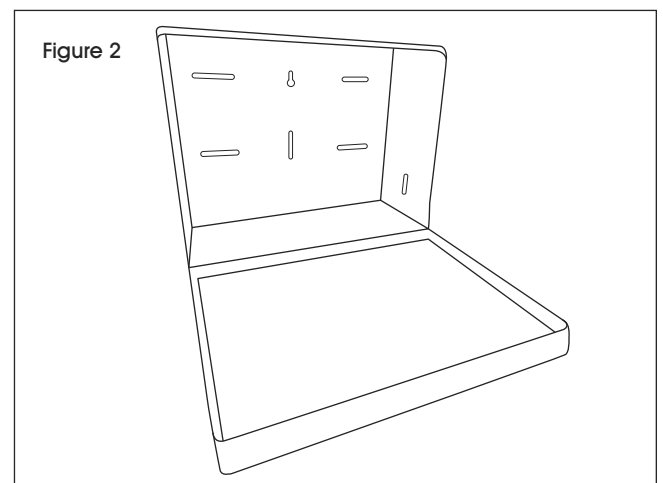

## MOUNTING INSTRUCTIONS CONTINUED


3. Mark the four holes on the wall where screws will be inserted. (See Figure 3)

Figure 3

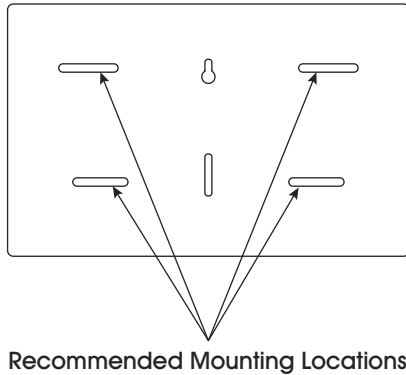

4. Drill into wall at four marked locations with 1/4" drill bit. (See Figure 4) Insert wall anchors if necessary.


Figure 4

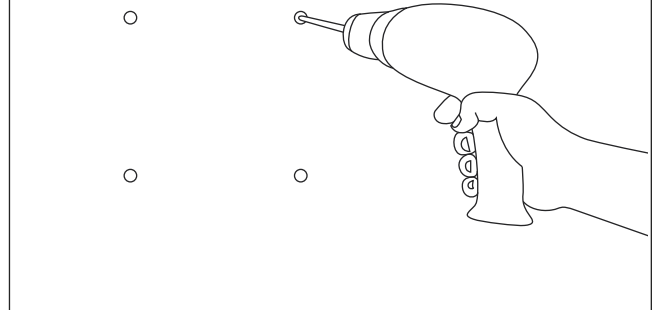

5. Hold dispenser over previously drilled holes and insert screws.

## LOADING INSTRUCTIONS

Figure 5

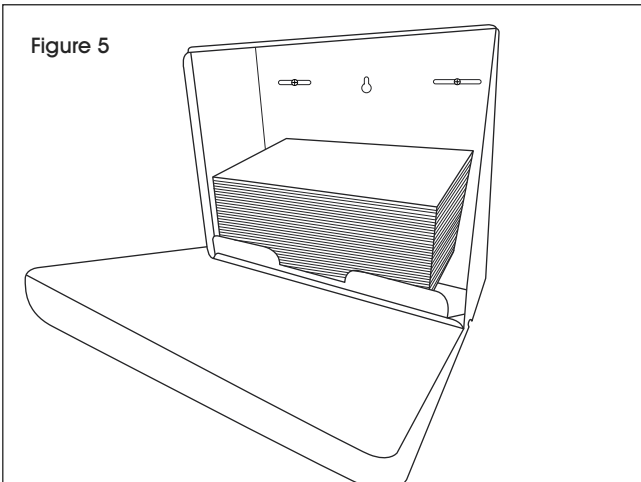

1. Remove wrap from bundle of towels.
2. Load towels into dispenser and close cover. (See Figure 5)



**NOTE:** Bundle of towels can be placed in either direction.