


ULINE H-2545

BIKE RACK MOUNTING HARDWARE


1-800-295-5510
uline.com

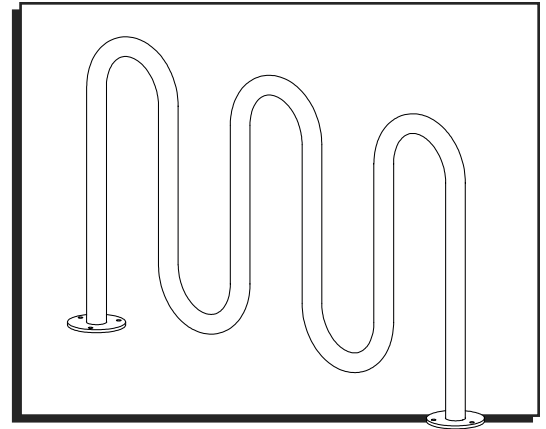

ASSEMBLY

 **NOTE:** Hardware kit includes 6 spikes.


1. Drill a 3/8" diameter hole into the concrete, block or stone to a depth of 3 1/8". (See Inset A)
2. Blow out the dust in the hole.
3. Drive the spike flush to rack base and into drilled hole. (See Inset B)
4. Repeat on remaining spikes.

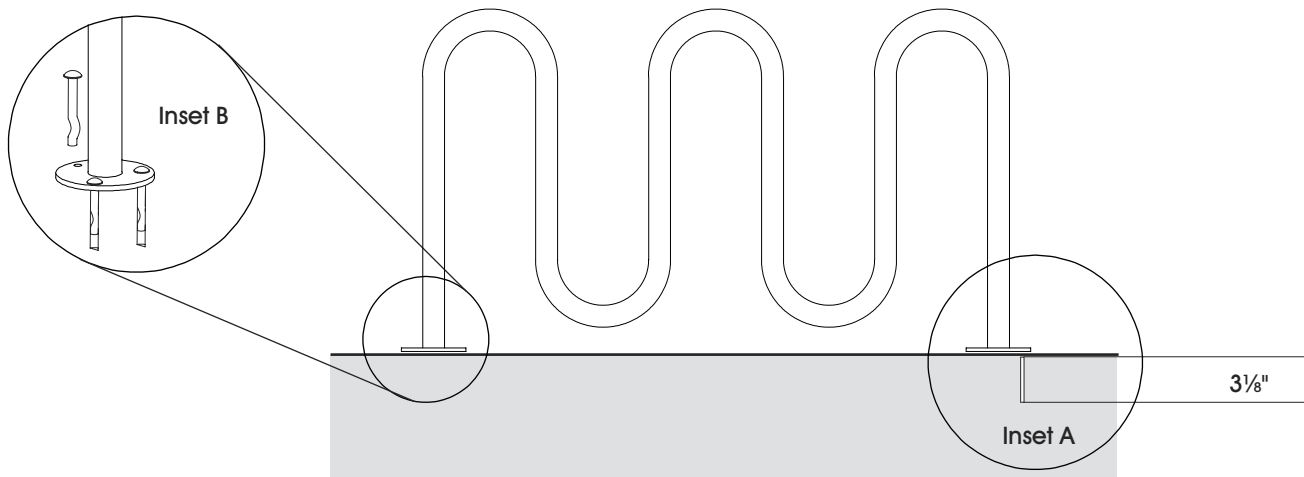

ULINE H-2545

TORNILLERÍA DE INSTALACIÓN PARA PORTABICICLETAS

800-295-5510
uline.mx

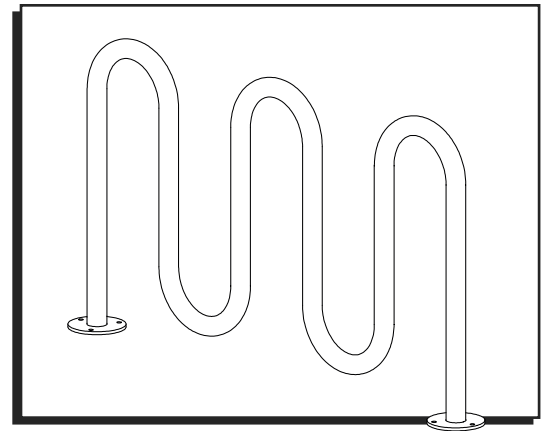


ENSAMBLE

 **NOTA:** Kit de tornillería incluye 6 clavos.

1. Taladre en el concreto, bloque o piedra un orificio de 9.5 mm (3/8") de diámetro a una profundidad de 7.9 cm (3 1/8"). (Vea Figura A)
2. Sople para eliminar el polvo del orificio.


3. Coloque el clavo al ras en la base del rack y dentro del orificio taladrado. (Vea Figura B)
4. Repita la operación con los clavos restantes.

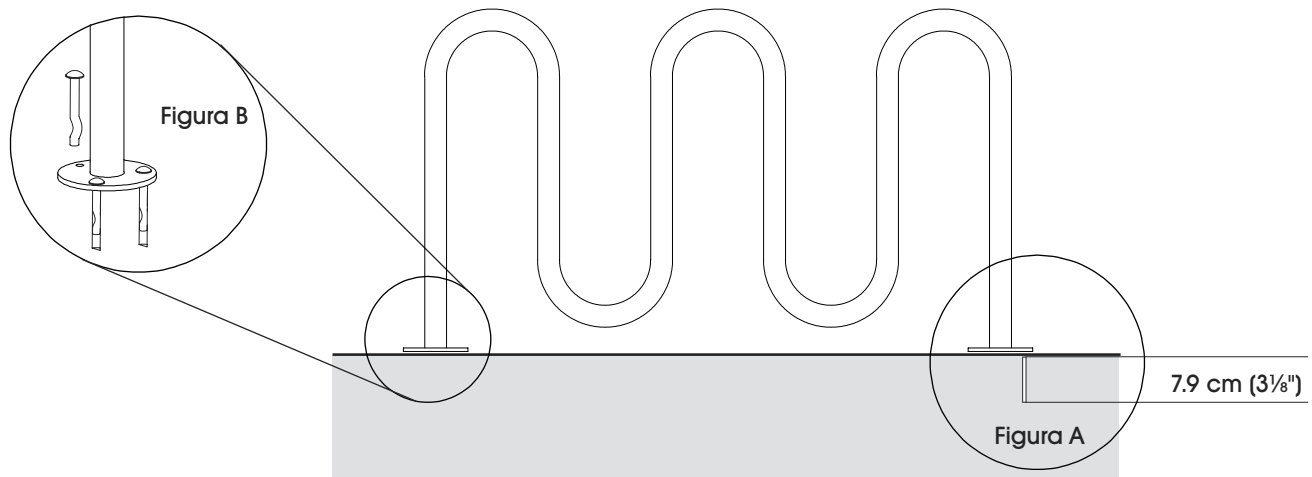

ULINE H-2545

**MATÉRIEL D'INSTALLATION
POUR SUPPORT À VÉLOS**

1-800-295-5510
uline.ca

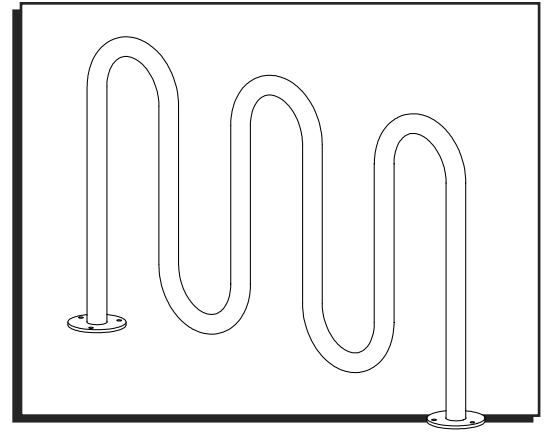

MONTAGE



REMARQUE : Ensemble du matériel comprend 6 piquets.

1. Percez un trou de 9,5 mm (3/8 po) de diamètre dans du béton, une dalle ou une pierre à une profondeur de 7,9 cm (3 1/8 po). (Voir Encadré A)
2. Retirez la poussière du trou en soufflant dessus.
3. Enfoncez le piquet à travers les trous sur la base du support et dans le trou percé. (Voir Encadré B)
4. Répétez la procédure pour les autres piquets.

