
ULINE H-2546

STAINLESS STEEL DOUBLE ROLL TOILET TISSUE DISPENSER

1-800-295-5510 uline.com


TOOLS NEEDED










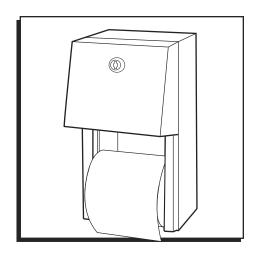

PARTS





Key x 1

Dispenser x 1



NOTE: Mounting hardware is not included with this item.

MOUNTING INSTRUCTIONS




NOTE: Recommended mounting height is 19" from the floor to bottom of dispenser.




NOTE: Ensure that proper mounting hardware is used for appropriate wall composition as enclosed hardware may not be compatible with your wall surface.

 Insert key into lock opening on front of dispenser and turn to open cover. (See Figure 1)

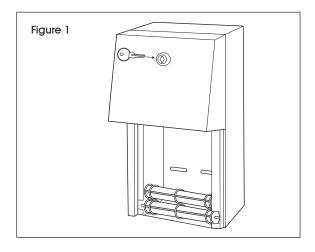


2. Open dispenser cover and hold dispenser to ideal mounting place on wall. (See Figure 2)

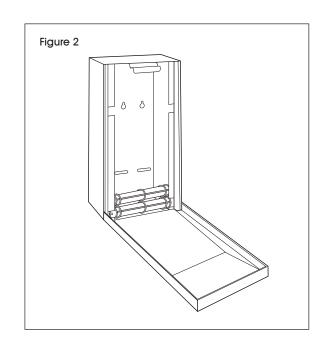


PAGE 1 OF 3 0320 IH-2546

MOUNTING INSTRUCTIONS CONTINUED

Mark the four holes on the wall where screws will be inserted. (See Figure 3)

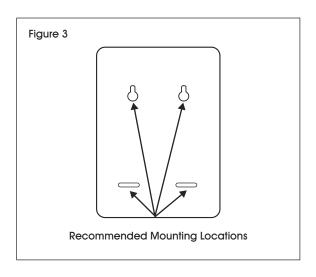


 Drill into wall at four marked locations with appropriate size drill bit. (See Figure 4) Insert wall anchors if necessary.

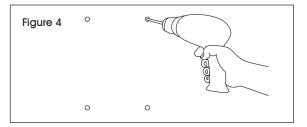


5. Hold dispenser over previously drilled holes and insert screws.

LOADING INSTRUCTIONS

 Insert key into lock opening on front of dispenser and turn to open cover. (See Figure 5)

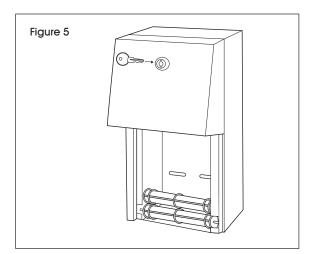

 Remove two spindles by sliding them up and out of dispenser (See Figure 6a) or out bottom of dispenser. (See Figure 6b)

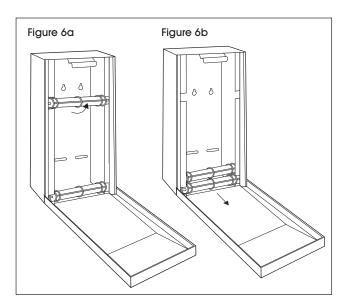


PAGE 2 OF 3 0320 IH-2546

LOADING INSTRUCTIONS CONTINUED


 Place a roll onto each spindle and insert spindles back into dispenser by sliding in from the top. (See Figure 7)



NOTE: Paper should lead from the front of the roll.

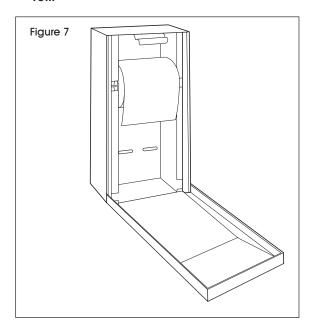

4. Close dispenser lid and begin dispensing. (See Figure 8)

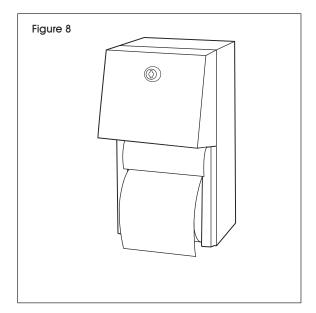

 Once the first roll is nearly out, the second roll will slide into view. If the second roll does not slide automatically, pull the roll down into place. (See Figure 9)

