
1-800-295-5510 uline.com



CARE INSTRUCTIONS

INITIAL USE

1. After removing from box, mat should lay flat in a warm, dry environment for 24 hours to allow it to relax and uncurl before placing into service.

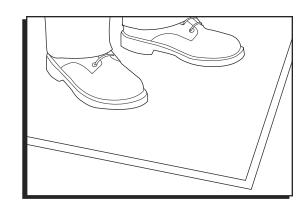

NOTE: If mat does not lay flat after 24 hours, roll the mat with the rubber backing side out. Store in a warm, dry environment for 24 hours before placing into service.

2. Shedding or fuzzing is not a carpet defect, but rather common to new fabrics. This will disappear after a few vacuumings.

VACUUMING

To extend a mat's usefulness and appearance, regular vacuuming is required. A commercial upright vacuum with beater brush is recommended.

SHAMPOOING/EXTRACTION CLEANING

Shampooing or extraction cleaning is required when vacuuming fails to restore color of carpet due to excessive embedded soil.

Use any neutral synthetic detergent with tepid water (1/2 cup detergent per 1 gallon of water).



CAUTION! Avoid temperatures exceeding 120°F.



WARNING! Do not use solvents, pH detergents or alkalis directly on the mat.

- Hand brush or extraction clean.
- Rinse with cold water.
- Place on an incline position to drain and dry completely.



WARNING! Do not use rotary scrubbers or other mechanical cleaners or scrubbers to clean.

PROPER STORING

- Roll mat in compact roll with carpet facing out.
- Lay flat. Do not stand on end, as this will cause the edges to curl.

COMMERCIAL LAUNDERING

Carpet mats that are backed with nitrile rubber can be commercially laundered. Proper laundering will prolong the life of the mat by preventing the buildup of soil and soap residue.

- 1. Flush 2-3 minutes at medium water level at 120°F.
- 2. Break 2-3 minutes at high water level at 120°F.



NOTE: Break should not exceed pH of 9.5; use low pH non-ionic detergents.

- 3. Rinse two minutes at cold high water level.
- Repeat step three.
- 5. Extract (low speed) for 1-2 minutes.
- 6. Shake out (rotate wheel at wash speed with drain open) for one minute.
- 7. Extract (low speed) for 3-5 minutes.
- 8. Dry 5-10 minutes at 180°F basket temperature.
- 9. Cool down for five minutes.
- 10. Lay mats flat following removal from washer or dryer. Allow to cool before rolling.