


ULINE H-4606


RUBBERMAID®

HIGH-SECURITY CART


1-800-295-5510
uline.com

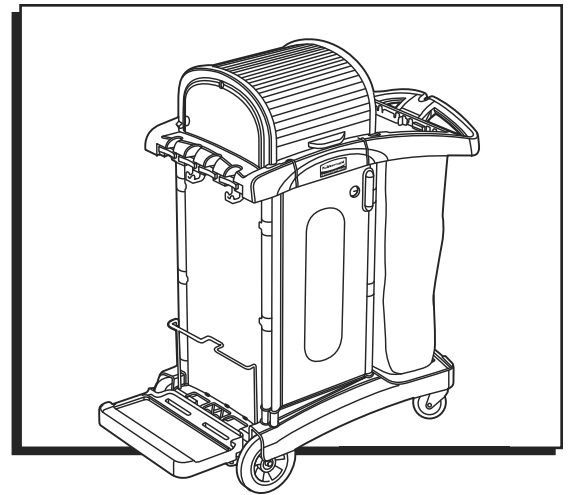

TOOLS NEEDED

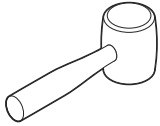


Rubber Mallet




Phillips Screwdriver


PARTS

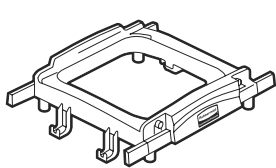


Open Top Shelf x 1

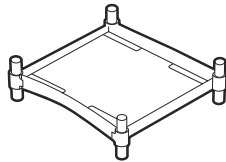


Shelf x 2

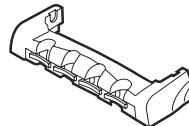

Tool Grip x 1

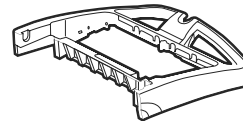

Handle x 1

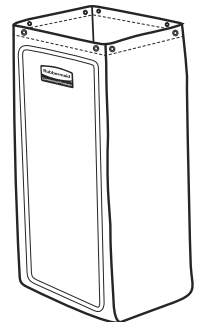

Bag x 1




Long
Aluminum
Upright x 8



Short
Aluminum
Upright x 4




Shelf
Support
x 8




Screw
x 4




Base
Support
x 2

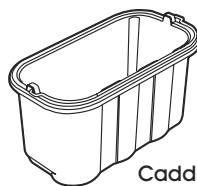

Caddy x 2

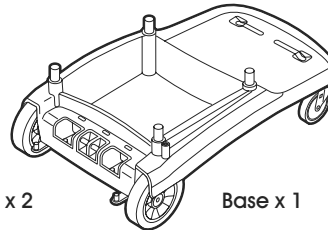


Base x 1




Side Panel x 2



Door Panel x 2

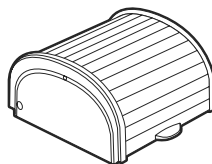

Locking Security
Hood x 1

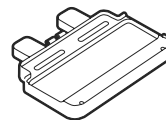

Mop Bucket
Platform x 1



Wire Bar x 2



Hex Head
Screw with Lock
Washer x 4



Lock Cam x 4




Nut x 4



Ball Plunger
Lock Body x 4




Key x 4




Bolt x 4


ASSEMBLY

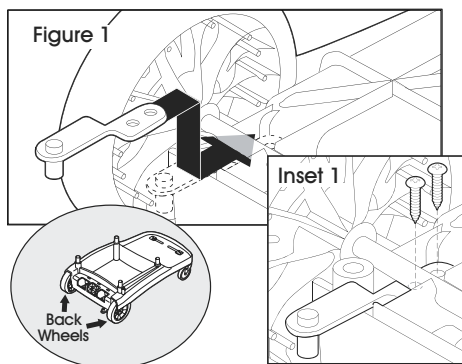


1. Turn base upside down so wheels face up. Slide base supports into opening by each back wheel.
(See Figure 1) Insert screws into holes. (See Inset 1)

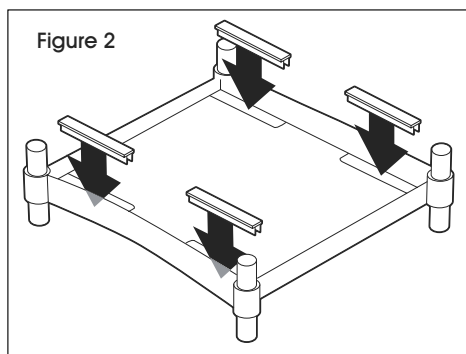

2. Slide shelf supports into openings on each shelf.
(See Figure 2)

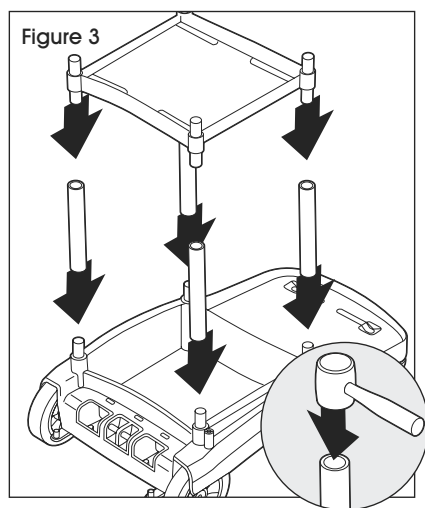


3. Place four long aluminum uprights onto pegs on base. Use rubber mallet to secure in place. (See Figure 3)
4. Place first shelf onto long aluminum uprights.
(See Figure 3)

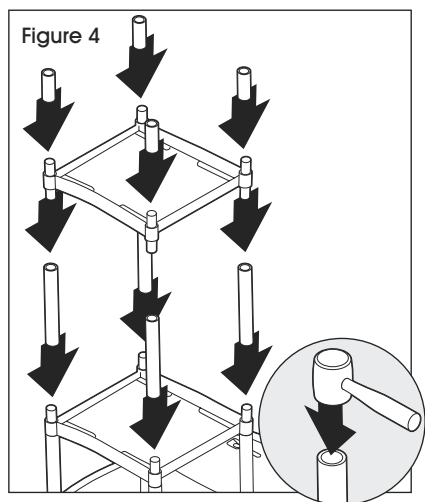


5. Place four long aluminum uprights onto pegs of first shelf. Use rubber mallet to secure in place. (See Figure 4)
6. Place second shelf onto long aluminum uprights.
(See Figure 4)
7. Place four short aluminum uprights onto pegs of second shelf. Use rubber mallet to secure in place. (See Figure 4)


ASSEMBLY CONTINUED

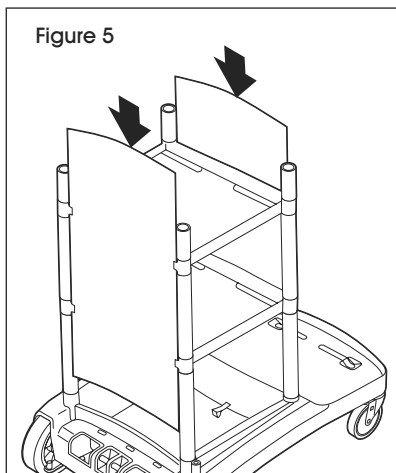


8. Slide two side panels into sides of cart as shown.
(See Figure 5)

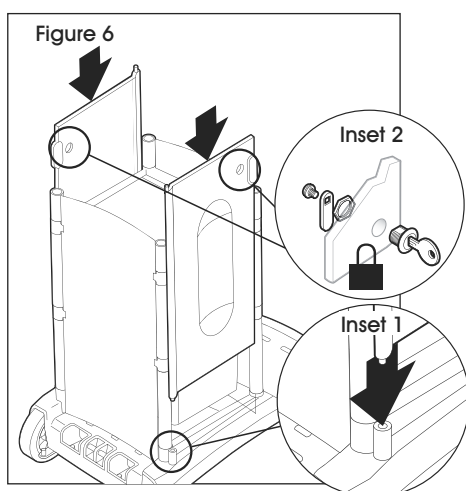

9. Slide door panels down two other sides of cart, ensuring that bottom aligns into holes correctly. (See Inset 1)
(See Figure 6)
10. Assemble lock mechanisms into door panels as shown.
(See Inset 2) (See Figure 6)

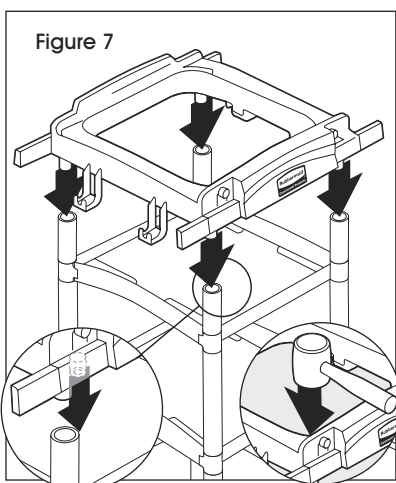


11. Place open top shelf onto short aluminum uprights.
Use rubber mallet to secure in place. (See Figure 7)

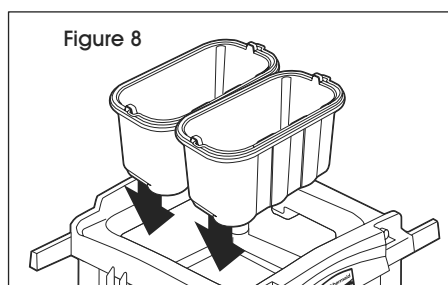

12. Place caddies into opening of open top shelf.
(See Figure 8)


ASSEMBLY CONTINUED

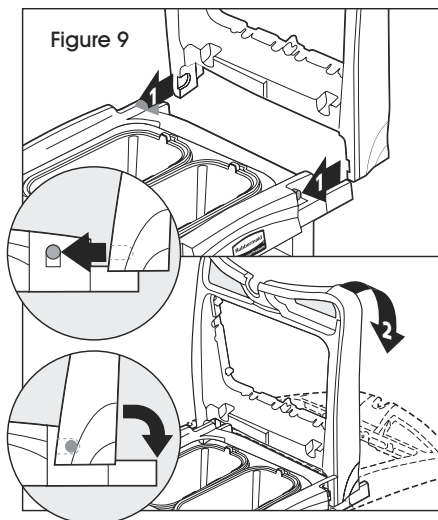


13. Slide handle onto open top shelf and rotate down to lock into position. (See Figure 9)



NOTE: Handle should be placed on same end as back wheels.

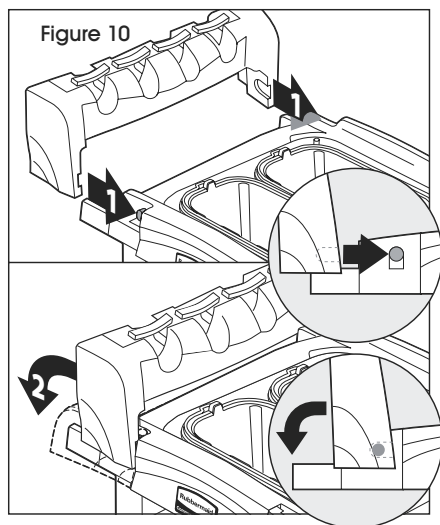


14. Slide tool grip into opposite side of handle and rotate down to lock into position. (See Figure 10)

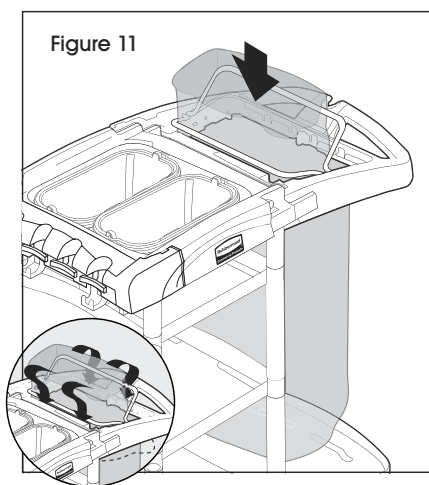

15. Place janitor bag through opening on handle. (See Figure 11)


ASSEMBLY CONTINUED

Figure 12

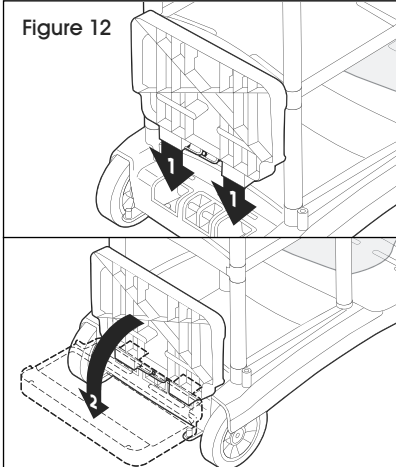


16. Snap mop bucket platform down into place and then lower platform into position. (See Figure 12)

Figure 13

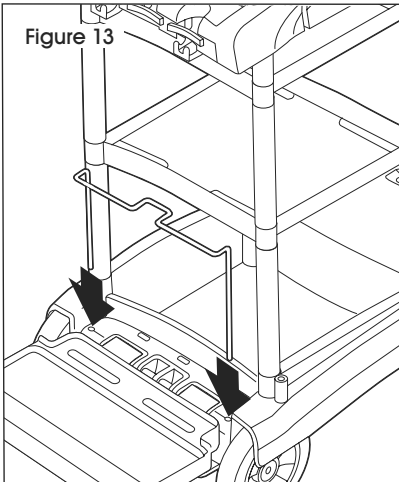

17. Push wire bar into place in mop caddy area of cart. (See Figure 13)

Figure 14

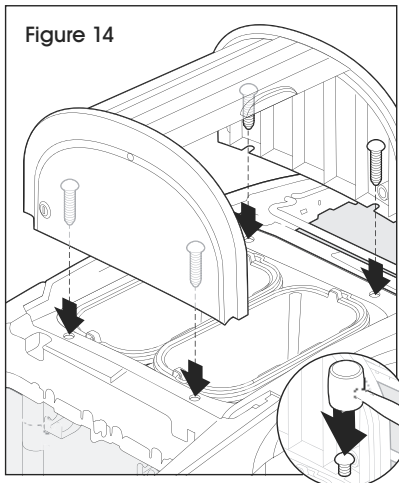

18. Place locking security hood on top of open shelf. Then insert bolts into four locations inside lid as shown. Use rubber mallet to set in place. (See Figure 14)