


ULINE H-5113

STAINLESS STEEL JUMBO BATH TISSUE DISPENSER – SINGLE ROLL

1-800-295-5510
uline.com

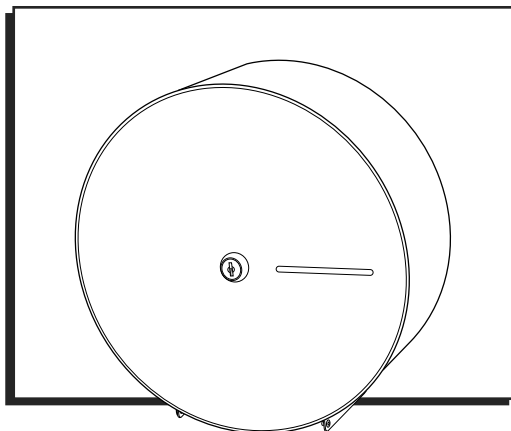


TOOLS NEEDED



Drill




Drill Bit



Phillips Screwdriver




Level




Tape Measure

PARTS

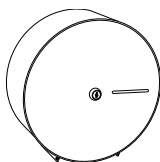


Dispenser x 1



Key x 1



Wall Anchor x 3



Screw x 3

MOUNTING INSTRUCTIONS




NOTE: Recommended mounting height is 19" from the floor to bottom of dispenser.



NOTE: Ensure that proper mounting hardware is used for appropriate wall composition as enclosed hardware may not be compatible with wall surface.


1. Insert key into lock opening on front of dispenser and turn to open cover. (See Figure 1)

Figure 1

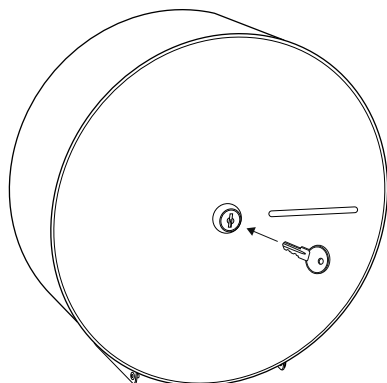

2. Open dispenser cover and hold dispenser to ideal mounting place on wall. (See Figure 2)

Figure 2

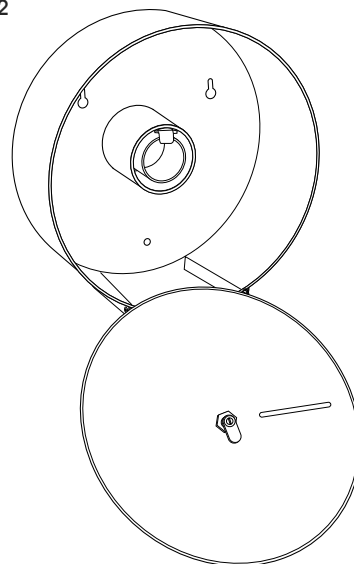


MOUNTING INSTRUCTIONS CONTINUED


3. Mark three holes on wall where screws will be inserted. (See Figure 3)



NOTE: Place marks for top two holes at top of the narrow slot of holes.

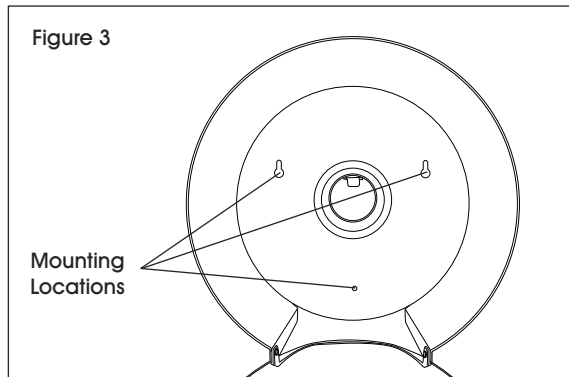


4. Drill into wall at three marked locations with appropriate size drill bit. (See Figure 4) Insert wall anchors if necessary.

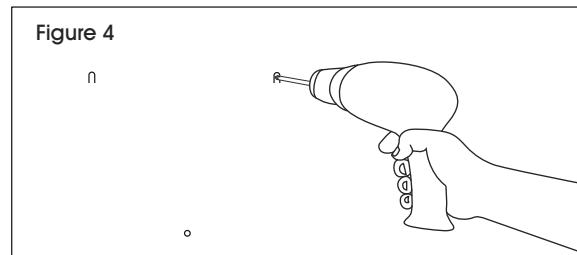


5. Hold dispenser over previously drilled holes and insert top two screws, but do not tighten completely. Drop dispenser down so screws slide up into narrow slots and tighten screws completely. Insert bottom screw.

LOADING INSTRUCTIONS

1. Insert key into lock opening on front of dispenser and turn to open cover. (See Figure 5)

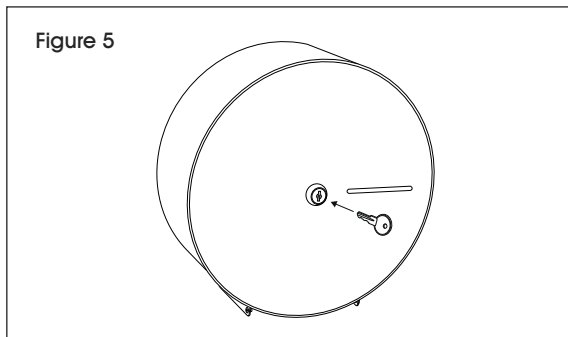

2. Insert a roll of jumbo bath tissue onto the arm. (See Figure 6)

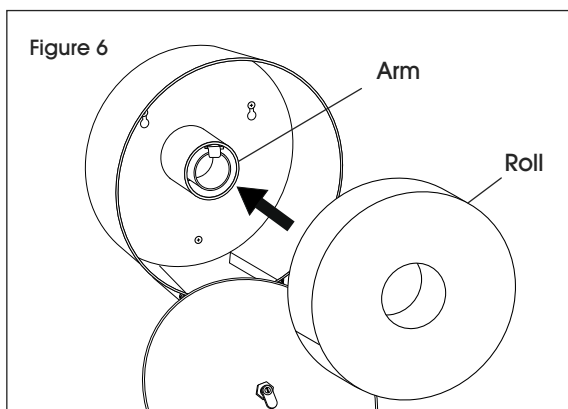

3. Close lid and begin dispensing. (See Figure 7)

