



## TOOL NEEDED



Flathead Screwdriver  
(not included)

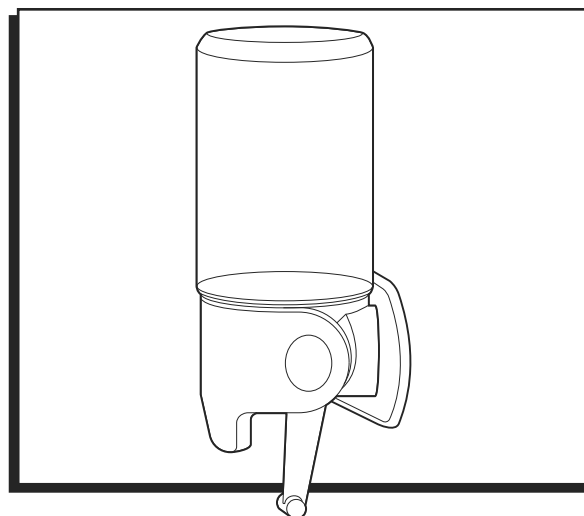

## INSTALLATION


### FASTENER MOUNTING




**NOTE:** Hardware is not included.



**NOTE:** Use a flathead screwdriver to separate wall plate from front plate. (See Figure 1)

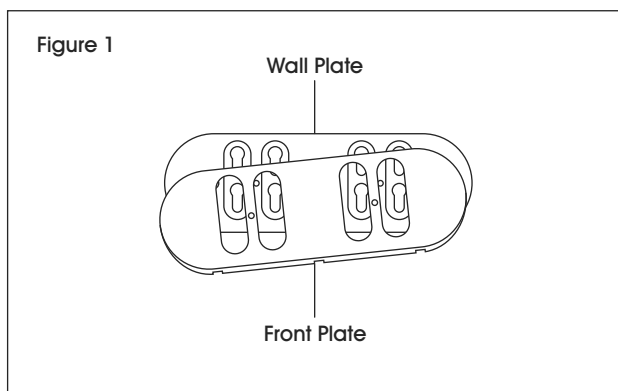


1. Use two screw holes on wall plate as a guide to mark the wall at desired location. (See Figure 2)

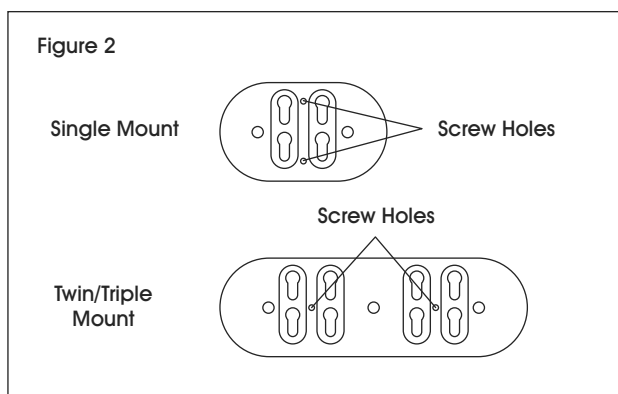


2. Screw the back plate to the wall using previously marked screw holes.

3. Snap the front plate onto wall plate. (See Figure 3)

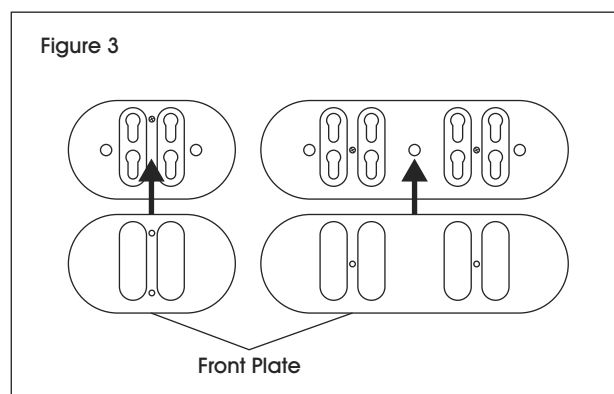

4. Snap the accessory clips into the dispenser. (See Figure 4)
5. Insert hooks into wall plate. Push dispenser down until it locks into place. (See Figure 4)

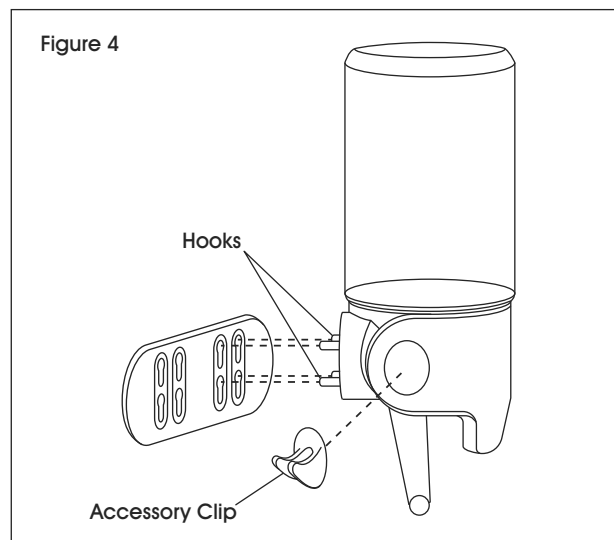


## INSTALLATION CONTINUED

### TAPE MOUNTING



**IMPORTANT!** Thoroughly scrub and clean intended mounting surface with any household bathroom cleaner. Wipe with provided alcohol pad. Allow surface to dry fully or adhesive will not set properly.

1. Peel tape backing from wall plate. (See Figure 5)

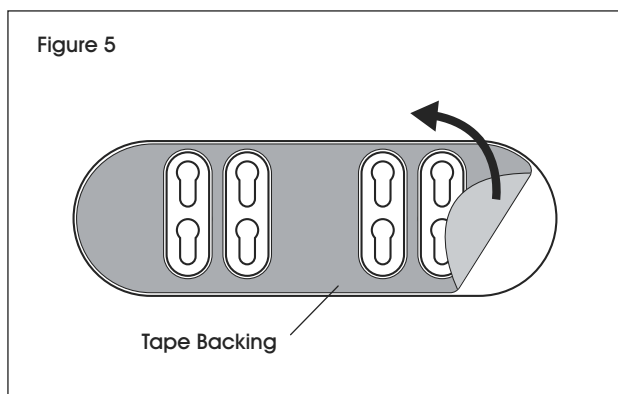

2. Press wall plate firmly at desired location on wall for at least 30 seconds to secure the adhesive.



**NOTE:** Wait a minimum of two hours before mounting dispensers. For best results, wait 24 hours.

3. Snap the accessory clips into the dispenser. (See Figure 4)
4. Insert hooks into wall plate. Push dispenser down until it locks into place. (See Figure 4)

## MAINTENANCE

### CLEANING

1. Remove pump from wall and clean with warm, soapy water.
2. To clean without removing from wall, fill with water and pump until water is gone.



**NOTE:** Soaps with exfoliants or moisture beads may clog the pumps.



**NOTE:** Do not use abrasive or chemical cleaners. Do not put the pumps in the dishwasher.

**ULINE**

1-800-295-5510  
uline.com