

## **ULINE** H-7866, H-7867 GARAGE TOOL HOLDER

# 1-800-295-5510 uline.com


#### **TOOLS NEEDED**

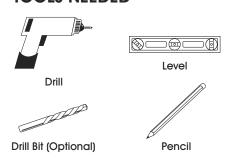

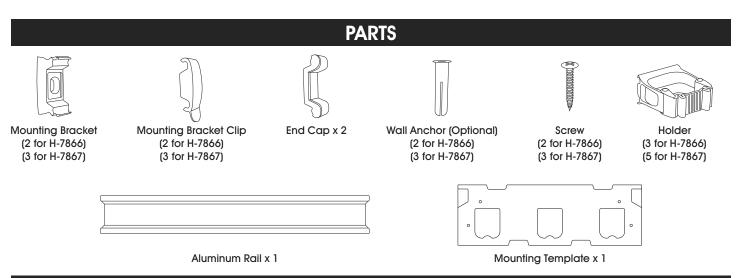

#### **ASSEMBLY**

 Locate studs and align the mounting template.
Balance with the level and mark the holes using the template. (See Figure 1)

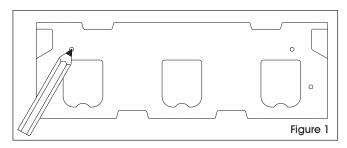



NOTE: Holes in the mounting template have 16" spacing to accommodate U.S. stud configuration.




NOTE: If not planning to drill into a stud, pre-drill holes in wall using a drill bit that is slightly smaller than wall anchor. Insert wall anchor into hole.


2. Screw each mounting bracket into the wall. (See Figure 2)



NOTE: Do not overtighten.

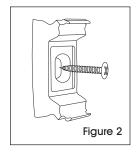

3. Install the end caps on the aluminum rail by snapping them firmly into each end. (See Figure 3)

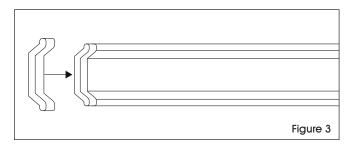


PAGE 1 OF 2 0220 IH-7866


### **ASSEMBLY CONTINUED**

4. Insert the aluminum rail into mounting brackets. Secure the rail by installing the mounting bracket clips. (See Figures 4-5)



NOTE: When mounting the bracket clips, secure the top first and then press down on the bottom until it clicks.

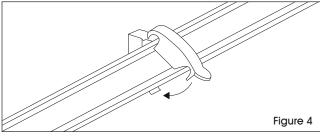

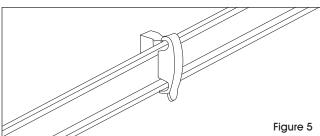

5. Attach holders to rail by securing the top and then pressing down on the bottom until it clicks. (See Figures 6-7)



NOTE: To remove and reposition holders, lift the tab at the bottom first.

