



**TOOLS NEEDED**




Phillips  
Screwdriver



10 mm Socket Wrench  
11 mm Socket Wrench  
19 mm Socket Wrench

**PARTS**

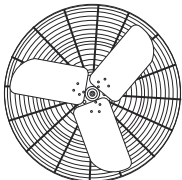


Fan Head x 1



Top  
Pedestal x 1



Bottom  
Pedestal x 1



19 mm Bolt x 1



11 mm Bolt x 1



10 mm Bolt x 5




19 mm Nut x 1



11 mm Nut x 1



11 mm Washer x 1

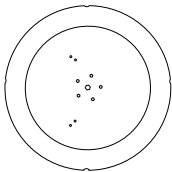

Base x 1



Zip Tie x 2



19 mm Lock  
Washer x 1




11 mm Lock  
Washer x 1



6-32 x 1/4" Screw x 2


**ASSEMBLY**

1. Remove two 6-32 x 1/4" screws fastened to the collar on the top pedestal. Insert top pedestal into opening of bottom pedestal and align screw holes. Re-insert screws using a Phillips screwdriver to secure the top pedestal to the bottom pedestal. (See Figure 1)

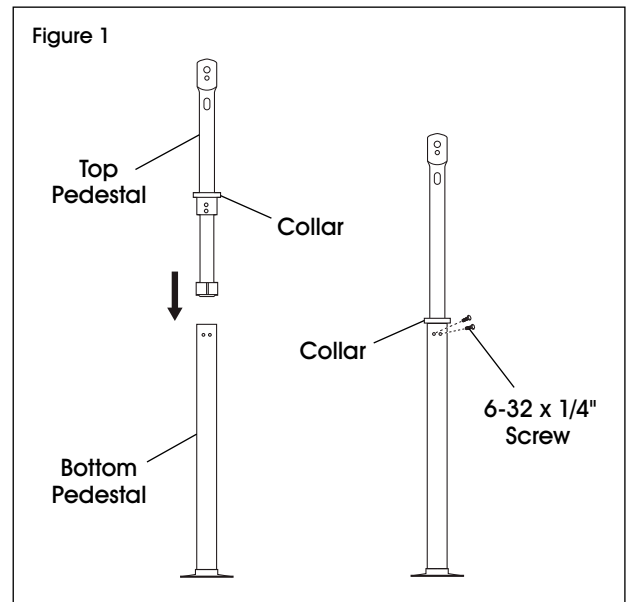


## ASSEMBLY CONTINUED

2. Remove five 10 mm bolts fastened to the base using a 10 mm socket wrench. Use same bolts to secure the assembled pedestal to the base. Tighten with 10 mm socket wrench. (See Figure 2)

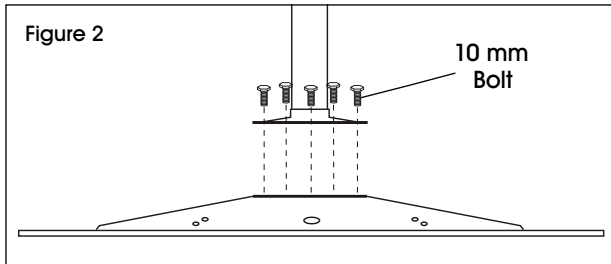


3. Align fan head with mounting holes on assembled pedestal. Use 19 mm bolt, lock washer and nut to secure through top hole. Use 11 mm bolt, washer lock washer and nut to secure through bottom crescent slot. Tighten with 19 mm and 11 mm socket wrenches. (See Figure 3)
4. Secure power cord from the motor to the bottom of the pedestal using two zip ties. (See Figure 3)

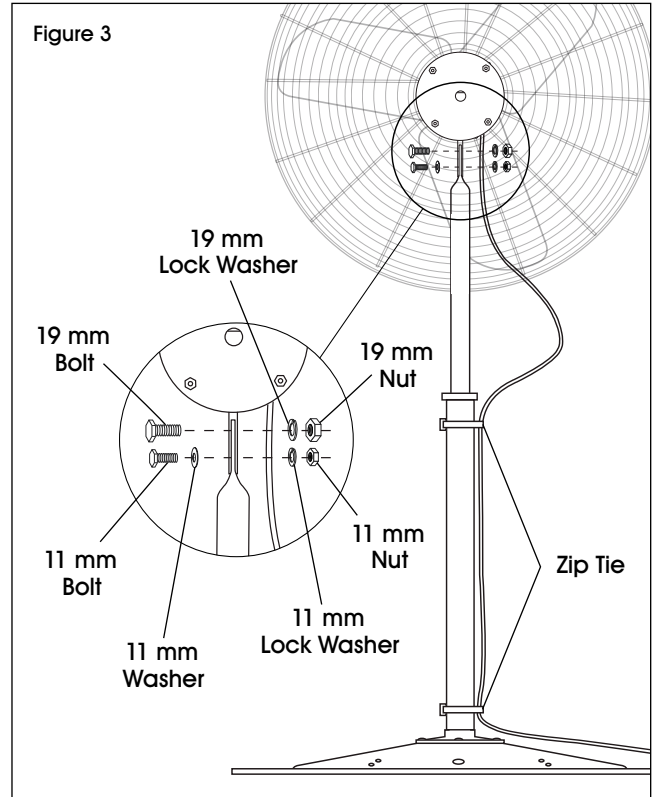

## OPERATION

### OSCILLATING (FOR H-1407, H-1408)

Push up lever to stop fan from oscillating and pull down to start again. (See Figure 4)

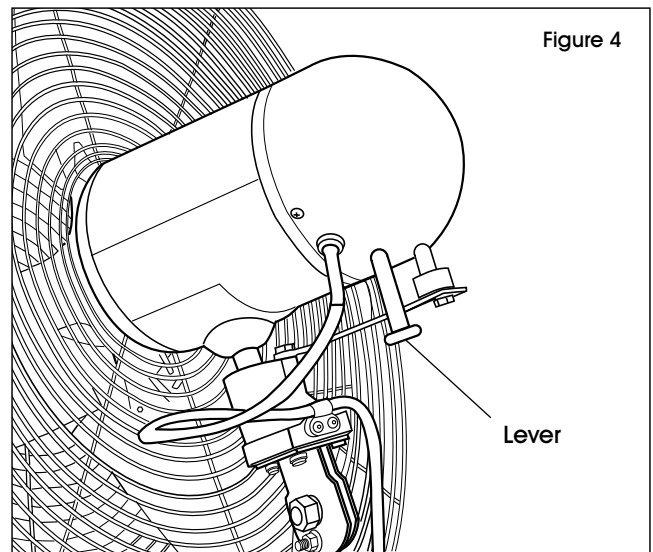

**ULINE**

1-800-295-5510  
uline.com