


ULINE S-20211
14 x 11 x 7"
AIR BAG SHIPPER

1-800-295-5510
uline.com


COMPONENTS

1 Corrugated Carton
1 - 2 Mil Anti-Static Poly Bag
1 - 5.5" 40# Cable Tie
3/16" Anti-Static Bubble (Uline Model # S-396*)
2" Wide (2.6 Mil) Polypropylene Tape (Uline Model # S-14564*)
*Sold Separately

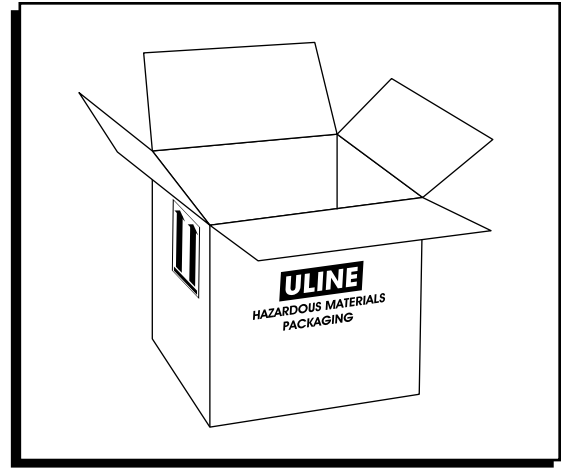


ASSEMBLY INSTRUCTIONS

Figure 1

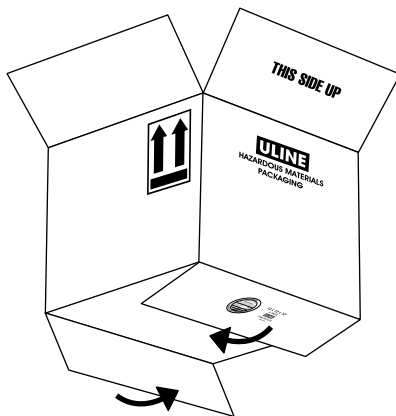

1. Fold flaps on bottom of carton so that they meet. Manufacturer's certification must be visible on the outside of the carton. (See Figure 1)

Figure 2

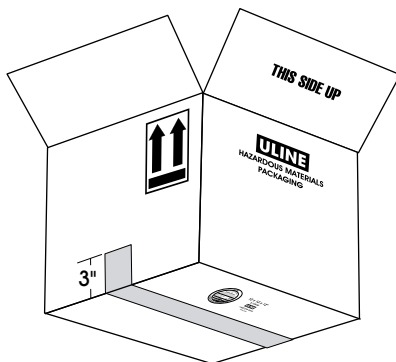

2. Seal bottom of carton down the center seam with one strip of 2" wide (2.6 mil) polypropylene tape (Uline Model # S-14564). The tape must extend 3" over each end of the carton. (See Figure 2)


Figure 3



3. Place the air bag inside of the included 2 mil anti-static poly bag. Poly bag must be sealed with the included 5.5" 40# cable tie. (See Figure 3)


ASSEMBLY INSTRUCTIONS CONTINUED

Figure 4

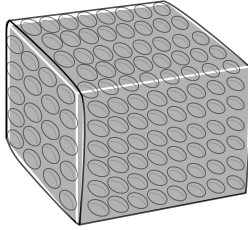


4. Wrap the air bag completely in 3/16" anti-static bubble (Uline Model # S-396). (See Figure 4)

Figure 5

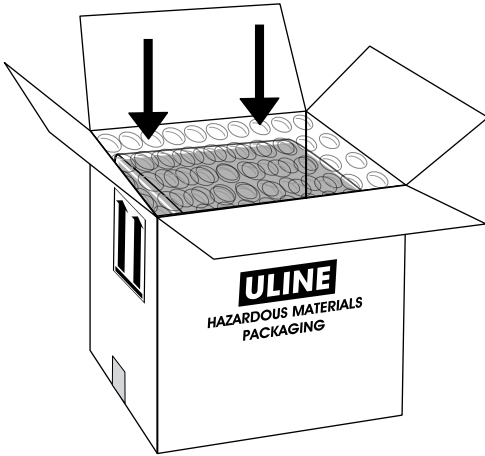

5. Place the bubble wrapped air bag into the center of the box. Fill any void space with 3/16" anti-static bubble (Uline Model # S-396). (See Figure 5)

Figure 6

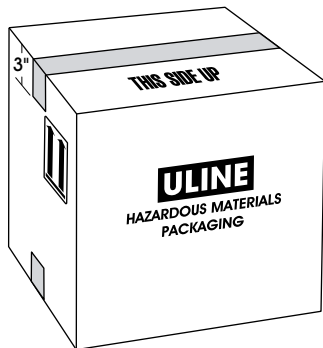

6. Fold flaps on top of carton so that they meet. "THIS SIDE UP" must be visible on the outside of the carton.
7. Seal top of carton down the center seam with one strip of 2" wide (2.6 mil) polypropylene tape (Uline Model # S-14564). The tape must extend 3" over each end of the carton. (See Figure 6)