

ULINE S-20670 CLEAR VINYL BOX

1-800-295-5510 uline.com

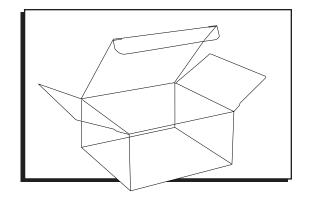

ASSEMBLY

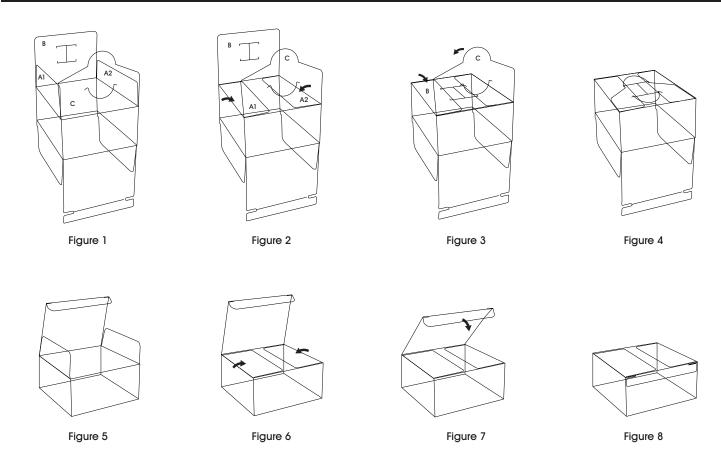

1. Open and crease edges to create box.

TO CLOSE BOTTOM

- 1. Crease edges. (See Figure 1)
- 2. Fold down flaps A1 and A2. (See Figure 2)
- 3. Fold down flap B. (See Figure 3)
- 4. Fold down flap C over all other flaps and insert half circles into slots on flap B to close. (See Figures 3-4)

TO CLOSE TOP

- 1. Flip box over and crease edges. (See Figure 5)
- 2. Fold down side flaps. (See Figure 6)
- 3. Tuck top closed. (See Figures 7-8)