

INSTRUCTIONS


HOW TO MEASURE

Measure the diameter of the **widest part** (including flanges, curves or flares) of the container to be covered.


HOW TO USE

1. Slip band over cap.
2. Apply heat evenly with H-915 or H-491 heat gun.
3. Band will shrink to fit in a few seconds.

 **NOTE: To be tamper evident, shrink bands must grip BOTH the bottle cap and the bottle neck.**

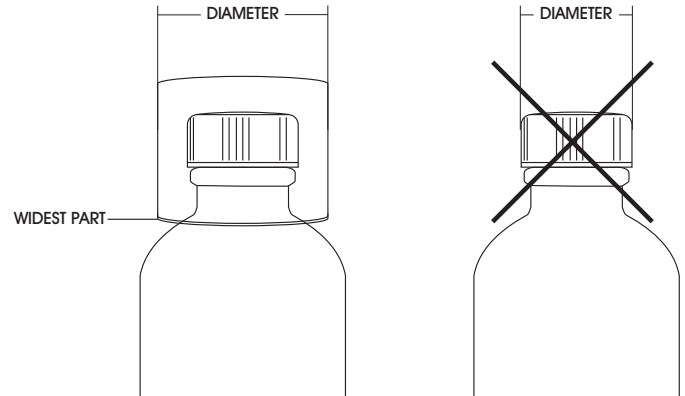

TROUBLESHOOTING

OPERATING ISSUE	RECOMMENDATIONS
Bands are burning or shrinking unevenly.	Apply heat equally around the entire circumference of the shrink band. Start and finish at the perforation.  NOTE: Do not keep the heat too long on one spot.