


ULINE H-1585
TOUCH FREE FOAM
SOAP DISPENSER

1-800-295-5510
 uline.com

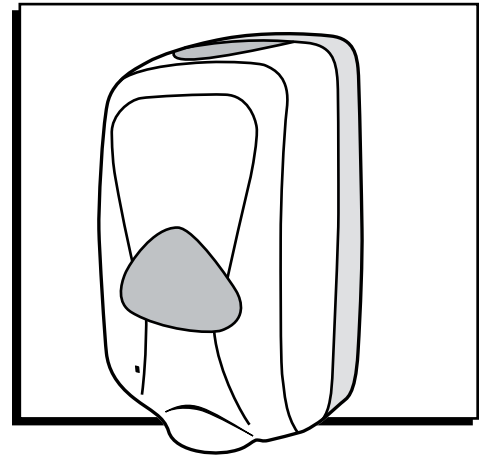


INSTALLATION


Do not install in locations where dispenser may be exposed to wet environments, such as showers or areas where walls are washed down.

TAPE INSTALLATION


Use only on smooth, dry surfaces

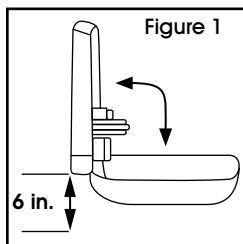


1. Install dispenser at least 6" above counter top. (See Figure 1)
2. Clean installation surface with supplied prep pad. Allow surface to dry for 60 seconds.

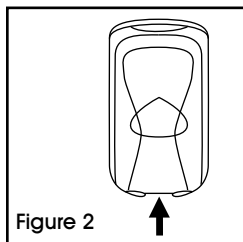

3. Open dispenser by pushing release on bottom of dispenser. (See Figure 2)

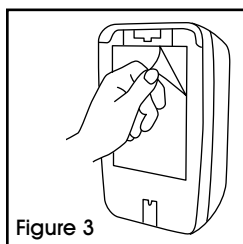


4. Peel paper off of installation tape located on back of dispenser. (See Figure 3)

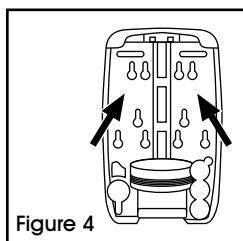


5. Press dispenser firmly onto mounting surface by applying pressure to the inside of backplate for 15 seconds. Do not load refill for at least 24 hours. (See Figure 4)

FASTENER INSTALLATION


Use on rough or smooth surfaces

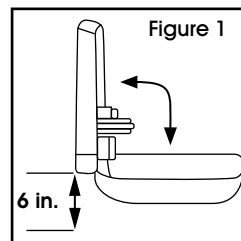


1. Install dispenser at least 6" above counter top. (See Figure 1)

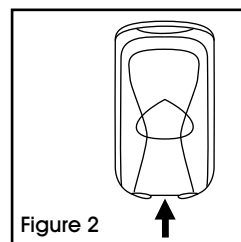

2. Open dispenser by pushing release on bottom of dispenser. (See Figure 2)

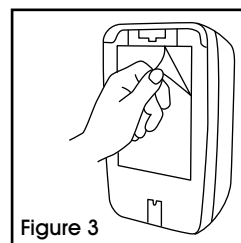

3. Using backplate as template, mark and drill 4 center holes using 1/4" spiral masonry drill or 1/4" wood drill. If required, pierce installation tape at installation holes. Make sure tape backing remains in place.

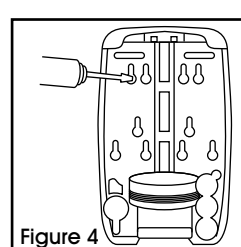

4. Install #10 x 1" anchors into the 4 drilled holes. Insert Type A #10 x 1" screws into installation holes in backplate and through installation tape.

5. Peel paper off of installation tape, line up screws with anchors, and press firmly into position. (See Figure 3)

6. Tighten screws securely, being careful not to overtighten. (See Figure 4)

BATTERY INSTALLATION

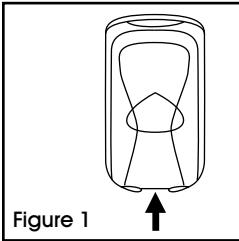


Figure 1

1. Open dispenser by pushing release on bottom of dispenser. (See Figure 1)

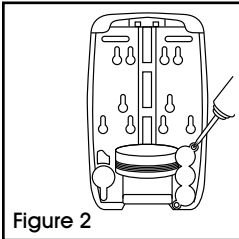


Figure 2

2. Remove two screws securing battery box cover using Phillips screwdriver. (See Figure 2)

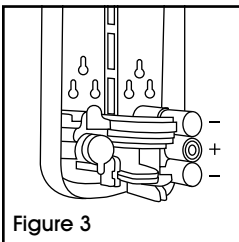


Figure 3

3. Use 3 high-quality C-cell alkaline batteries. Do not mix old and new batteries. (See Figure 3)

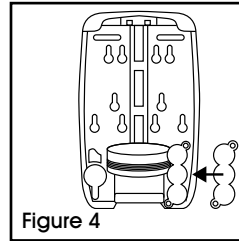


Figure 4

4. Replace battery box cover, being careful not to over-tighten screws. (See Figure 4)

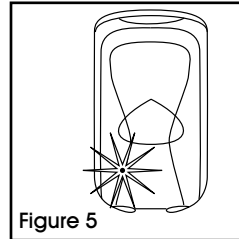


Figure 5

5. Close dispenser cover. Status light will blink green after closing, indicating that batteries are correctly installed and dispenser is ready to accept refills. (See Figure 5)

LOADING REFILL INTO DISPENSER

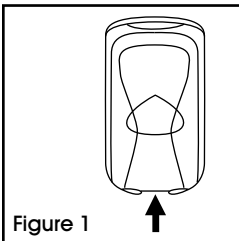


Figure 1

1. Open dispenser by pushing release on bottom of dispenser. (See Figure 1)

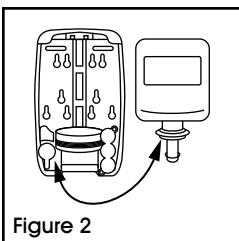


Figure 2

2. Check that the color of refill collar key matches color key located immediately below status light. (See Figure 2)

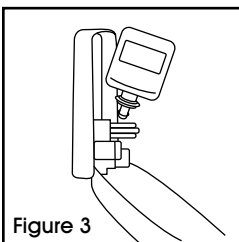


Figure 3

3. Insert refill at slight angle into dispenser so nozzle is inside lock release. (See Figure 3)

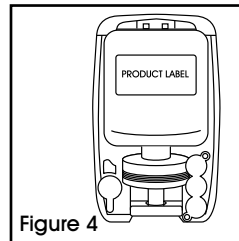


Figure 4

4. Fully insert refill down into lock release until refill clicks into place. Close dispenser. Prime refill pump by placing hands below dispenser until product is dispensed. (See Figure 4) (See Dispenser Use)


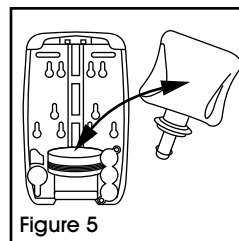


Figure 5

5. To remove refill, press lock release and lift refill up and out of dispenser. (See Figure 5)

DISPENSER USE AND CLEANING

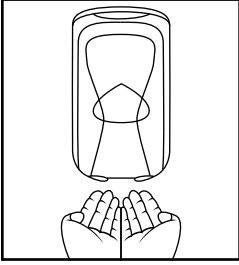

1. Place palms approximately 2" below dispenser.
2. Product will be dispensed within 1 second of sensor activation.
3. To receive additional product, remove hands from below dispenser and repeat Step 1.

TO CLEAN

Clean exterior surfaces of the dispenser using warm water and mild soap.

Do not use abrasive cleaners.

Dry with a soft cloth.

TROUBLESHOOTING

OPERATING ISSUE	RECOMMENDATIONS
No Dispense, Motor Does Not Run	Hands are not directly beneath sensor No refill is loaded Incorrect refill is loaded Batteries are not loaded, or are loaded incorrectly
No Dispense, Motor Runs	Refill is empty or is loaded improperly Refill pump is not primed