


1-800-295-5510 uline.com



TOOLS NEEDED

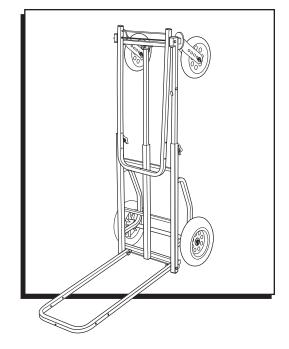


3/4" Wrench

Channel Lock Pliers

ASSEMBLY

INSTALLING REAR WHEELS

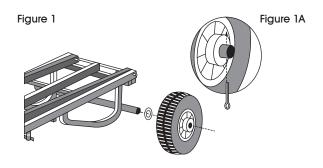



NOTE: It is recommended that axles be lubricated with light grease before installing.

- 1. Slide a flat washer over the end of the axle. Gently slide a wheel over the end of the axle. (See Figure 1)
- Insert a cotter pin through the holes in the end of the axle. (See Figure 1A) Bend the cotter pin ends outward.
- 3. Repeat steps 1 and 2 for the other wheel.

INSTALLING FRONT SWIVEL CASTERS



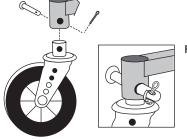


Figure 2A

- Carefully insert caster stem into receptor tube and line up caster stem holes with the receptor tube holes. Stem should fit very snugly inside receptor tube. (See Figure 2)
- With caster stem snugly in receptor tube, insert a large pin through the holes. Then insert a cotter pin through the hole in the large pin and bend the ends outward. (See Figure 2A)
- 3. Repeat steps 1 and 2 for the other caster.

PAGE 1 OF 2 0416 IH-3382

CONFIGURATIONS

1. SHORT FURNITURE DOLLY

Place cart on all four wheels with sides folded down as shown.

FOLD SIDES IN THIS ORDER:
Push down release cable
over large wheels with one hand
and fold down side with the other hand.

Fold side over front swivel casters in the same manner. Cart will not fold down correctly unless done in this order.

2. SHORT PLATFORM CART

From Short Furniture Dolly:

Firmly push down on release cable located over swivel casters with one hand while raising the foldable side with the other hand until side locks into place in upright position.

3. SHORT HI-STACKER

From Short Platform Cart:

Raise both sides as previously described in configuration 2.



4. LONG HI-STACKER

From Short Hi-Stacker:

Loosen two wing bolts under frame 1/4 turn and push in the extension stop button.

Extend frame until stop button engages.

Tighten wing bolts.



5. LONG NOSE LUGGAGE CART

From Long Hi-Stacker:

Set on end with large wheels down as shown. Pull top release cable and lower top foldable side.




6. LONG PLATFORM CART WITH SIDE

From Long Nose Luggage Cart:

Set cart back on all four wheels.

Firmly push down on release cable located over swivel casters with one hand while raising the foldable side with the other hand until side locks into place in upright position.

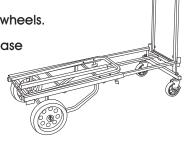


Pull release cable located over large wheels and lower foldable side.

7. LONG PLATFORM CART

From Long Platform Cart With Side:

Pull release cable located over swivel casters and lower foldable side.



8. STORAGE-TRANSPORT

From Long Platform Cart:

Unfold both sides so they are upright.


Set on end with large wheels down.

Loosen two wing bolts under frame 1/4 turn, push in the extension stop button, and collapse frame. Tighten wing bolts.

Place cart on all four wheels.

Fold down sides following the order in configuration 1.

Stand cart on end for storage.



UINE CHICAGO • ATLANTA • DALLAS • LOS ANGELES • MINNEAPOLIS • NYC/PHILA • SEATTLE • MEXICO • CANADA